
SERVICE MANUAL

AE-2 CHASSIS

MODEL

KV-E3431B/2 RM-831 French SCC-F32D-A



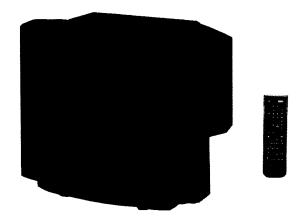

TRINITRON®COLOR TV SONY

SPECIFICATIONS

Television system B/G/H, D/K

Color system

PAL, SECAM, NTSC4.43, NTSC3.58

(VIDEO IN)

Stereo system

GERMAN stereo

Channel coverge

B/G/H VHF:E2-E12 UHF:E21-E69

CABLE TV (1):S1-S41

D/K VHF:R1-R12 UHF:R21-R60

Picture tube

Hi-Black Trinitron tube Approx. 86cm (34 inches)

(Approx. 80cm picture measured diagonally)

110 ° -degree deflection

[REAR]

-Ö 1 21-pin Euro connector

(CENELEC standard)

- inputs for audio and video signals

- inputs for RGB

- outputs of TV video and audio signals G+ 2/-® 2 21-pin Euro connector

- inputs for audio and video signals

- inputs for S video

- outputs for audio and video signals

(selectable)

G+ 4/- 21-pin Euro connector

- inputs for audio and video signals

- inputs for S video

- outputs for audio and video signals

(monitor out)

-9 2/-9 4 S video inputs

- 4-pin DIN

◆ Audio inputs (L, R) phono jacks S video output - 4-pin DIN • Audio outputs - phono jacks

• Audio outputs (variable) - phono jacks

External speaker terminals: 2-pin DIN

[FRONT]

→ 3 Video input-phono jack

◆ Audio inputs-phono jacks

- 3 S video input 4-pin DIN

∩ Headphone jacks : Stereo minijack

Sound output

2×15 (RMS)

2×35 (Music)

Power consumption

150 Wh

Power regirement **Dimensions**

220-240V Approx.813 x 648 x596 mm

Weight

Approx.79kg

Supplied accessories

RM-831 Remote Commander (1)

IEC designation R6 batteries (2)

Other features

NICAM, FASTTEXT

[RM-831]

Remote control system Power requirements

infrared control

3V dc

2 batteries IEC designation

R6 (size AA)

Dimentions Weight

Approx. $65 \times 222 \times 21$ mm (w/h/d)


Approx. 157g


(Not including Batteries)

Design and specifications are subject to change without notice.

Pal Comb	ON
PiP	ON
RGB Priority	OFF
Woofer Box	ON
Scart 1	OŅ
Scart 2	ON
Front in (3)	ON
Scart 4	ON
Dyn. Convergence	ON
Projector	OFF
AKB in 16:9 mode	ON
Norm B/G	ON
Norm 1	ON
Norm D/K	ON
Norm AUS	OFF
Norm L	ON
Norm SAT	OFF
Norm M	OFF
Language Preset	Francais

21 pin connector (-61, ○-2/○-4)

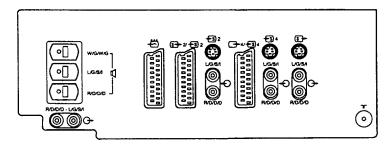

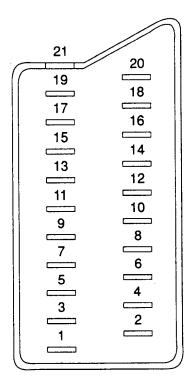

Pin No	1	2	4	Signal	Signal level
1	0	0	0	Audio output 8 (right)	Standard level: 0.5Vrms Output impedance:less than 1kohm*
2	0	0	0	Audio input B (right)	Standard level:0.5Vrms Input impedance:More than 10kohms*
3	0	0	0	Audio output A (left)	Standard level:0.5Vrms Output impedance:less than 1kohm*
4	0	0	0	Ground (audio)	
5	0	0	0	Ground (blue)	
6	0	0	0	Audio input A (left)	Standard level:0.5Vrms Input impedance:More than 10kohms*
7	0	•	•	Blue input	0.7V±3dB, 75ohms, positive
8	0	0	0	Function select (AV control)	High state (9.5—12V):Part mode Low state (0—2V):TV mode Input impedance:More than 10kohms Input capacitance:Less than 2nF
9	0	0	0	Ground (green)	
10	0	0	0	Open	
11	0	•	•	Green	Green signal:0.7V±3dB. 75ohms, positive
12	0	0	0	Open	
13	0	0	0	Ground(red)	
14	0	0	0	Ground (blanking)	
15	0	_	_	Red input	0.7V±3dB, 75ohms, positive
	_	0	0	(S signal) croma input	0.3V±3dB, 75ohms, positive
16	0	•	•	Blanking input (Ys signal)	High state (1—3V) Low state (0—0.4V) Input impedance:75ohms
17	0	0	0	Ground (video autput)	
18	0	0	0	Ground (video input)	
19	0	0	0	Video output	1V±3dB, 75ohms, positive Sync:0.3V(–3, +10dB)
20	0	_	_	Video input	1V±3dB, 75ohms, positive Sync:0.3V(-3, +10dB)
	_	0	0	Video Input/Y (S signal)	1V±3dB, 75ohms, positive Sync:0.3V(-3, +10dB)
21	0	0	0	Common ground (plug, shield)

Connected

unconnected (open)

* At 20 Hz—20kHz

4 pin connector (€3)

Pin No	Signal	Signal level	
1	Ground		
2	Ground		
3	Y (S signal) input	1V±3dB 75ohm, positive Sync 0.3V -3 dB	
4	C (S signal) input	0.3V±3dB 75ohm, positive	

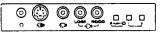


TABLE OF CONTENTS

Sec	tion	<u>Title</u>	<u>Page</u>	Sec	ction	<u>Title</u>	<u>Page</u>
1.	GENE	RAL		4.	CIRC	UIT ADJUSTMENTS	
	1-1.	Overview			4-1.	Electrical Adjustments	25
	1-2.	Tuning in to TV stations	6		4-2.	Volume Electrical Adjustments	s29
	1-3.	Additional Presetting Functions	7		4-3.	Test Mode 2:	30
	1-4.	Watching the TV ······	9		4-4.	Error Message······	31
	1-5.	Adjusting and Setting the TV Using			4-5.	Error II C Bus Diagnosis Syst	
		the Menu ·····	10			Chassis	31
	1-6.	PIP (Picture-In-Picture) Teletext	··11	5.	DIAG	RAMS	
	1-7.	Teletext·····	··11	•	5-1.	Block Diagram (1) ······	33
	18.	Connecting and Operating optional			0 1.	Block Diagram (2) ······	37
		Equipment	13		5-2.	Circuit Boards Location	41
	1-9.	For Your Information	14		5-3.	Schematic Diagrams and	
						Printed Wiring Boards	41
2.	DISAS	SSEMBLY				• H1 Board	42
	2-1.	Rear Cover Removal ·····	·· 15			• H2 Board	
	2-2.	Chassis Assy Removal ·····	···15			• F2 Board	
	2-3.	Service Position ·····	···15			• F1 Board	
	2-4.	M and V Boards Removal ·····	15			• J Board	46
	2-5.	Extension Board ······				• A Board	51
	2-6.	F Bracket Removal·····	···16			• M Board	56
	2-7.	J and K Boards Removal·····	···17			• D Board	
	2-8.	P Board Removal·····	···17			• V Board	
	2-9-1.					• K Board	67
	2-9-2.	Wire Rod·····	···18			• E1 Board	68
	2-10.	Picture Tube Removal·····	19			• P Board	
						• D1 Board	76
3.	SET-U	JP ADJUSTMENTS				VM Board ·····	78
	3-1.	Beam Landing ·····	···20			• C Board ·····	80
	3-2.	Convergence ······	··· 21			• IF Board·····	84
	3-3.	Focus ·····			5-4.	Semiconductors	87
	3-4.	White Balance ·····	···24				
				6.	EXP	LODED VIEWS	
					6-1.	Chassis ······	89
					6-2.	Picture Tube·····	90
					6-3.	Speaker ·····	91

(CAUTION)

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAPTOTHE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

WARNING!!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE TO A VOID POSSIBLE SHOCK HAZARD, BECAUSE OF LIVE CHASSIS.

THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK A ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

(ATTENTION)

7. ELECTRICAL PARTS LIST92

APRES AVOIR DECONNECTE LE CAP DE L'ANODE, COURTCIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DE L'ANODE DU CAPAU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.

ATTENTION!!

AFIND'EVITER TOUT RISQUE D'ELECTROCUTION PROVENANT D'UN CHÁSSIS SOUS TENSION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISÉ LORS DE TOUT DÉPANNAGE. LE CHÁSSIS DE CE RÉCEPTEUR EST DIRECTEMENT RACCORDÉ Á L'ALIMENTATION SECTEUR.

ATTENTION AUX COMPOSANTS RELATIFS ÁLA SÉCURITÉ!!

LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET PAR UNE MAPQUE À SUR LES SCHÉMAS DE PRINCIPE, LES VUES EXPLOSÉES ET LES LISTES DE PIECES CONT D'UNE IMPORTANCE CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT. NE LES REMPLACER QUE PAR DES COMPOSANTS SONY DONT LE NUMÉRO DE PIÉCE EST INDIQUÉ DANS LE PRÉSENT MANUEL OU DANS DES SUPPLÉMENTS PUBLIÉS PAR SONY.

SECTION 1 GENERAL

The SAT button does not operate with this TV.

•

Teletext hold button

Time display button

Fastext buttons


This section is extracted from instruction manual.

1-1. OVERVIEW

This section briefly describes the buttons and controls on the TV set and on the Remote Commander. For more information, refer to the pages given next to each description.


TV set - front



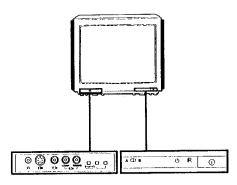

Symbol	Name	Refer to page
0	Main power switch	42
ტ	Standby indicator	42
A-CD-B	Stereo A/B indicators	44
ά	Headphones jack	50
- ⑥ 3, - Ð 3, - Ð 3,	Input jacks (S-video/video/audio)	50
P-40	Function selector (Programme/volume/input)	43
-/+	Adjustment buttons for function selector	43

Remote Commander

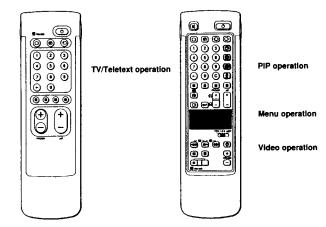

Simple side

Full-Function side

TV-operat	ion		PIP (Pict	ure-i
Symbol	Name	Refer to Page	Symbol	
< <	Mute on/off button	43	•	PIF
ტ	Standby button	42	t	PIF
0	TV power on/TV mode selector button	42	@ 9	Sw PIF
⊜	Teletext button	43		
Ð	Input mode selector	43	Menu op	erati
O	Output mode selector	51	Symbol	
1,2,3,4,5,6, 7,8,9, and 0	Number buttons	42	MENU	Me
-/	Double-digit entering button	42	△+/▽-	Sel
С	Direct channel entering button	41	OK	OK
	Volume control button	42	<u> </u>	Ba
PROGR +/-	- Programme selectors	42		
99	Teletext page access buttons	47	Video op	erati
•	Picture adjustment button	44	Symbol	
7	Sound adjustment button	44	VTR1/2/3 MDP	Vic
③	On-screen display button	43	NIDF	

47 43

47

PIP (Picture-in-pictul	re) operation

•	PIP on / off button	46
t	PIP source selector	46
Ø	Swap button	46
3	PIP position changing button	46

Refer to Page


ion


Symbol	Name	Refer to Page
MENU	Menu on / off button	36
△+/ ▽ -	Select buttons	36
OK	OK (confirming) button	36
4-	Back button	36

tion

Symbol	Name	Refer to Page
VTR1/2/3 MDP	Video equipment selector	52
44 ▶ ▶▶ ■ # • • • PROGR +/-	Video equipment operation buttons	52

1-2. TUNING IN TO TV STATIONS

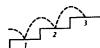

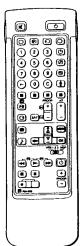

To go back to main

Keep pressing -

To go back to the normal TV picture Press MENU.

Note on the Demo

function If you choose Demo


on the main menu, you can see a sequential demonstration of the menu functions.

9

Once you have set up the TV, you can choose the language of the menu. Then you should preset the channels (up to 100 channels) by choosing either the automatic or manual method.

The automatic method is easier if you want to preset all receivable channels at once. Use the manual method if you only have a few channels and want to preset channels one by one. The manual method is also convenient for allocating programme numbers to various video input sources.

575	PROG	CH
▶8/6	6	C 2 2
Select	DQ 41	d press Or

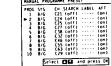

Manual Menu

Before you begin

- Check that the Full-Function side of the Remote Commander is
- Locate Menu operation buttons on the Remote Commander. They are shaded in the illustration at the left.

O Display the Menu

Depress @ on the TV.


The TV will switch on. If the standby indicator on the TV is lit, press O or a number button on the Remote Commander.

2 Press the MENU button. The main menu appears.





Flg. 1.

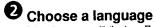

1 Select Language with the Δ+ or ∇- button and press the OK

The LANGUAGE menu appears. (See Fig. 2)

2 Select the language you want with $\Delta +$ or $\nabla -$, press OK, and then press -.

Now, choose one of the following methods "Preset Channels Automatically"

"Preset Channels Manualty".





Flg. 2.

With this method, you can preset all receivable Select Preset with \triangle + or ∇ - and press OK. channels at once.

be highlighted.

To stop automatic channel presetting Press - on the Remote Commander.

Notes
- After presetting the channels automatically, you can check which channels are stored on which programme positions. For details, see "Using the Programme Table" on page 45.

 You can exchange the programme positions to have them appear on screen in the order you like. For details, see "Exchanging the Programme Positions" on page 39.

Use this method if there are only a few channels in your area to preset or if you want to preset channels one by one. You may also allocate programmė numbers to various video input sources.

If you have made a mistake Press - to go back to the previous position. To go back to main Keep pressing -To go back to the

Press MENU.

3 Preset channels automatically

- The PRESET menu appears. (See Fig. 3.)
- 2 Select Auto Programme with △+ or ∇- and press OK. The AUTO BROGRAMME menu appears. (See Fig. 4.)
- Select if necessary the TV broadcast system with \triangle + or ∇ and press OK. (B/G for western European countries, D/K for eastern European countries) The first element of the "PROG" number will
- Select the programme (number button) from which you want to start presetting. Select the first element of the double-digit number with △+ or ∇- or the number buttons (e.g. For "04", select "0" here) and press OK.

The second element of "PROG" will be highlighted.

- 5 Select the second element of the double-digit number with △+ or Fig. 5. ∇- or the number buttons (e.g. For "04", select "4" here) (See Fig. 5.) and press OK.
- 6 Select "C" or "S" with △+ or ∇- and press OK. The automatic channel presetting starts. When presetting is finished the preset menu reappears. All available channels are now stored on successive number

Preset channels manually Select Preset with \triangle + or ∇ - and press OK. PRESET The PRESET menu appears. (See Fig. 6.)

2 Select Manual Programme preset with △+ or ∇- and press

The MANUAL PROGRAMME PRESET menu appears. (See Fig. 7.) Fig. 6.



Fig. 3.

	*****	C11
5+5 ► 8/6	PROG	CH
P 8/6	01	447

Flg. 4.





PROG	STS	CH SEARCH LABEL	AF I
1	8/G	(21 (011)	(on)
ż	8/6	(34 (off)	(00)
3	€/ G	C33 (off)	(on)
4	8/G	C45 (off)	[on]
5	8/G	C35 (aff)	(on)
	8/G	C44 (off)	(on)
7	8/6	C54 (011)	(00)
	8/G	C3D (off)	[no]
•	\$7G	C3B (off)	(00)
10	8/6	C59 (off)	(on)

Flg. 7.

1-3. ADDITIONAL PRESETTING FUNCTIONS

This section shows you additional presetting functions such as exchanging or skipping programme positions, captioning a station name, manual fine-tuning, and using the parental lock.

Before you begin

- Check that the Full Function side of the Remote Commander is visible
- Locate the Menu operation buttons.

PROGRAMME

2 8/G ((off) ---- (on)

2 8/G (pff) ---- (on)

2 B/G C35 (off) ---- (on)

2 8/6 (35 (aff) ---- (an)


2 B/G C50 (AV) ---- (on)

Flg.12.

Flg.13.

Fig.8.


Fig.9.

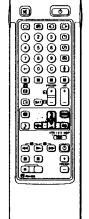

For programme

mistake Press - to go back to the previous position. To go back to main Keep pressing .

EXCHANGE

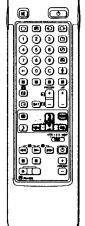

positions beyond 15 The display scrolls automatically.

If you have made a

To go back to the normal TV picture Press MENU.

Exchanging Programme Positions

With this function, you can exchange the programme positions to a preferable order.

- Press MENU to display the main menu.
- Select Preset with \triangle + or ∇ and press OK. The PRESET menu appears.
- 3 Select Programme Exchange with △+ or ▽- and press OK. The PROGRAMME EXCHANGE menu appears. (See Fig. 14.)
- 4 Using \triangle + or ∇ -, select the programme position you want to exchange with another and press OK. The colour of the selected position changes. (See Fig. 15.)
- 5 Using △+ or ∇-, select the programme posititon to be exchanged and press OK. Now the two programme positions have been exchanged. (See Fig. 16.)
- 6 Repeat steps 4 and 5 to exchange other programme positions.



Fig. 14.

3 C12 APD 11 ·· Fig. 15.



Fig. 16.

Tuning in a Channel Temporarily

You can tune in a channel temporarily, even when it has not been preset. Use the buttons on the Full-Function side of the Remote Commander.

- Press C on the Remote Commander. The indication "C" appears on the screen.
- Enter the double-digit channel number using the number buttons (e.g. for channel 4, first press 0, then 4). The channel appears. However, the channel will not be stored.



To tune in a channel by frequency After selecting F in step 5, enter three digits using the number buttons.

3 Using △+ or ∇-, select the programme position (number button)

Select if necessary the TV broadcast system (B/G for western

European countries, D/K for eastern European countries) or a

Then press OK. The CH position will be highlighted. (See Fig. 8.)

If you have selected EXT in step 4, select the video input source

There are two ways to preset channels. If you know the channel

if you don't know the channel number, go to step "6- Search".

-a Select the first element of the "CH" number with △+ / ▽- or the

The second element of the "CH" number will be highlighted.

The "SEARCH" position is highlighted and the selected channel is

-d Press OK until the cursor appears by the next programme position.

-a Press OK repeatedly until the colour of the SEARCH position

-b Start searching for the channel with △+ (up) or ∇- (down).

The CH number starts counting up or downwards. When a

-c Press OK if you want to store this channel. If not, press \triangle + or ∇ -

-d Press OK until the cursor appears by the next programme position.

The CH position changes colour. (See Fig. 12.)

channel is found, it stops. (See Fig. 13.)

-e Repeat steps 3 to 6 to preset other channels.

to continue channel searching.

-b Select the second element of the number with △+ / ▽- or the

The selected number appears. (See Fig. 10.)

-e Repeat steps 3 to 6 to preset other channels.

5 Using △+ or ∇-, select C (to preset a regular channel), or F (to

The first element of the "CH" number will be highlighted.

to which you want to preset a channel, and press OK.

video input source (EXT) with \triangle + or ∇ -.

tune in by frequency) and press OK.

with \triangle + or ∇ -. (See Fig. 9.)

number, go to step "6-Manual",

number buttons and press OK.

now stored. (See Fig. 11.)

number buttons

6 Manual

-c Press OK

changes.

If you have made a místake Press - to go back to the previous position.
To go back to main menu Keep pressing ←. To go back to the

normal TV picture Press MENU.

38

PRESET

MANUAL PROGRAMME Skipping Programme Positions

You can skip unused programme positions when selecting programmes with the PROGR +/- buttons. However, the skipped programmes may still be called up when you use the number buttons.

- Press MENU to display the main menu.
- Select Preset with \triangle + or ∇ and press OK. The PRESET menu appears.
- 3 Select Manual Programme Preset with △+ or ▽- and The MANUAL PROGRAMME PRESET menu appears. (See Fig.18.)
- 4 Using △+ or ∇-, select the programme position which you want
- to skip and press OK. The "SYSTEM" position changes colour.
- 5 Press △+ or ▽-until --- appears in the SYSTEM position. (See Fig. 18.)
- 6 Press OK. (See Fig. 19) When you select programmes using the PROGR +/- buttons, the programme position will be skipped.
- 7 Repeat steps 4 to 6 to skip other programme positions.

HANUAL PROGRAMME PRESET CH SEARCH LABEL (23 (off)

Select 🗖 and press OK

Fig. 17.

1 3		
Fig.	18.	

► 4 8/G Fig. 19.

PRESET

If you have made a

Press - to go back to

the previous position. To go back to main

Keep pressing -

To go back to the

normal TV picture

Press MENU.

40

mistake

 ∞

MANUAL PROGRAMME Captioning a Station Name

You can "name" a channel or an input video source using up to five characters (letters or numbers) to be displayed on the TV screen (e.g. ZDF). Using this function, you can easily identify which channel or video source you are watching.

- Press MENU to display the main menu.
- Select Preset with △+ or ▽- and press OK. The PRESET menu appears.
- 3 Select Manual Programme Preset with △+ or ∇- and press OK. The MANUAL PROGRAMME PRESET menu appears. (See Fig. 20.)
- 4 Using △+ or ▽-, select the programme position you want to
- caption and press OK repeatedly until the first element of the LABEL position is highlighted.
- 5 Select a letter or number with \triangle + or ∇ and press OK.The next element will be highlighted. Select other characters in the same way. If you want to leave an element blank, select - and press OK. (See Fig. 21.)
- 6 After selecting all the characters, press OK repeatedly until the cursor appears by the next programme position (at the left margin). Now the caption you chose is stored. (See Fig. 22.)
- 7 Repeat steps 5 and 6 to caption names for other channels.

272 208	CH SEARCH	LABEL	AFT
1 B/G	(21 (off)		(on)
2 B/G	(24(off)	****	(on)
3 A/G	C25 (off)		(on)
4 8/6	(27 (off)		(on)
	C28 (off)		(on)
5 8/G 6 8/G 7 8/G	C22 (off)		(on)
7 R/G	C26 (off)		(on)
A B/G	(25 (off)		(on)
9 R/G	[23(off)		(on)
0 8/G	C29 (off)		(on)
8 8/G 9 8/G 10 8/G	C25 (off)	nd pres	(or

Fig. 20.

2 B/5 C25 (off)5 -- (on) Fig. 21.

► 7 B/6 C25(off)SONY- (on)

Fig. 22.

MANUAL PROGRAMME Manual Fine-Tuning PRESET

Normally, the AFT(automatic fine-tuning) is already operating. However, if the picture is distorted, you can use the manual fine tuning function to obtain better picture reception.

- Press MENU to display the main menu.
- Select Preset with △+ or ∇- and press OK. The PRESET menu appears.
- Select Manual Programme Preset with △+ or ▽- and The MANUAL PROGRAMME PRESET menu appears. (See Fig. 23.)
- 4 Using ∧+ or ∇-, select the programme position corresponding
- to the channel which you want to manually fine-tune, and press OK repeatedly until the AFT position changes colour.
- Fine-tune the channel with \triangle + or ∇ so that you get the best TV reception. As you press the cursor buttons, the frequency changes from -15 to +15. (See Fig. 24.)
- After fine tuning, press OK. The cursor appears beside the next programme position (at the left margin). (See Fig. 25.) Now the fine-tuned level is stored.
- 7 Repeat steps 4 to 6 to fine-tune other channels.

PROG	515	CH SEARCH	LABEL	AF I
• i	A/G	(2) (off)		(00)
,	A/G	C24 taff)		(pn)
3	B/G	CZ5 toff)		(on)
	R/G	[27 (off)		(on)
	B/G	C28 (off)		(on)
í	B/G	CZZ (off)		ioni
	1/6	C26 (p11)		fonl
	ē/G	(25 (off)		toni
	8/G	C23(aff)		toni
	8/6	C29 (off)		100

Fig. 23.

2	8/G	C35 (off)	(-3)

Flg. 24.

	3	B/G	£40 (o)		(+3)
•	3	B/G	(45 (01	111	 (on)

Fig. 25.

PARENTAL LOCK

If you try to select a

programme that has

The message "Locked"

appears on the blank TV

been blocked

To reactivate AFT

beginning and select

Repeat from the

"ON" in step 5.

(automatic fine tuning)

Parental Lock


You can prevent undesirable broadcasts from appearing on the screen. We suggest you use this function to prevent children from watching programmes which you consider unsuitable.

- 1 Press MENU to display the main menu.
- Select Preset with \triangle + or ∇ and press OK. The PRESET menu appears.
- Select Parental Lock with \triangle + or ∇ and press OK. The PARENTAL LOCK menu appears. (See Fig. 26.)
- Using △+ or ∇-, select the programme position you want to The selected PROG number, CH and LABEL change colour indicating that this programme is now blocked. (See Fig. 27.)
- 5 Repeat step 4 to block other programme positions.

Cancelling blocking

- On the PARENTAL LOCK menu, select the programme position you want to unblock with \triangle + or ∇ -.

The selected PROG number, CH and LABEL change colour to normal colour indicating that the blocking has been cancelled.

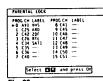


Fla. 26.

PROG CM 0 AV1 1 C22 2 C42 3 C26	AND ZOF	PROG	(H	LABEL	
1 - 7 - 110					

Fig. 27.

41

1-4. WATCHING THE TV

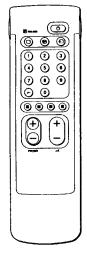

9

If no picture appears when you depress @ on the TV

and if the standby indicator on the TV is lit, the TV is in standby mode. Press O or one of the number buttons to switch it on.

This section explains the basic functions you use while watching TV. Most of the operations can be done using the simple side of the Remote Commander.

Switching the TV on and off

Switching on

Depress Oon the TV.

Switching off temporarily

Press & on the Remote Commander. The TV enters standby mode and the standby indicator on the

front of the TV lights up. To switch on again

Press O. PROGR +/-, or one of the number buttons on the Remote Commander.

Switching off completely

Depress @ on the TV.

Selecting TV Programmes


Press PROGR +/- or press number buttons.

To select a double-digit number

Press -/--. then the numbers. For example, if you want to choose 23, press -/--, 2, and 3.


Adjusting the Volume

Press III/-

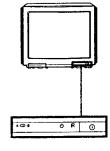

For details of the teletext operation, refer to page 47.

For details of the video input picture, refer to page 51.

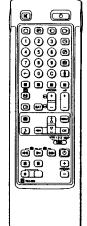

Operating the TV Using the **Buttons on the TV**

With the buttons on the TV, you can select programmes, adjust the volume, and select video input sources.

- Press P-4-P button repeatedly until the programme number. △ (for volume), or → (for video input picture) appears. Then adjust with the -/+ buttons.
- Press -/+ buttons to switch on the TV from the standby mode. Press -/+ simultaneously to reset picture and sound controls to
- the factory preset level (RESET function.)

Watching Teletext or Video Input

Watching teletext

- Press (2) to view the teletext.
- Press three number buttons to select a page.
- Press one of the coloured buttons for fastext operation.

 Press
 (PAGE +) or
 (PAGE -) for the next or preceeding
- page. To go back to the normal TV picture, press O.

Watching a video input picture

Press - repeatedly until the desired video input appears. To go back to the normal TV picture, press .

More Convenient Functions

Use the Full-Function side of the Remote Commander.

Displaying the on screen indications

- Press once to display all the indications. They will disappear after some seconds.
- Press ① twice to have the programme number and label stay on screen. Press twice again to make indications disappear.


Muting the sound.

Press .


Displaying the time

Press . This function is available only when teletext is

To make the time display disappear, press @ again.

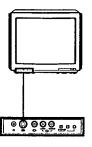

PICTURE CONTROL SOUND CONTROL

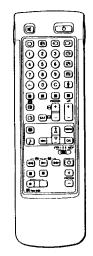

Adjusting the Picture and Sound

Although the picture and sound are adjusted at the factory, you can adjust them to suit your own taste. In addition, you can change the aspect ratio of the TV display for wide screen effect, or set the resolution to obtain a higher quality picture. You can also select dual sound (bilingual) programmes when available or adjust the sound for listening with the headphones.

Press (for picture) or) (for sound) on the Remote Commander.

Press MENU and select Picture Control or Sound Control, then press OK. The PICTURE CONTROL or SOUND CONTROL menu appears. (See Fig. 28 or Fig. 29)

- 2 Using △+ or ▽-, select the item you want to adjust and press OK. The selected item changes colour. (See Fig. 30)
- 3 Adjust the setting with \triangle + or ∇ and press OK. The cursor appears beside the next item (at the left margin). (See Fig. 31) For the effect of each control, see the table below.
- 4 Repeat steps 2 and 3 to adjust other items.



Fig. 28.

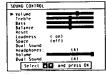


Fig. 29.



If you have made a mistake Press + to go back to

the previous position. To go back to the main Keep pressing -. To go back to the normal TV picture

Press MENU.

5

Note HUE is only available for NTSC colour system and RESOLUTION does not work for SECAM colour

Note on LINE OUT The audio level and the dual sound mode output from the O+ jack on the rear correspond to the HEADPHONES VOLUME and DUAL SOUND settings.

When watching video input picture You can select DUAL SOUND to change the sound.

Effect of each control

PICTURE CONTROL	Effect	
Contrast	Less — I — More	
Brightness	Darker ——!	Brighter
Colour	Less — I —	More
Hue	Greenish ——I Reddish	
Sharpness	Softer — + — Sharper	
Reset	Resets picture to the factory preset levels.	
Format	4:3: Normal	16:9: Wide screen effect
Resolution	Normal	High: Obtain a higher quality picture

SOUND CONTROL	Effect
Volume	Less — I — More
Treble	Less — More
Bass	Less — More
Balance	More left — I More right
Reset	Resets sound to the factory preset levels.
Loudness	off : Normal on : When listening to low volume sound.
Space	off: Normal on: Obtain acoustic sound effect.
Dual Sound	A: left channel B: right channel stereo mono The selected mode of the A-CD-B indicator on the TV lights up.
Headphones:	•
Volume	Less —— More
Dual Sound	A : left channel B : right channel stereo mono

PROGRAMME TABLE

To select a programme using this menu Select the programme number with \triangle + or ∇ -and press OK. The selected programme

To go back to the normal TV picture Press MENU.

Using the Programme Table

On this table, you can see which channel is preset to which programme position. You can also select programmes using

From the main menu, select Programme Table with $\triangle +$ or ∇-- and press OK.

The PROGRAMME TABLE menu appears. (See Fig. 32) To scroll to higher programme numbers, press ∇-.



Fig. 32.

To switch off the Select "OFF" in step 3

TIMER

To check the remaining time Press .

Using the Sleep Timer

You can select a time period after which the TV automatically switches into standby mode.

1 From the main menu, select Timer with $\triangle + \text{ or } \nabla - \text{ and press}$

The Timer menu appears. (See Fig. 33.)

2 Press OK.

The time period option changes colour.

3 Select the time period with △+ or ∇-. The time period (in minutes) changes as follows: 10→20→30→40→50→60→70→80→90 - OFF -

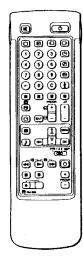


Fig. 33.

After selecting the time period, press OK. The cursor moves back to the left margin and the timer starts counting.

One minute before the TV switches into standby mode, a message is displayed on the screen.


1-6. PIP (PICTURE IN PICTURE)



Note RGB input source cannot be displayed in

 \equiv

With this function you can display a "PIP screen" (small picture) within the main TV picture. In this way you can watch or monitor the video output from any connected equipment (for example from a VTR) while watching TV or vice versa. For information about connection of other equipment, refer to page 50.

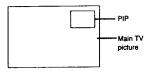

Switching PIP on and off

Press 🔿 .

The PIP screen will be displayed. The PIP picture will come from the source chosen when the TV was last used.

To switch PIP off Press (3 again.

Selecting a PIP source

Press 1.

The symbol t will be displayed at the bottom, left-hand corner of the screen.

Press € repeatedly until the desired PIP source is indicated (e.g. TV, AV1, AV2, YC2, AV3, YC3, AV4, YC4).


Note

If no video source has been connected, the PIP picture will be

Swapping screens

Press 🕭.

The main screen will switch the picture with the PIP screen.

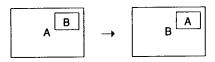

Note


If a TV programme is on the PIP screen and a video source on the main picture, and you want to change channels, first press and then the programme buttons or PROGR +/-.

Changing the position of the PIP

Press preparedly to change the position of the PIP screen within the main screen. There are four different positions available.



1-7. TELETEXT

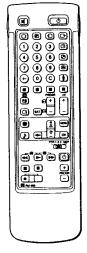

Note

Teletext errors may occur if the broadcasting signals are weak.

With the simple side of the Remote Commander You can switch teletext on and off, operate Fastext, and directly select page numbers.

Fastext operation is only

possible, if the TV

station broadcasts

Fastext signals.

TV stations broadcast an information service called Teletext via the TV channels. Teletext service allows you to receive various information pages such as weather reports or news at any time you want. For advanced teletext operation, use the buttons on the Fuil-Function side of the Remote Commander.

Direct Access Functions

Switching Teletext on and off

- Select the TV channel which carries the teletext broadcast you want to watch.
- 2 Press (2) to switch on teletext.

A teletext page will be displayed (usually the index page). If there is no teletext broadcast, P100 is displayed on the information line at the top of the screen.

To switch teletext off

Press O.

Selecting a teletext page With direct page selection

Use the number buttons to input the three digits of the chosen page number.

If you have made a mistake, type in any three digits. Then reenter the correct page number.

With page-catching

- Select a teletext page with a page overview (e.g. index page).
- 2 Press twice. "Page catching " will be displayed on the information line. The last digit of the first displayed page number flashes.
- 3 Using △+ or ▽-, select the desired page and press OK. The requested page will appear in a few seconds.

Accessing next or preceding page

Press (PAGE +) or (PAGE -).
The next or preceding page appears.

Superimposing the teletext display on the TV programme

- Press

 once in teletext mode or twice in TV mode.
- Press

 again to resume normal teletext reception.

Preventing a teletext page from being updated

- Press
 ⊕ (HOLD). The HOLD symbol
 ⊕ displayed on the information line.
- Press
 e
 to resume normal teletext reception.

Using Fastext

With Fastext you can access pages with one key stroke. When a Fastext page is broadcast, a colour-coded menu will appear at the bottom of the screen. The colours of this menu correspond to the red, green, yellow and blue buttons on the Remote Commander.

Press the corresponding coloured button on the Remote Commander which corresponds to the colour-coded menu. The page will be displayed after some seconds.

47



Using the Teletext Menu

This TV is provided with a menu-guided teletext system. When teletext is switched on, you can use the menu buttons to operate the teletext menu. Select the teletext menu functions in the following way:

- Press MENU. The menu will be superimposed on the teletext display. (See Fig. 34)
- Using \triangle + or ∇ -, select the teletext function you want and press OK. (See Fig. 35)

USER PAGES/PRESET USER PAGES

See page 49 for information about presetting and operating the user pages.

(B)

0000

 \bigcirc

0000

7099

 \odot \odot \odot \odot

•"•"•

• •

(III)

® ¶ ⊕ ⊕

The index will give you an overview of the contents of the teletext and the page numbers.

TOP/BOTTOM/FULL

For convenient reading of a teletext page, you can enlarge the teletext display. After having selected the function, an information line Top/Bottom/Full will be displayed. (See Fig. 36)

Press △+ for Top to enlarge the uper half, ∇- for Bottom to enlarge the lower one and OK for Full to resume the normal

Press (2) to resume normal teletext reception.

TEXT CLEAR

After having selected the function, you can watch a TV programme while waiting for a teletext page to be displayed. (See Fig. 37)

Press (to resume normal teletext reception.

SUBTITLES

Your teletext service will inform you if a TV programme is subtitled. After having selected the function the subtitles will be displayed.

REVEAL

Sometimes pages contain concealed information, such as answers to a quiz. The reveal option lets you disclose the information. After having selected the function, an information line "REVEAL ON/OFF" will be displayed. (See Fig. 38)

Using \triangle + or ∇ -, select ON to reveal the information or OFF to conceal it again.

Press (2) to resume normal teletext reception.

TIME PAGE

Your teletext service will inform you, if a time coded page is available. You may have a page (e.g. an alarm page) displayed at a certain time.

1 Press OK to select ON for the Time Page setting. The TV programme you were watching before you selected. Time Page is restored. An information window will be displayed at



Fig. 34.



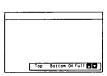


Fig. 36.



Fig. 37.



Fig. 38.

3 To select the desired time, enter four digits for the desired time (e.g. 1800) using the number buttons and press OK. The selected time is displayed at the top in the left-handed corner. At the requested time, the page will be displayed.

Press @ to resume normal teletext mode.

SUBPAGE

To cancel the request

SUBPAGE setting and

Select "OFF" for the

If two broadcasting

You can preset one bank to 2 different

programme positions

stations use the same

press OK.

Teletext

You may want to select a particular teletext page from several subpages which are rotated automatically. If you want to select one subpage, follow the operations below:

- 1 Using △+ or ∇-, select ON for the SUBPAGE setting and
- 2 To select the desired subpage, enter four digits using PROG +/or the number buttons. (e.g. enter 0002 for the second page of

User Page Bank System

You can store up to 30 pages in the "Teletext page bank system". In this way you have quick access to the pages you watch frequently.

Storing pages

There are 5 "banks" (A to E) for 5 teletext stations. In each bank you can store 6 preferred pages (P1 to P6).

- Press (if Teletext is not on already) and MENU to show the TELETEXT MENU display.
- 2 Select Preset User Pages with \triangle + or ∇ and press OK.
- 3 Select the desired bank with \triangle + or ∇ and press OK. The cursor will go to the first position (P1) of the preferred pages.
- Input the three digits of your first preferred page with the number buttons and press OK. The cursor will go to the second position.
- 5 Repeat step 4 for the other 5 page numbers you want to preset. If you do not want to preset all 6 page numbers available, press OK without inserting any number. After having finished the presetting press OK repeatedly until the cursor appears besides the next bank at the left margin.
- 6 Select Allocate Bank with △+ or ∇- and press OK.
- 7 Select the programme position for which you want to preset pages with \triangle + or ∇ - and press OK. (See Fig. 39)
- 8 Select the desired bank with △+ or ∇- (Banks A to E are available) and press OK.
- 9 Repeat steps 3 to 8 for the other 4 banks available.

Displaying User Pages

- Select MENU.
- 2 Select User Pages with \triangle + or ∇ and press OK. A table of the stored preferred pages will be displayed.
- Select the desired page with \triangle + or ∇ and press OK. The page will be displayed after some seconds.



Fig. 39.



Fig. 40.

49

1-8. CONNECTING AND OPERATING OPTIONAL **EQUIPMENT**

Connecting Optional Equipment

You can connect optional audio-video equipment to this TV such as VTRs, video disc players, and stereo systems.


To connect a VTR using the] terminal Connect the aerial output of the VTR to the aerial terminal of the TV. We recommend that you tune in the video signal to programme number *0*. For details see "Preset channels manually* on page 37.

If the picture or the sound is distorted Move the VTR away from

교

S-video input (Y/C Input) Video signals may be separated into Y (luminance or brightness) and C (chrominance) signals. Separating the Y and C signals prevents them from interlering with one another, and therefore improves picture quality (especially luminance). This TV is equipped with 3 S-Video input jacks through which these separated signals can be input directly.

When connecting a monaural VTR Connect only the white jack to both the TV and VTR.

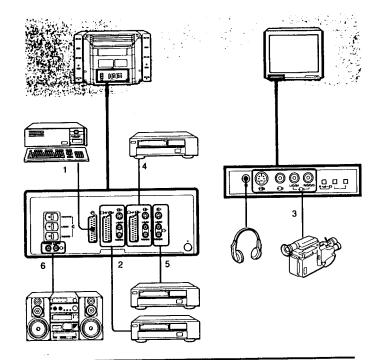

Available output signal Acceptable input signal Video/audio from TV tuner 1 Normal audio/video and RGB signal 2 Normal audio/video and S video signal Video/audio from selected source 3 Normal audio/video and S video signal No outputs Video/audio displayed on TV screen (monitor out) 4 Normal audio/video and S video signal S video/audio signal displayed on TV screen 5 No inputs (monitor out) Audio signal (variable) 6 No inputs

Selecting input with PROGR +/- or number buttons You can preset video input sources to the programme positions so that you can select them with PROGR +/or number buttons. For details, see "Preset channels manually" on page 37.



Selecting input and output

This section explains how to view the video input picture (of the video source connected to your TV), and how to select the output signal using direct access buttons or the menu system.

Selecting input

Press - repeatedly to select the input source.

The symbol of the selected input source will appear.

To go back to the normal TV picture

Press O.

Input modes

Symbol	Input signal	
- €) 1	Audio/video input through the -6 1 connector	
Ð	RGB input through the - 1 connector	
- ⊙ 2	Audio/video input through the →2/-602 connector	
– ⊚ 2	S video input through the ⊕-2/62 or62 connector	
- ⊙ 3	Audio/video input through -€3 and -€3 on the front	
⊸⊛ 3	S video input through the -@3 connectors on the front (4-pin connector)	
⊕ 4	Audio/video input through the ⊕-4/-604 connector	
-® 4	S video input through the ⊕-4/@4 or®4 connector (4-pin connector)	


You can also select the input mode using the and -/+ buttons on the TV. In this case, first select - , and then press -/+ buttons to select the input.

Selecting the output

The @-2/-62 connector outputs the source input from the other connectors.

Press (>+ repeatedly to select the output. The symbol of the selected output source appears.

Output modes

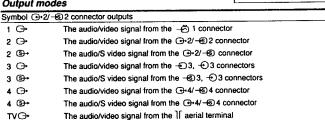

Ð:

1 (>

Checking and selecting the input and output sources using the menu

You can display the menu to see which input sources are selected for the TV screen and PIP screen, and which output source is selected. You can also select them on the menu display.

- 1 Select Video Connection with △+ or ▽- and press OK. The VIDEO CONNECTION menu appears. (See Fig. 41) You can see which source is selected for the TV and PIP input, and for the output. If you want to select the input and output on this menu, go on to the next step.
- 2 Select TV Screen (input source for the TV screen), PIP(input source for the PIP screen), or output (output source) with △+ or ∨− and press OK. One of the source items changes colour. (See Fig. 42)
- 3 Select the desired source with △+ or ∨-. (See Fig. 43) For details about each source, see the table on page 23.
- 4 Press OK. The selected source is confirmed, and the cursor appears. (See Fig. 44)
- 5 Repeat steps 2 to 4 to select the source for other inputs or outputs.

Remote Control of Other Sony Equipment

You can use the TV Remote Commander to control most of Sony remote-controlled video equipment such as: Beta, 8mm or VHS VTRs or video disc players.

Tuning the Remote Commander to the equipment

Set the VTR 1/2/3 MDP selector according to the equipment you want to control:

VTR 1: Beta or ED Beta VTR

VTR 2: 8mm VTR

VTR 3: VHS VTR

MDP: Video disc player

Use the buttons indicated in the illustration to operate the additional equipment.

If your video equipment is furnished with a COMMAND MODE selector: set this selector to the same position as the VTR 1/2/3 MDP selector on the TV Remote Commander.

If the equipment does not have a certain function, the corresponding button on the Remote Commander will not operate.

- 1	MOTITION OF OTHER	
ì	TY IPLUS >	TV Screen:
	AVI VHS I RGR COMPU	YMS Z
•	AVZ VHS Z	
, 1	YCZ CAM Z	PIP:
	YC3 VHS 3	191.05
	AV4 VC4 CAM 1	
1		Output: 1PLUS
	Select E	and press OK
	Fig. 41.	
	rig. 41.	
	Ty 1PLUS AV1 VHS 1	T# Screen:
,		
	Flg. 42.	
	AVZ VHS Z	PIP:
•	AV3 BETA	1 PLUS
	<u> </u>	
	Fig. 43.	
	ALDEO COMMECTION	
	TV LPLUS >	TV Screen:
	RGR COMPU	VHS 2
	AV2 VHS 2 VCZ CAM 2	PIP:
	AY3 BETA	1 1 1 1 1
	YC3 YHS 3	1PLUS
	YER CAM I	[0.11.1.11.11.11.11.11.11.11.11.11.11.11.
	l	Output: 1PLUS
	Select	and press OK

Flg. 44.


1-9. FOR YOUR INFORMATION

Troubleshooting

Here are some simple solutions to problems which may affect the picture and sound.

Problem	Solution		
No picture (screen is dark), no sound	Plug the TV in.		
•	 Press ® on the TV. (If © indicator is on, press © or a programme number on the Remote Commander.) 		
	Check the aerial connection.		
	Check if the selected video source is on.		
	 Turn the TV off for 3 or 4 seconds and then turn it on again using ①. 		
Poor or no picture (screen is dark), but good sour	nd • Press to enter the PICTURE CONTROL menu and adjust BRIGHTNESS, CONTRAST and COLOUR.		
Good picture but no sound	• Press ∠ +.		
•	Check loudspeakers connection.		
	 If		
No colour for colour programmes	 Press ■ to enter the PICTURE CONTROL menu, select RESET, then press OK. 		
Remote Commander does not function.	Replace batteries.		


If you continue to have problems, have your TV serviced by qualified personnel. Never open the casing yourself.

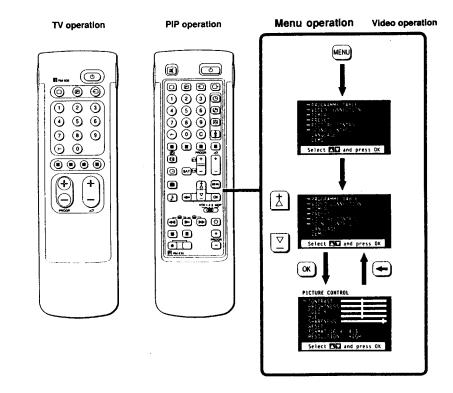


When recording
When you use the ●
(record) button, make
sure to press this button
and the one to the right
of it simultaneously.

SECTION 2 DISASSEMBLY

2-1. REAR COVER REMOVAL

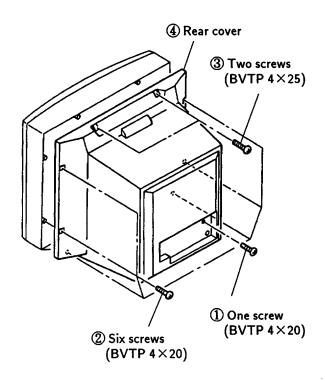


2-2. CHASSIS ASSY REMOVAL

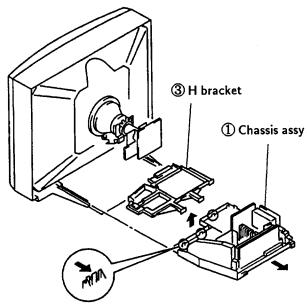


② Push the three claws of the main chassis in the direction of the arrow and remove the H bracket upwards.

2-3. SERVICE POSITION


Remove the H bracket from the main chassis assy and then perform the following servicing. (Refer to 2-2. CHASSIS ASSY REMOVAL)

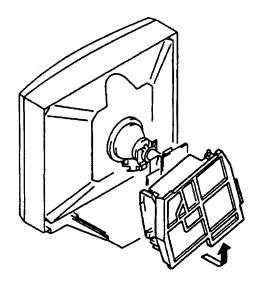


2-4. M AND V BOARDS REMOVAL

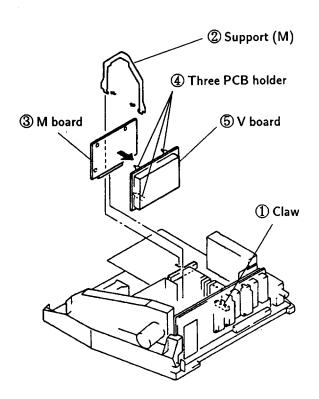


2-5. EXTENSION BOARD

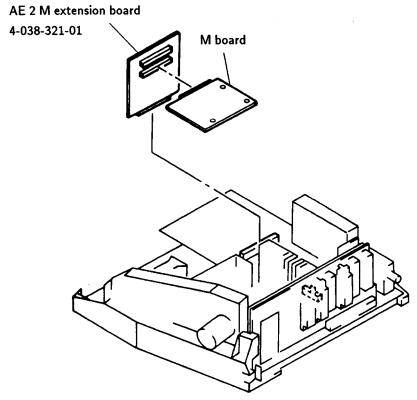


2-6. F BRACKET REMOVAL

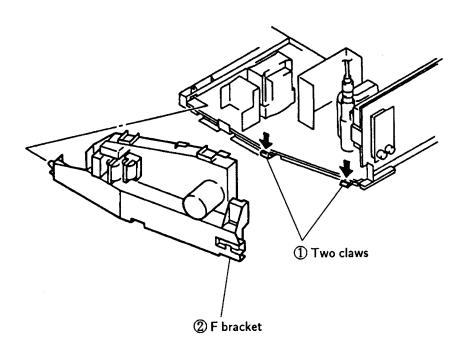


2-7. JAND K BOARDS REMOVAL

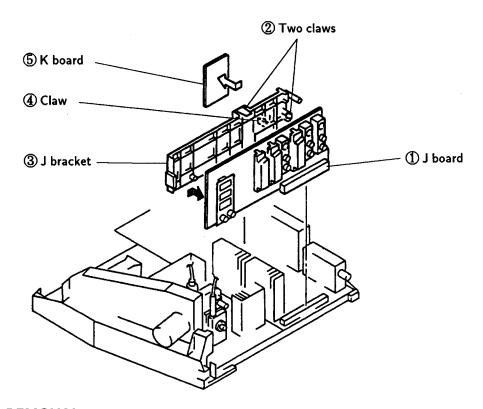


2-8. P BOARD REMOVAL

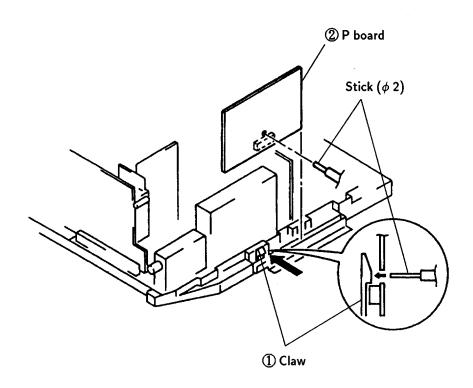


2-9-1. WIRE ROD

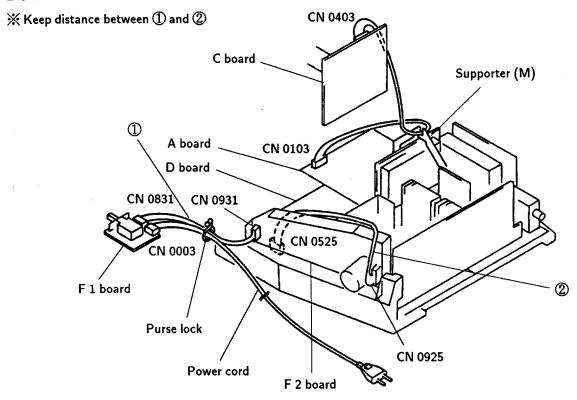

2-9-2. WIRE ROD

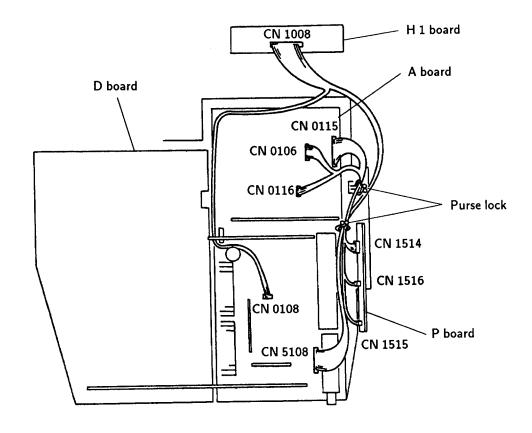


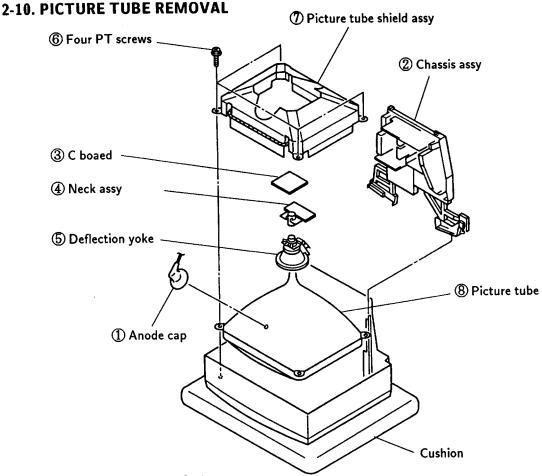


REMOVAL OF ANODE-CAP

NOTE: Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT chield or carbon painted on the CRT, after removing the anode.

REMOVING PROCEDURES

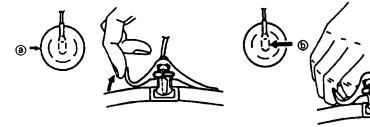


- ① Turn up one side of the rubber cap in the direction indicated by the arrow ②.
- ② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ⑤.

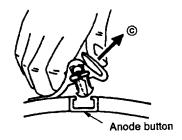


When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling up it in the direction of the arrow ©.

HOW TO HANDLE AN ANODE-CAP

- ① Don't hurt the surface of anode-caps with sharp shaped material!
- ② Don't press the rubber hardly not to hurt inside of anode-caps! A material fitting called as shatter-hook terminal is built in the rubber.
- ③ Don't turn the foot of rubber over hardly! The shatter-hook terminal will stick out or hurt the rubber.

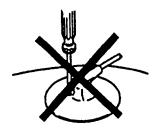

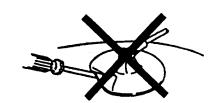

SECTION 3 SET-UP ADJUSTMENTS

- When complete readjustment is necessary or a new picture tube is installed, carry out the following adjustments.
- Unless there is specific instruction to the contrary, carry out these adjustments with the rated power supply.
- Unless there is specific instruction to the contrary, set the controls and switches this way:
 - Ocontrast 80% (or remote control normal)

- Carry out the following adjustments in this order:
- 1. Beam landing
- 2. Convergence
- 3. Focus
- 4. White balance

Note: Testing equipment required.

- 1. Color bar/pattern generator
- 2. Degausser
- 3. DC power supply
- 4. Digital multimeter
- 5. Oscilloscope

Preparations:

- In order to reduce the influence of geomagnetism on the set's picture tube face it east or west.
- Switch on the set's power and degauss with the degausser.

3-1. BEAM LANDING

- Input the white signal with the pattern generator.
 Contrast
 Brightness normal
- 2. Position neck assy as shown in Fig.3-2.
- 3. Set the pattern generator raster signal to red.
- 4. Move the deflection yoke to the rear and adjust with the purity control so that the red is at the center and the blue and the green take up equally sized areas on each side. (See Fig. 3-1 3-3)
- 5. Move the deflection yoke forward and adjust so that entire screen is red. (See Fig.3-1)
- 6. Switch the raster signal to blue, then to green and verify the condition.
- 7. When the position of the deflection yoke has been decided, fasten the deflection yoke with the screws.
- 8. If the beam does not land correctly in all the corners, use a magnet to adjust it. (See Fig.3-4)

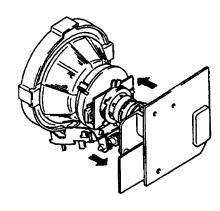
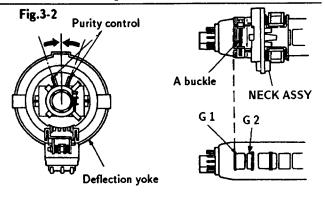


Fig.3-1



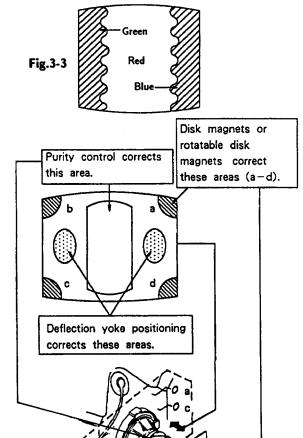



Fig.3-4

3-2. CONVERGENCE

Preparations:

- Before starting this adjustment, adjust the focus, horizontal size, and vertical size.
- Minimize the brightness setting.
- Provide dot pattern.


(1) Horizontal and vertical static convergence

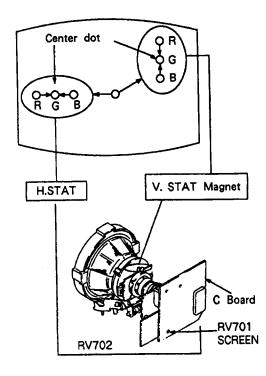


- 1. (Moving horizontally), adjust the H.STAT control so that the red, green, and blue points are on top of each other at the center of the screen.
- 2. (Moving vertically), adjust the V.STAT magnet so that the red, green, and blue points are on top of each other at the center of the screen.
- 3. If the H.STAT variable resistor cannot bring the red, green, and blue points together at the center of the screen, adjust the horizontal convergence with the H.STAT variable resistor and the V. STAT magnet in the manner given below.


 (In this case, the H.STAT variable resistor and the V.STAT magnet influence each other)


 Tilt the V.STAT magnet and adjust the static convergence by opening or closing the V.STAT magnet.

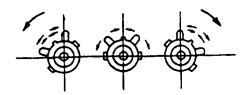


4. If the V.STAT magnet is moved in the direction of the ② and ⑤ arrows, the red, green, and blue points move as shown below.

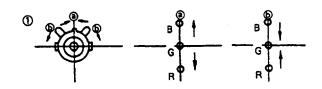

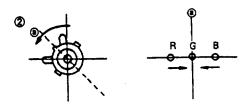

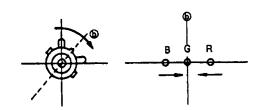

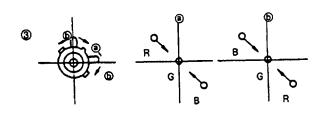


(2) Dynamic convergence adjustment

- 1. Adjust horizontal convergence located at the center position of the screen with H STAT VR.
- Enter into service mode. (Refer to the section 2
 "Electrical Adjustment" on how to enter service
 mode.)
- 3. Select CXA 1526 on menu.
- 4. Select each item and adjust them so that each item attains optimal convergence.
- 5. Press OK button to write the data.

CXA 1526

Item No.	Adjustment item	Data Amout
01	DC SHIFT	32
02	UPPER Y BOW	4
03	LOWER Y BOW	5
04	Н АМР	48
05	HTILT	29
06	UPPER COR BOW	32
07	UPPER TILT	
08	LOWER COR BOW	32
09	LOWER TILT	32


R.G.B.dots movement on the screen of the set

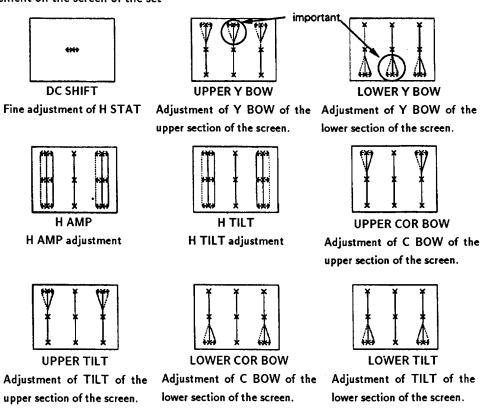

At this time, H.TILT, H.AMP, UPPER TILT, UPPER COR, BOW, LOWER TILT, and LOWER COR, BOW look like all the same, but the movement of the


right and left dots are reverse in all the TILT system. (Pay attention to the dotted lines.)

• Operation of BMC (Hexapole) Magnet

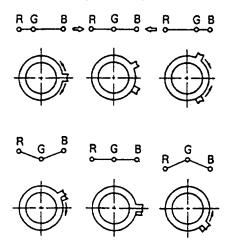


 The respective dot positions resulting from moving each magnet interact, so be sure to perform adjustment while tracking.


Use the H.STAT VR to adjust the red, green, and blue dots so they coincide at the center of screen (by moving the dots in the horizontal direction).

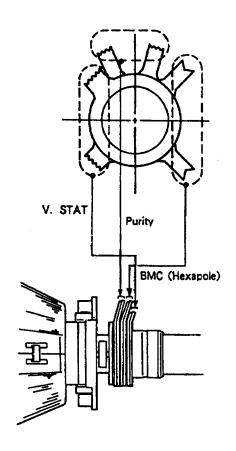

(3) Screen corner convergence


If you cannot adjust corner convergence properly, correct them with permalloy.

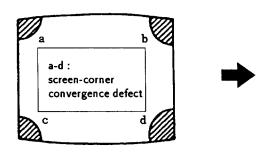

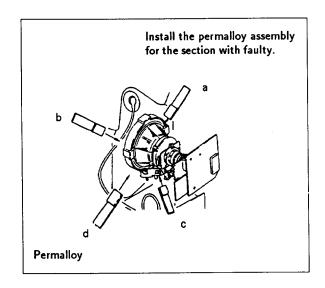

3-3. FOCUS

Adjust the focus to optimize the screen.

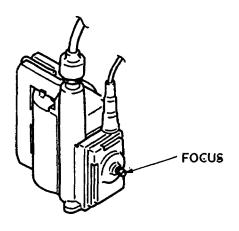

3-4. WHITE BALANCE

Screen G2 Setting

- 1. Input the dot signal from the pattern generator.
- 2. Set the picture brightness control to its lowest level.
- 3. Apply 180V DC to the R,G, and B cathodes with an external power supply.
- While watching the picture, adjust G 2 control RV 701 (Screen) to the point just before the return lines disappear.

White balance adjustment

- 1. Receive all-white signal.
- Enter into service mode. (Refer to the section 4
 "Electrical Adjustment" to how to enter service
 mode.)
- 3. Select CXA1587S on menu.

CXA1587S

Item No.	Adjustment item	Data amout
09	SUB BRIGHT	ADJ.
10	SUB HUE	7
11	VM LEVEL	2
12	NR LEVEL	0
13	ABL MODE	0
14	G-DRIVE	ADJ.
15	B-DRIVE	ADJ.
16	G-AUTO CUT OFF	ADJ.
17	B-AUTO CUT OFF	ADJ.
18	R-MANUAL CUT OFF	ADJ.
19	G-MANUAL CUT OFF	ADJ.
20	B-MANUAL CUT OFF	ADJ.

- 4. Set picture to MAX.
- 5. Adjust G-DRIVE B-DRIVE with 🗓, 🔟 buttons so that the white balance becomes optimum.
- 6. Press OK button to write the data for each item.
- 7. Set picture to MIN.
- 8. Adjust G-AUTO CUT OFF, B-AUTO CUT OFF, R
 -MANUAL CUT OFF, G-MANUAL CUT OFF and
 B-MANUAL CUT OFF with buttons so
 that the white balance becomes optimum.
- 9. Press OK button to write the data for each item.

SECTION 4

CIRCUIT ADJUSTMENTS

4-1. ELECTRICAL ADJUSTMENTS

Service adjustment to this model can be performed with the supplied remote commander, RM-831.

HOW TO ENTER INTO SERVICE MODE

1. Turn on the main power switch of the set while pressing any two buttons on the front panel.


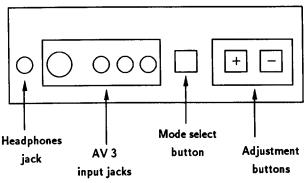


Fig.4-1

2. "TT" will appear on the upper right corner of the screen.

Command operation in service mode

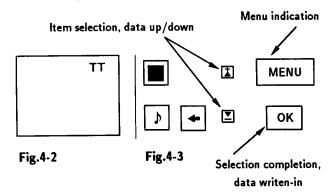

3. Press the MENU button of the commander to get the menu on screen.

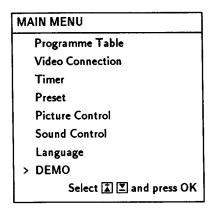


Fig.4-4

- 4. Press the ♣ and ▶ buttons of the commander and move > to DEMO.
- 5. Press OK button to proceed to the next menu.
- 6. The menu of fig.4-5 will appear on screen. Select DEVICE corresponding to the adjustment item from the table on next page.

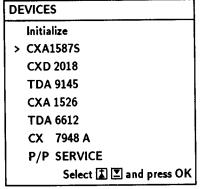


Fig.4-5

7. If adjustment item is CXA1587S, press the ∑ button and move > to CXA1587S...

CXA1587S

Item No.	Adjustment item	Data Amout
01	PICTURE	53
02	COLOR	31
03	BRIGHT	31
04	HUE	31
05	SHARPNESS	7
06	RGB PICTURE	13
07	SUB CONTRAST	ADJ.
08	SUB COLOR	ADJ.
09	SUB BRIGHT	ADJ.
10	SUB HUE	7
11	VM LEVEL	2
12	NR LEVEL	0
13	ABL MODE	0
14	G-DRIVE	ADJ.
15	B-DRIVE	ADJ.

- 8. Press OK button to get the next selection menu.
- 9. Press

 button and move > to the adjustment item and press OK button.

 OK
- 10. Press the

 and

 buttons to change the data in order to comply each standard.
- 11. Press OK button to write data.
- 12. Turn off the power to quit service mode when completing the adjustment.

CXA1587S

Item No.	Adjustment item	Data Amout
01	PICTURE	53
02	COLOR	31
03	BRIGHT	31
04	HUE	31
05	SHARPNESS	7
06	RGB PICTURE	13
07	SUB CONTRAST	ADJ.
08	SUB COLOR	ADJ.
09	SUB BRIGHT	ADJ.
10	SUB HUE	7
11	VM LEVEL	2
12	NR LEVEL	0
13	ABL MODE	0
14	G-DRIVE	ADJ.
15	B-DRIVE	ADJ.
16	G-AUTO CUT OFF	ADJ.
17	B-AUTO CUT OFF	ADJ.
18	R-MANUAL CUT OFF	ADJ.
19	G-MANUAL CUT OFF	ADJ.
20	B-MANUAL CUT OFF	ADJ.
21	GAMMA LEVEL	0
22	DC TRANSFER RATIO	3
23	DINAMIC PICTURE	0
24	Y FILTER ADJ	ADJ.
25	Y DELAY TIME	15
26	Y DELAY SWITCH 1	0
27	Y DELAY SWITCH 2	1
28	SHARPNESS LIMIT	ON
29	ALL BLK	OFF
30	H SHIFT	32
31	DAC TEST	ON
-32	PRE/OVER SHOOT	12
33	SHARPNESS FO	2
34	SUB SHARPNESS	3
35	R MUTE	OFF
36	G MUTE	OFF
37	B MUTE	OFF

CXA 1526

Item No.	Adjustment item	Data Amout
01	DC SHIFT	32
02	UPPER Y BOW	4
03	LOWER Y BOW	5
04	H.AMP	48
05	H TILT	29
06	UPPER COR BOW	32
07	UPPER TILT	32
08	LOWER COR BOW	32
09	LOWER TILT	32

F N
N
F
•
F
F
\L
F
F
•
)
N
)

CXD 2018

Item No.	Adjustment item	Data Amout
01	V SIZE	ADJ.
02	V SHIFT	ADJ.
03	S CORRECTION	ADJ.
04	V LINEARITY	ADJ.
05	H SIZE	ADJ.
06	PIN AMP	ADJ.
07	TILT	ADJ.
08	UPPER CORNER	ADJ.
09	LOWER CORNER	ADJ.
10	V BOW	ADJ.
11	ANGLE	ADJ.
12	HV COMP.V	13
13	HV COMP.H	8
14	FRAME SHIFT	OFF
15	FREE RUN 60 Hz	OFF
16	SYSTEM 60 Hz	OFF
17	ASPECT WIDE	OFF
18	DOUBLE SCAN	OFF
19	INTERLACE	ON
20	H SHIFT	32
21	N/S CORRECTION	ADJ.

Typical Value (OSD based)when receiving PAL Philips pattern.

TDA 6612

Adjustment item	Data Amout
Stereo-Separation	30

Should be adjusted twice 4 : 3 and 16:9 mode.

Y FILTER ADJUSTMENT

- 1. Input PAL RED pattern.
- 2. Connect an oscilloscope to CN 0403 ① pin (R IN) on the C board.
- 3. Enter into service mode and press 3, 8.
- 4. Adjust data by \triangle or ∇ to minimize the chroma element of CN 0403 1 pin.

SUB BRIGHTNESS ADJUSTMENT


- 1. Input Phillips pattern.
- 2. Enter into service mode and press 23.
- 3. Adjust data so that 0-IRE of the grey scale and CUT -OFF 20-IRE glitter slightly.

SUB CONTRAST ADJUSTMENT

- 1. Input a video that contains small 100% area on the Black Back ground.
- 2. Enter into service mode and press 01 to have PIC max followed by 21.
- 3. Adjust data so that 2.5 Vp-p can be obtained at ① CN 0403 (R IN).

SUB COLOR ADJUSTMENT

- 1. Input PAL color bar.
- 2. Connect an oscilloscope to CN 0403 ③ pin (B IN) on the C board.
- 3. Enter into service mode and press 22 of CXA 1587 S, 8 SUB COLOR.
- 4. Adjust data so that the right sides of the waveform will be the same.

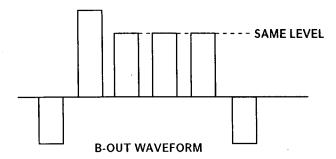

STEREO-SEPARATION ADJUSTMENT

- Input 1kHz stereo signal to the L-ch and 400Hz stereo signal to the R-ch.
- 2. Enter into service mode and press 19.
- 3. Adjust data so that sound does not leak to the R-ch and the L-ch.

DRIVE AND CUT OFF


See direct test mode list attached and refer to sub brightness or such for adjustment method.


DEFLECTION SYSTEM ADJUSTMENT

- 1. Enter into service mode and select CXD 2018.
- 2. Select and adjust each item in order to get an optimum image.

CXD 2018

Item No.	Adjustment item	Data Amout
01	V SIZE	ADJ.
02	V SHIFT	ADJ.
03	S CORRECTION	ADJ.
04	V LINEARITY	ADJ.
05	H SIZE	ADJ.
06	PIN AMP	ADJ.
07	TILT	ADJ.
08	UPPER CORNER	ADJ.
09	LOWER CORNER	ADJ.
10	V BOW	ADJ.
11	ANGLE	ADJ.
12	HV COMP.V	13
13	HV COMP.H	8
14	FRAME SHIFT	OFF
15	FREE RUN 60 Hz	OFF
16	SYSTEM 60 Hz	OFF
17	ASPECT WIDE	OFF
18	DOUBLE SCAM	OFF
19	NON INTERLACE	ON
20	H SHIFT	32
21	N/S CORRECTION	ADJ.

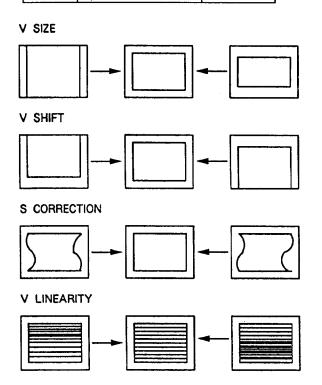

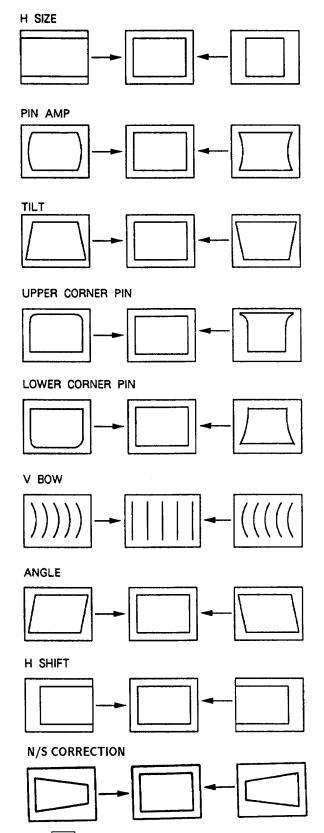


3. PressOK button to write the data.

If menu display may disturb the adjustment press of to clear, to resume it, press of again.

4-2. VOLUME ELECTRICAL ADJUSTMENTS

+B (+135 V) ADJUSTMENT (RV 601)


D BOARD

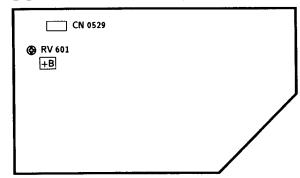

- 1. Turn on the power of the TV set.
- 2. Connect a digital multi-meter to ① pin of CN 0529 on D board.
- 3. Adjust RV 601 on D board to $+135\pm0.5$ V.


H.FREQ ADJUSTMENT (RV 506)

M BOARD

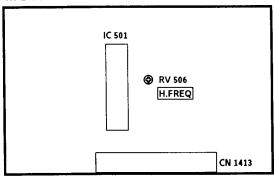


- 1. Connect GND to pin of IC 501 on M board.
- 2. Connect a frequency counter to 4 pin of IC 501.
- 3. Adjust RV 506 on M board to $15,625 \text{ kHz} \pm 10 \text{ Hz}$.
- 4. Remove ② pin of IC 501 from GND.

D 2 BOARD

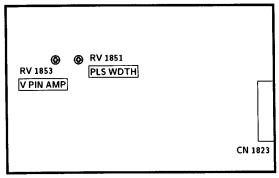


DRIVE PULSE PHASE ADJUSTMENT(RV1851)

While measuring the voltage V1 at both edges of C
1859, rotate RV1851 so that it becomes minimum.
The adjusting range is from (the voltage at which V
1 becomes minimum) V1 MIN to 3V, which means,
adjust to between V1 MIN to V1 MIN + 1V.

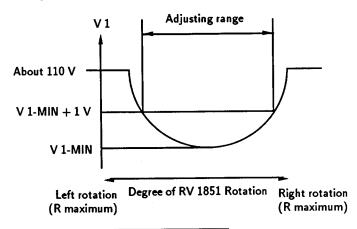


TEXT CLOCK ADJUSTMENT (CT 01)

V BOARD

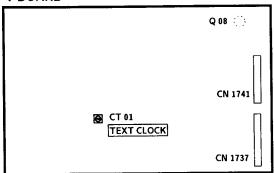

- 1. Get TEXT MENU on screen.
- 2. Connect GND and the base of Q 08 on V board.
- 3. Adjust CT 01 on V board so that the MENU stands still as much as possible.

AGC ADJUSTMENT (IF BLOCK)

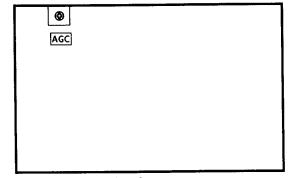

- 1. Receive off-air signal.
- 2. Adjust AGC VR so that there is no snow noise and cross-modulation.
- 3. Change receiving channel and confirm status.

4-3. TEST MODE 2:

Is available by pressing Test button two times, OSD "TT" appears. The functions described bellow are available by pressing the two numbers. To release the Test Mode 2, press two times 0, or switch TV in Standby Mode.

00	switch Test Mode 2 off
01	picture maximum
02	picture minimum
03	Volume 35%
04	Volume 50%
05	Volume 65%
06	Volume 80%
07	Aging Condition (Volumin., Picture max., Brightness
	max., Aging 2 Mode of CXA 1587S, TDA 2595 is
	locked to CXA 1587S via PIN 34 of μ -Con.)
08	Shipping Condition (Analog Values are RESET due
	to factory setting, Prog 1 is selected, TT Mode is
	switched off)
09	dummy
10	Tenth entry is deleted
11	Balance
12	Hue
13-14	dummy
15	Read factory setting from NVM
	Reads Volume, Balance, Treble, Bass, Brightness,
	Contrast, Hue, Sharpness, Colour values from ROM
	to the actual used values (Last Power Memory)
16	Save actual used values as RESET values
	Memorize actual used values Balance, Treble, Bass,
	Hue, Sharpness at RESET position in NVM
17	Preset Lavel for AV Sources
18	dummy
19	Stereo Seperation
20	Tenth entry is deleted
21	Sub Contrast
22	Sub Colour
23	Sub Brightness
24-29	dummy

30	Tenth entry is deleted	
31	Green Drive	
32	Blue Drive	
33	Green Cut Off (Auto Cut Off)	
34	Blue Cut Off (Auto Cut Off)	
35	Red Cut Off (Manual Cut Off)	
	(Auto Cut Off is switched off)	
36	Green Cut Off (Manual Cut Off)	
	(Auto Cut Off is switched off)	
37	Blue Cut Off (Manual Cut Off)	
	(Auto Cut Off is switched off)	
38	Y-Filter adjustment (Trap is switched off and TDA	
	9145 is switched in forced NTSC Mode)	
39	dummy	
40	Tenth entry is deleted	
41	Default setting of CXA 1587S	
	(Only in Plog 99 available)	
42	Default setting of CXA 2018	
	(Only in Plog 99 available)	
43	Default setting of CXA 1526	
	(Only in Plog 99 available)	
44	(all Port High) Not yet	
45	(all Port High) Not yet	
46-48	dummy	
49	Erease the NVM Testbyte (this byte detects already	
	stored NMV's) After selecting this function, switch	
	TV Off and On $ ightarrow$ the NVM will be preset by μ -	
	Controller. (Not the channel data)	


Note: For No. 35, 36, 37 and 38 special pressing
(AKB, forced Color Mode, Trap) is selected.
After selecting a new Test Mode Number,
the AKB is switched ON, the Trap is
switched On and TDA 9145 is switched to
Auto Search Mode.

In Test Mode 2 the Menu display is switchable by Speaker-Off button.

4-4. ERROR MESSAGE

Self diagnos system can operates as follows.

 When MP can't get the acknowledge back from the device, LED starts flashing according to the table as attached.

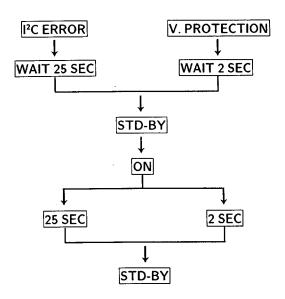

In case of more errors in parallel, the blinking error shows max. Priority according to the error number (e.g. error 2 and error 5 appears together, then LEDs shows error 2).

TABLE OF ERRORS

IC TYPE	FUNCTION
II C BUS	SDA low
X 24 C 16	EEPROM
SDA 3202	Tuner PII
TDA 9145	Colour decoder
CXA 1587S	RGB/Jungle
TDA 6612	Sound processor
CXD 2018	V deflection
CXA 1545	AV switch
SDA 5248	Text
	V protection
	I C BUS X 24 C 16 SDA 3202 TDA 9145 CXA 1587S TDA 6612 CXD 2018 CXA 1545


Stand by LED blinking

No IK return


4-5. ERROR II C BUS DIAGNOSIS SYSTEM IN AE 2 CHASSIS

For all ICs in AE2 chassis which are necessary to get picture and sound there is a built in error I²C Bus diagnosis system.


In case of no acknowledge bit, LED A and LED B starts blinking as shown.

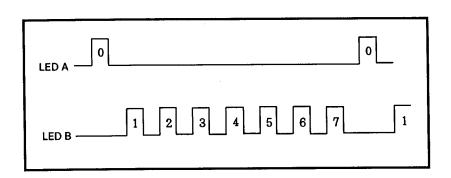


6-1. CHASSIS

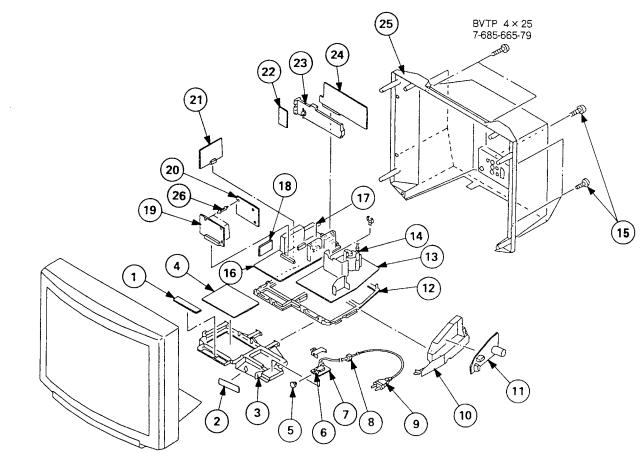

6-2. PICTURE TUBE

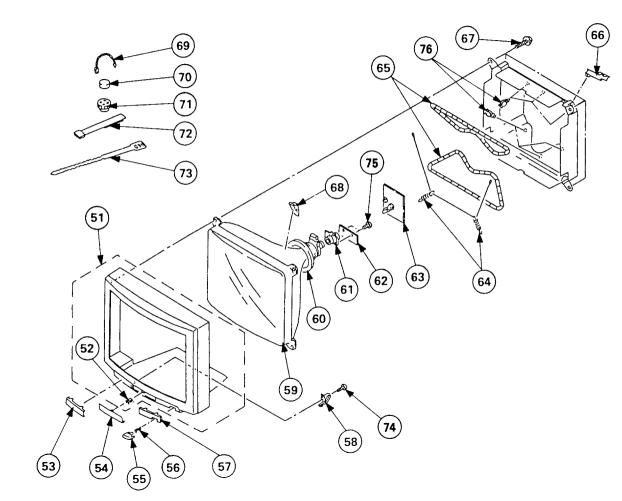


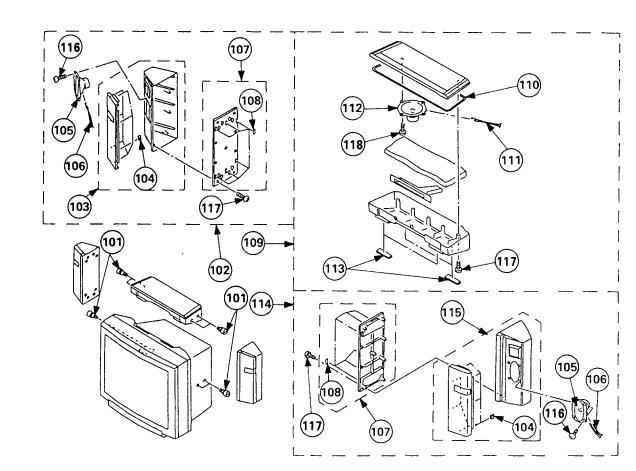


KV-E2531D/E2931D/E3431D KV-E2531B/E2931B/E3431B

RM-830 6159 RM-832

SERVICE MANUAL

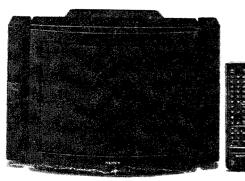

(Photo: KV-E2531D/ E2931D. E2531B/ E2931B)

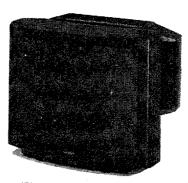

(Photo: KV-E3431D, E3431B)



AEP Model

KV-E2531D Chassis No. SCC-F18A-A

KV-E2931D

Chassis No. SCC-F18B-A

KV-E3431D

Chassis No. SCC-F18C-A

French Model

KV-E2531B

Chassis No. SCC-F32A-A

KV-E2931B

Chassis No. SCC-F32B-A KV-E3431B

Chassis No. SCC-F32C-A

AE-2 CHASSIS

MODELS OF TH	E SAME SERIES
KV-E2531D/E2931D/E3431D	
KV-E2531B/E2931B/E3431B	

SPECIFICATIONS

RM-830

[KV-E2531D/E2931D/E3431D]

Television system B/G/H, D/K

Channel coverage PAL B/G/H VHF: E2-E12

UHF: E21-E69 CABLE TV (1) : \$1-\$41

CABLE TV (2) : S01-S05, M1-M10, U1-U10

ITALIA VHF: A-H2 (C) UHF: 21-69

D/K VHF: R01-R12

UHF: R21-R69

[KV-E2531B/E2931B/E3431B]

Television system B/G/H, D/K L, I

Channel coverage L VHF: F02-F10 UHF: F21-F69

CABLE: B-Q

B/G/H VHF: E2-E12 UHF: E21-E69

CABLE TV (1) : S1-S41

CABLE TV (2) : S01-S05, M1-M10, U1-U10

ITALIA VHF: A-H2 (C) UHF: 21-69

D/K VHF: R01-R12

UHF: R21-R69 UHF: B21-B69

Color system Stereo system Picture tube

PAL, SECAM, NTSC3.58, NTSC4.43

GERMAN stereo

Hi-Black Trinitron tube

Approx. 63 cm (25 inches)

(Approx. 59 cm picture measured diagonally)

110 ° -degree deflection

Approx. 72 cm (29 inches)

(Approx. 68 cm picture measured diagonally)

110 ° -degree deflection

Approx. 86.0 cm (34 inches)

(Approx. 80.0 cm picture measured diagonally)

110 ° -degree deflection

-Continued to next page-

TRINITRON® COLOR TV SONY



KV-E2531D/E2931D/E3431D KV-E2531B/E2931B/E3431B RM-830 RM-830 RM-832

Inputs/Outputs Terminals

(REAR)

-Ö 1 21-pin Euro connector

(CENELEC standard)
Inputs for audio and video signals

• inputs for RGB

· outputs of TV video and audio signals

G→ 2/-® 2 21-pin Euro connector

· inputs for audio and video signals

· inputs for S video

· outputs for audio and video signals

(selectable)

G+ 4/-® 4 21-pin Euro connector

· inputs for audio and video signals

• inputs for S video

outputs for audio and video signals

(monitor out)

-⊕ 2, -⊕ 4 S video inputs

• 4 pin DIN

◆ Audio inputs (L, R) -phono jacks

S video output - 4 pin DIN

Audio outputs - phono jacks

→ Audio outputs (variable) - phono jacks

External speaker terminals: 2 pin

Woofer terminal: 2 pin

(FRONT)

10 3 Video input-phono jack

O Audio input-phono jacks

- 3 S video input 4-pin DIN

∩ Headphone jack : Stereo minijack

Sound output

Power consumption

2×11W RMS (side speakers), 35W

music power (woofer)

 $2 \times 30 \text{W}$ (side speakers), 35W (woofer)

106.5Wh (KV-E2531D)108Wh (KV-E2531B)

115Wh (KV-E2931D) 122Wh (KV-E2931B)

139Wh (KV-E3431D) 139Wh (KV-E3431B)

Dimensions incl.speakers Approx.756 x 493 x 468 mm (w/h/d)

(KV-E2531D/E2531B)

Approx.837 x 553 x 513 mm (w/h/d)

(KV-E2931D/E2931B)

Appro. $822 \times 659 \times 587$ mm (w/h/d)

(KV-E3431D/E3431B)

Weight incl.speakers Approx. 40 kg (KV-E2531D/E2531B)

Approx. 53 kg (KV-E2931D/E2931B) Approx. 78 kg (KV-E3431D/E3431B)

Supplied accessories RM-830 Remote Commander (1)

(KV-E2531D/E2931D/E2531B/E2931B)

RM-832 Remote Commander (1)

(KV-E3431D/E3431B)

IEC designation R6 batteries (2)

Other features Digital comb filter (High resolution)

PIP (Picture-in-picture)

TOPTEXT

[RM-830/832]

Remote control system

infrared control

Power requirements 3V dc

2 batteries IEC designation

R6 (size AA)

Dimentions

Approx.65 \times 222 \times 21mm (w/h/d)


Weight


Approx.157g (Not including Batteries)

Design and specifications are subject to change without notice.

Model name	KV-E2531D	KV-E25318	KV-E2931D	KV-E2931B	KV-E3431D	KV E3431B
Pal Comb	ON	ON	ON	ON	ON	ON
PiP	ON	ON	ON	ON	ON	ON
RGB Priority	ON	OFF	ON	OFF	ON	OFF
Woofer Box	ON	ON	ON	ON	ON	ON
Scart 1	ON	ON	ON	ON	ON	ON
Scart 2	ON	ON	ON	ON	ON	ON
Front in (3)	ON	00	ON	ON	ON	ON
Scart 4	ON	ON	ON	ON	ON	ON
Dyn.Convergence	OFF	OFF	OFF	OFF	ON	ON
Projector	OFF	OFF	OFF	OFF	OFF	OFF
AxB in 16:9 mode	ON	ON	ON	ON	ON	ON
Norm B/G	ON	ON	ON	ON	ON	ON
Norm I	OFF	ON	OFF	ON	OFF	ON
Norm D/K	ON	ON	ON	ON	ON	ON
Norm AUS	OFF	OFF	OFF	OFF	OFF	OFF
Norm L	OFF	ON	OFF	ON	OFF	ON
Norm SAT	OFF	OFF	OFF	OFF	OFF	OFF
Norm N	OFF	OFF	OFF	OFF	OFF	OFF
Language Preset	Deutsch	Francais	Deutsch	Francais	Deutsch	Francais

21 pin connector (€1, €-2/€-4)

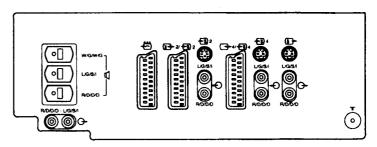

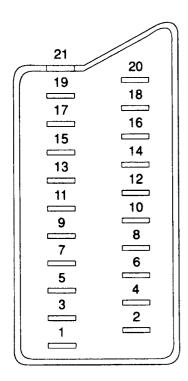

Pin No	•	2	4	Signal	Signal level
	1				
1	0	0	0	Audio output B (right)	Standard level: 0.5Vrms Output impedance:less than 1kohm*
2	0	0	0	Audio input B (right)	Standard level:0.5Vrms Input impedance:More than 10kohms*
3	0	0	0	Audio output A (left)	Standard level:0.5Vrms Output impedance:less than 1kohm*
4	0	0	0	Ground (audio)	
5	0	0	0	Ground (blue)	
6	0	0	0	Audio input A (left)	Standard level:0.5Vrms Input impedance:More than 10kohms*
7	0	•	•	Blue input	0.7V±3dB, 75ohms, positive
8	0	0	0	Function select (AV control)	High state (9.5—12V):Part mode Low state (0—2V):TV mode Input impedance:More than 10kohms Input capacitance:Less than 2nF
9	0	0	0	Ground (green)	
10	0	0	0	Open	
11	0	•	•	Green	Green signal:0.7V±3dB. 75ohms, positive
12	0	0	0	Open	
13	0	0	0	Ground(red)	
14	0	0	0	Ground (blanking)	
15	0	_	_	Red input	0.7V±3dB, 75ohms, positive
	_	0	0	(S signal) croma input	0.3V±3dB, 75ohms, positive
16	0	•	•	Blanking input (Ys signal)	High state (1—3V) Low state (0—0.4V) Input impedance:75ohms
17	0	0	0	Ground (video output)	
18	0	0	0	Ground (video input)	
19	0	0	0	Video output	1V±3dB, 75ohms, positive Sync:0.3V(-3, +10dB)
20	0	_	_	Video input	1V±3dB, 75ohms, positive Sync:0.3V(-3, +10dB)
	-	0	0	Video Input/Y (S signal)	1V±3dB, 75ohms, positive Sync:0.3V(-3, +10dB)
21	0	0	0	Common ground (plug, shield))

O connected

unconnected (open)

* At 20 Hz—20kHz

4 pin connector (1)

Pin No	Signal	Signat level
1	Ground	
2	Ground	
3	Y (S signal) input	1V±3dB 75ohm, positive Sync 0.3V $^{-3}_{+10}$ dB
4	C (S signal) input	0.3V±3dB 75ohm, positive

TABLE OF CONTENTS

Sect	<u>tion</u>	Title	<u>Page</u>	Sec	ction	<u>Title</u>	Page
1.	GENERAL			4.	CIR	CUIT ADJUSTMENTS	
1-1.				4-1.	Elect	trical Adjustments	26
1-2.	Tuning in to TV Stations		6	4-2.	. Volu	me Electrical Adjustments	30
1-3.		nctions		4-3.	Test	Mode 2 :	31
1-4.	Watching the TV		9	4-4.		Message	32
1-5.	Adjusting and Setting the	e TV Using the Menu	10	4-5.	Erro	II C Bus Diagnosis System in	-
1-6.	PIP (Picture in Picture) .		11		AE2	Chassis Available	32
1-7.							-
1-8.	Connecting and Operation	ng Optional Equipment	13				
1-9.			14	5 .	DIA	GRAMS	
				5-1.	Block	C Diagrams (1)	33
2.	DISASSEMBLY			5-2.	Block	Diagrams (2)	37
				5-3.	Circu	it Boards Location	41
2-1-1.	. Rear Cover Removal (25	5 inch, 29 inch)	15	5-3.	Printe	ed Wiring Boards and Schematic Diagrams	41
2-1-2	. Rear Cover Removal (34	4 inch)	15	•	F1, F2	, K, H1, H2, J Boards	42
2-2-1.	. Chassis Assy Removal (25 inch, 29 inch)	15	•	A Boar	d	49
2-2-2	. Chassis Assy Removal (34 inch)	15	•	V. D B	oards	57
2-3.	Service Position	***************************************	16	•	M Boa	rd	65
2-4.		noval	16			Boards	72
2-5.		***************************************	17	•	B1. VM	I, IF, C Boards	79
2-6.		•••••	17	5-4.	Semi	conductors	86
2-7.		l	18		• • • • • • • • • • • • • • • • • • • •		00
2-8.	P Board Removal	•••••	18				
2-9-1.		•••••••	19	6.	FXP	LODED VIEWS	
		••••••	19	•			
2-10.	Picture Tube Removal	••••••	20	6-1.	Chas	sis (KV-E2531D/ E2531B/ E2931D/ E2931B)	88
				6-2.		re Tube (KV-E2531D/ E2531B/	00
						1D/ E2931B)	89
3.	SET-UP ADJUSTMEN	NTS		6-3.	SPE	AKER (KV-E2531D/ E2531B/ E2931D/ E2931B)	90
				6-4.	CHA	SSIS (KV-E3431D/ E3431B)	91
3-1.	Beam Landing		21	6-5.		re Tube (KV-E3431D/ E3431B)	
			22	6-6.		AKER (KV-E3431D/ E3431B)	92
3-3.			25	0 0.	J, L,	30-E11 (04-E040 (D) E040 (D)	93
3-4.			25				
- ••	······································	***************************************	23	7	EI E/	CTDICAL DADTO LICT	

(CAUTION)

SHORT CIRCUIT THE ANODE OF THE PICTURE TUBE AND THE ANODE CAPTOTHE METAL CHASSIS, CRT SHIELD, OR CARBON PAINTED ON THE CRT, AFTER REMOVING THE ANODE.

WARNING!!

AN ISOLATION TRANSFORMER SHOULD BE USED DURING ANY SERVICE TO AVOID POSSIBLE SHOCK HAZARD, BECAUSE OF LIVE CHASSIS.

THE CHASSIS OF THIS RECEIVER IS DIRECTLY CONNECTED TO THE AC POWER LINE.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY SHADING AND MARK Δ ON THE SCHEMATIC DIAGRAMS, EXPLODED VIEWS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

(ATTENTION)

APRES AVOIR DECONNECTE LE CAP DE L'ANODE, COURTCIRCUITER L'ANODE DU TUBE CATHODIQUE ET CELUI DEL'ANODE DU CAPAU CHASSIS METALLIQUE DE L'APPAREIL, OU AU COUCHE DE CARBONE PEINTE SUR LE TUBE CATHODIQUE OU AU BLINDAGE DU TUBE CATHODIQUE.

ATTENTION!!

AFIN D'EVITER TOUT RISQUE D'ELECTROCUTION PROVENANT D'UN CHÁSSIS SOUS TENSION, UN TRANSFORMATEUR D'ISOLEMENT DOIT ETRE UTILISÉ LORS DE TOUT DÉPANNAGE. LE CHÁSSIS DE CE RÉCEPTEUR EST DIRECTEMENT RACCORDÉ À L'ALIMENTATION SECTEUR.

ATTENTION AUX COMPOSANTS RELATIFS ÁLA SÉCURITÉ!!

LES COMPOSANTS IDENTIFIÉS PAR UNE TRAME ET PAR UNE MAPQUE À SUR LES SCHÉMAS DE PRINCIPE, LES VUES EXPLOSÉES ET LES LISTES DE PIECES CONT D'UNE IMPORTANCE CRITIQUE POUR LA SÉCURITÉ DU FONCTIONNEMENT. NE LES REMPLACER QUE PAR DES COMPOSANTS SONY DONT LE NUMÉRO DE PIÉCE EST INDIQUÉ DANS LE PRÉSENT MANUEL OU DANS DES SUPPLÉMENTS PUBLIÉS PAR SONY.

1-1. OVERVIEW


SECTION 1 GENERAL

This section is extracted from instruction manual.

Remote Commander





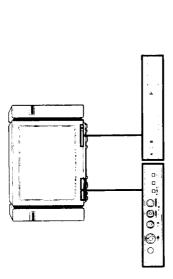

Main power switch Standby indicator A-Φ-B Stereo AB indicators Headphones jack Headphones jack A-Φ-Φ Function selector Function selector Function selector A-Φ-Φ		Refer to page
9 9 9	er switch	45
⊖ 93. ⊖ 93.	ndicator	42
® 3. - 53. ←3. [-45]	3 indicators	4
	es jack	20
	s (S-video/video/audio)	20
	Function selector (Programme/volume/inbut)	43
-/+ Adjustment buttons for function selector	t buttons for function selector	43

Refer to Page

46

PIP operation Menu operation Video operation		
		Full-Function side
TV/Teletext operation		
		Simple side
	Note The SAT button does not operate with this TV.	

Symbol	Name	Refer to Page	Symbol	Name
₩	Mute on/off button	43	•	PIP on / off button
Đ	Standby button	42	-	PIP source selector
0	TV power on/TV mode selector	42	0	Swap button
	button		•	PIP position changing button
(h)	Teletext button	£3		
φ	Input mode selector	43	Menu operation	ration
Ф	Output mode selector	51	Symbol	Name
1,2,3,4,5,6, 7,8,9, and 0	Number buttons	42	MENC	Menu on / off button
	Double-digit entering button	42	 -	Select buttons
O	Direct channel entering button	41	š	OK (confirming) button
i	Volume control button	42		Back button
PROGR +/-	PROGR +/- Programme selectors	42		
(<u>1</u>)	Teletext page access buttons	47	Video operation	ration
•	Picture adjustment button	4	Symbol	Name
4	Sound adjustment button	4	VTR1/2/3	Video equipment selector
•	On-screen display button	43		Total committee of the
€	Teletext hold button	47	Ð ● ■	buttons
€	Time display button	43	PROGR +/-	
	Factory byttone	47		

Refer to Page

8888

Refer to Page

25 25

1-2. TUNING IN TO TV STATIONS



Once you have set up the TV, you can choose the language of the menu. Then you should preset the channels (up to 100 channels) by choosing either the automatic or manual method. The automatic method is easier if you want to preset all





Select Com and press Dr.

Manual Monu Auto Menu

Before you begin Check that the Full-Function side of the Remote Commander is visible.

Locate Menu operation buttons on the Remote Commander.

They are shaded in the itlustration at the left.

Programme Table With Control Free British Sound Control England Control Control

The TV will switch on. If the standby indicator on the TV is lif, press \Box or a number button on the Remote Commander.

Press the MENU button. The main menu appears.

~

MENU

Display the Menu

Depress @ on the TV.

Select Day and press Ox

Keep pressing 4.

To go back to the normal TV picture Press MENU.

B Preset channels automatically

With this method, you can preset all receivable channels at once.

To stop automatic channel presetting Press + on the Remote Commander.

1 Select Preset with +or -and press OK. The PRESET menu appears. (See Fig. 3.)

Select Auto Programme with + or - and press OK. The AUTO PROGRAMME menu appears. (See Fig. 4.)

Se err (No and press

MACH Propresse Mach Propresse Programme Skinange Parental Lone

Select if necessary the TV broadcast system with + or - and press CK. (BG for western European countries, D/K for eastern European countries). The first element of the 'PROG' number will be highlighted.

After presetting the channels automatically, you can check which channels are stored on

which programme positions. For details, see "Using the Programme Table" on page 45.

Select the programme (number button) from which you want to start presetting. Select the first element of the double-digit number with +or -or the number buttons (e.g. For "04",

Sein : DC and cres

AUTO PROGRAMME

Fig. 3.

select "0" here) and press OK.
The second element of "PROG" will be highlighted.

Select the second element of the double-digit number with - or the number buttons (e.g. For "04", select "4" here) (See Fig. 5.) and press OK.

· You can exchange the programme postbors to have them appear on screen in the order you like. For details, see Fixchanging the Programme Postitions on page 39:


Fig. 5.

When presetting is finished the preset menu reappears. All available channels are now stored on successive number Select "C" or "S" with + or - and press OK. The automatic channel presetting starts.

Preset channels manually

Select Manual Programme preset with + or — and press Select Preset with +or - and press OK. The PRESET menu appears. (See Fig. 6.)

OK. The MANUAL PROGRAMME PRESET menu appears. (See Fig. 7.)

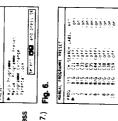

Select DO and press Do

Use this method if there are only a few channels in your area to preset or if you want to present channels one by one. Over make also allocate programme numbers to various video input sources.

Press - to go back to the previous position. To go back to main if you have made a

₹

Select Language with the $\Delta+$ or $\nabla-$ button and press the OK button.

Choose a language

The LANGUAGE menu appears. (See Fig. 2)

To go back to main menu Keep pressing ←

To go back to the normal TV picture Press MENU.

Note on the Demo

Now, choose one of the following methods

then press .

"Preset Channels Automatically"

'Preset Chennels Manually".

from choose Demo on the main menu, you can see a sequential demonstration of the manu functions.

Select and press (



Select the language you want with $\Delta+$ or $\nabla-$, press OK, and

1-3. ADDITIONAL PRESETTING FUNCTIONS



Using I + or I is select the programme position (number button) to which you want to preset a channel, and press OK.

Select if necessary the TV broadcast system (B/G for western European countries, D/K for eastern European countries) or a

This section shows you additional presetting functions such as exchanging or skipping programme positions, captioning a station name, manual fine-funing, and using the parental lock.

- **Before you begin** Check that the Full Function side of the Remote Commander is visible
 - Locate the Menu operation buttons.

7

Using ... + or ... -, select C (to preset a regular channel), or F (to ture in by frequency) and press OK.
The first element of the CSH runnber will be highlighted.
If you have selected EXT in step 4, select the video input source with + or = (See Fig. 9.)

To tune in a channel by frequency After selecting F in step 5, enter three digits using the number buttons.

There are two ways to preset channels. If you know the channel number, go to step "6-Manual".

if you don't know the channel number, go to step "6- Search"

Select the first element of the "CH" number with +/ - or the

Select the second element of the number with +/ - or the

P

number buttons.
The selected number appears. (See Fig. 10.)

The second element of the "CH" number will be highlighted.

number buttons and press OK.

Then press OK. The CH position will be highlighted. (See Fig. 8.)

video input source (EXT) with + or -

Flg.9.

Exchanging Programme Positions with this function, you can exchange the programme positions to a preferable order.

- Press MENU to display the main menu.
- Select Preset with + or and press OK. The PRESET menu appears.
- Select Programme Exchange with +or -and press OK. The PROGRAMME EXCHANGE menu appears. (See Fig. 14.)
 - Using + or -, select the programme position you want to exchange with another and press OK.

 The colour of the selected position changes. (See Fig. 15.)

Crows and second and

Fig. 14.

Fig. 15.

55°

- exchanged and press OK. Now the two programme positions have been exchanged. (See Fig. 16.) Using + or -, select the programme posititon to be
- Repeat steps 4 and 5 to exchange other programme positions.



Fig. 16.

Tuning in a Channel Temporarily You can tune in a channel temporarily, even when it has not been preset. Use the buttons on the Full-Function side of the

4

Fig. 12.

Press OK repeatedly until the colour of the SEARCH position

(i)

f you have made a

Press OK until the cursor appears by the next programme position.

Repeat steps 3 to 6 to preset other channels.

Press OK if you want to store this channel. If not, press + or

to continue channel searching.

The CH position changes colour. (See Fig. 12.)
The CH number starts counting up or downwards. When a channel is found, it stops. (See Fig. 13.)

Start searching for the channel with

changes. Search

Keep pressing 4.
To go back to the normal TV picture Press MENU.

Enter the double-digit channel number using the number buttons (e.g., for channel 4, first press 0, then 4). The channel appears. The channel appears However, the channel will not be stored.

Press C on the Remote Commander. The indication "C" appears on the screen.

Remote Commander.

To go back to main menu

8

Fig. 10.

Press OK The 'SEARCH' position is highlighted and the selected channel is Fig.11.

Press OK until the cursor appears by the next programme position.

now stored. (See Fig. 11.)

Repeat steps 3 to 6 to preset other channels.

Press - to go back to the previous position. To go back to main menu

if you have made a

000 0 000

For programme postbors beyond 15 The display scrolls automatically.

rress + to go back to the previous position.

Keep pressing 4-.
To go back to the normal TV picture Press MENU.

--- 7

Skipping Programme Positions

You can skip unused programme positions when selecting programmes with the PROGR 4τ buttons. However, the skipped programmes may still be called up when you use the number buttons.

- Select Preset with + or and press OK. Press MENU to display the main menu.
- Select Manual Programme Preset with + or and The PRESET menu appears.
- The MANUAL PROGRAMME PRESET menu appears. (See Fig.18.) press OK
- Using +or -, select the programme position which you want to skip and press OK.
 The "SYSTEM" position changes colour.
 - Press + or -until --- appears in the SYSTEM position.
 - Press OK. (See Fig. 19) (See Fig. 18.)
- When you select programmes using the PROGR +/- buttons, the programme position will be skipped. Repeat steps 4 to 6 to skip other programme positions.

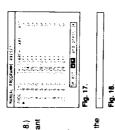


Fig. 19.

Captioning a Station Name

You can 'name' a channel or an input video source using up to five characters (letters or numbers) to be displayed on the TV screen (e.g. ZDF). Using this function, you can easily identify which channel or video source you are watching.

- Press MENU to display the main menu.
- Select Preset with + or - and press OK.
- Select Manual Programme Preset with +or and The PRESET menu appears.
- press OK.
 The MANUAL PROGRAMME PRESET menu appears. (See Fig. 20.)

Press - to go back to the previous position. I you have made a

To go back to main

To go back to the normal TV picture Press MENU. Keep pressing ←.

- Using + or -, select the programme position you want to caption and press OK repeatedly until the first element of the LABEL position is highlighted.
- element will be highlighted. Select other characters in the same way. If you want to leave an element blank, select and press OK. (See Fig. 21.) Select a letter or number with + or - and press OK. The next
 - After selecting all the characters, press OK repeatedly until the cursor appears by the next programme position (at the left margin). Now the caption you chose is stored. (See Fig. 22.)



	П	
	5	
	۶.,	
	,,01 923	
	ľ	
Ę. 26	S 8	Fig. 21.
Ė	~	9

If you try to select a programme that has	been blocked	The message "Locked"	appears on the blank TV	SCreen.
55555	Dress 34			
25556	ect DO and			

3.44.84.88.15 George 2.45.14.9 Du 0000 - 00

÷

Repeat steps 5 and 6 to caption names for other channels.

Manual Fine-Tuning

Normally, the AFT (automatic fine-tuning) is already operating. However, if the picture is distorted, you can use the manual fine tuning function to obtain better picture reception.

- Press MENU to display the main menu.
- Select Preset with +or and press OK. The PRESET menu appears.
- press OK. The MANUAL PROGRAMME PRESE! menu appears. (See Fig. 23.) Select Manual Programme Preset with +or -and
- Using + or -, select the programme position corresponding to the channel which you want to manually fine-tune, and press OK repeatedly until the AFT position changes colour.

- Fine-tune the channel with + or so that you get the best TV reception. As you press the cursor buttons, the frequency changes from -15 to +15. (See Fig. 24.)
 - After fine tuning, press OK. The cursor appears beside the next programme position (at the left margin). (See Fig. 25.) Now the fine-tuned level is stored. Repeat steps 4 to 6 to fine-tune other channels

To reactivate AFT (automatic fine tuning) Repeat from the beginning and select 'ON' in step 5.

Fig. 23. Fig. 24.

Parental Lock

PARENTAL LOCK

Fig. 25.

You can prevent undesirable broadcasts from appearing on the screen. We suggest you use this function to prevent children from watching programmes which you consider unsuitable.

- Press MENU to display the main menu.
- Select Preset with +or and press OK. The PRESET menu appears.
- Select Parental Lock with +or and press OK. The PARENTAL LOCK menu appears. (See Fig. 26.)
- block and press OK.
 The selected PROG number, CH and LABEL change colour indicating that this programme is now blocked. (See Fig. 27.) Using + or -, select the programme position you want to Repeat step 4 to block other programme positions.


Cancelling blocking

On the PARENTAL LOCK menu, select the programme you want to unblock with [14 or 14].

The selected PROG number, CH and LABEL change colour to normal colour indicating that the blocking has been cancelled.

MANUAL PROGRAMME PRESET

1-4. WATCHING THE TV

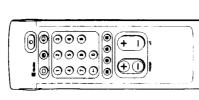

This section explains the basic functions you use while watching TV. Most of the operations can be done using the simple side of the Remote Commander.

Switching the TV on and off

Switching on

Depress Oon the TV.

Switching off temporarily

Press © on the Remote Commander.
The TV enters standby mode and the standby indicator on the front of the TV lights up.

To switch on again

Press ○, PROGR +/-, or one of the number buttons on the Remote Commander.

Switching off completely

Depress (1) on the TV.

Selecting TV Programmes

Press PROGR +/- or press number buttons.

To select a double-digit number

Press -/-., then the numbers. For example, if you want to choose 23, press -/--, 2, and 3.

Adjusting the Volume


and if the standby indicator on the TV is it, the TV is in standby mode. Press ○ or one of the number buttons to switch it on.


If no picture appears when you depress © on the TV

For details of the teletext operation, refer to page 47.

For details of the video input picture, refer to page 51.



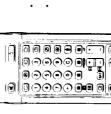

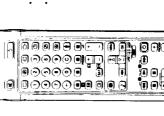

Buttons on the TV

Watching Teletext or Video Input

Watching teletext

Press \leftarrow repeatedly until the desired video input appears. To go back to the normal TV picture, press \bigcirc .

More Convenient Functions

Displaying the on screen indications
Press ③ once to display all the indications. They will disappear after some seconds.
Press ④ twice to have the programme number and label stay on screen. Press twice again to make indications disappear.

Muting the sound. Press ⊄.

Displaying the time

Press (2). This function is available only when teletext is broadcast.

To make the time display disappear, press (2) again.

Press (a) to view the letelaxt.

Press three number buttons to select a page.

Press one of the coloured buttons for fastext operation.

Press GO (PAGE +) or (a) (PAGE -) for the next or preceeding

page. To go back to the normal TV picture, press ○

Watching a video input picture

Use the Full-Function side of the Remote Commander

With the buttons on the TV, you can select programmes, adjust the volume, and select video input sources.

Press [24-€] button repeatedly until the programme number, △ (for volume), or ←) (for video input picture) appears. Then adjust with the →+ buttons.

Press -/+ buttons to switch on the TV from the standby mode. Press -/+ simultaneously to reset picture and sound controls to the factory preset level (RESET function.)

Operating the TV Using the

1-5. ADJUSTING AND SETTING THE TV USING THE MENU

Adjusting the Picture and Sound

Although the picture and sound are adjusted at the factory, you can adjust them to suit your own taste, in addition, you can change the aspect ratio of the TV display for wide screen effect, or set the resolution to obtain a higher quality picture. You can also select dual sound (bilingual) programmes when available or adjust the sound for listening with the headphones.

0

Press

(for picture) or
(for sound) on the Remote Commander.

Press MENU and select Picture Control or Sound Control, then press OK.

The PICTURE CONTROL or SOUND CONTROL menu appears. (See Fig. 28 or Fig. 29)

Using '+ or -, select the item you want to adjust and press OK. The selected item changes colour. (See Fig. 30) ~

Adjust the setting with + or - and press OK.
The cursor appears beside the next item (at the left margin).
(See Fig. 31)
For the effect of each control, see the table below.

Repeat steps 2 and 3 to adjust other items.



Sound SOUNC CONTROL

To switch off the TMER





Ę.

F9.30

To check the remaining time Press ©. timer Select "OFF" in step 3.

Colour

Effect of each control

Press + to go back to the previous position. To go back to the main

Keep pressing e.

To go back to the normal TV picture Press MENU.

you have made a

HUE is only available for NTSC colour system and RESOLUTION does not work for SECAM colour system.

PICTURE CONTROL	Effect
Contrast	Less — + — More
Brightness	Darker — Brighter
Colour	Less — — More
Hue	Greenish Reddish
Sharpness	Softer Sharper
Reset	Resets picture to the factory preset levels
Format	4:3: Normal 16:9: Wide screen effect
Resolution	Normal High : Obtain a higher quality picture

SOUND CONTROL	Effect
Volume	Less More
Trable	Less —— More
Bass	Less More
Balance	More left -+- More right
Reset	Resets sound to the factory green levels
Loudness	off : Normal on : When listening to Journal on and
Space	
Dual Sound	7
Headphones:	The selected mode of the A-O-B indicator on the TV lights up.
Volume	Less —— More
Dual Sound	A : left channel B : Marie de la constante de

Note on LIME OUT
The audio level and the
dust sound mode output
from the C+ jaxk on the
near correspond to the
HEADPHONES
VOLUME and DUAL
SOUND settings.

When wetching video input picture You can select DUAL SOUND to change the sound.

\$

PROGRAMME TABLE

Using the Programme Table

On this table, you can see which channel is preset to which programme position. You can also select programmes using this table. From the main menu, select Programme Table with - and press OK. The PROGRAMME TABLE menu appears. (See Fig. 32) To select a programme using this menu. Select the programme number with +or -and press OK.
The selected programme appears.

To go back to the normal TV picture Press MENU.

To scroll to higher programme numbers, press

Using the Sleep Timer

+ or - and press You can select a time period after which the TV automatically switches into standby mode. From the main menu, select Timer with OK. The Timer menu appears. (See Fig. 33.)

The time period (in minutes) changes as follows: 10 →20→30→40→50→60 →70→80 →90 Press OK. The time period option changes colour. Select the time period with + or -

Fg. 33.

After selecting the time period, press OK. The cursor moves back to the left margin and the timer starts counting.


One minute before the TV switches into standby mode, a message is displayed on the screen.

4


00 . ŏ +

\$

1-6. PIP (PICTURE IN PICTURE)

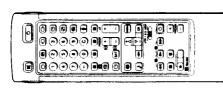

With this function you can display a "PIP screen" (small picture) within the main TV picture. In this way you can watch or monitor the video outbut from any connected eulipment. (for example from a VTB) while watching TV or vice versa. For information about connection of other equipment, refer to page 50.

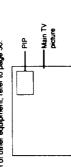

Switching PIP on and off

Press ©.
The PIP screen will be displayed. The PIP picture will come from the source chosen when the TV was last used.

To switch PIP off

Press 🕒 again.

Selecting a PIP source


The symbol t will be displayed at the bottom, left-hand corner of the screen.

Press © repeatedly until the desired PIP source is indicated (e.g. TV, AV1, AV2, YC2, AV3, YC3, AV4, YC4).

f no video source has been connected, the PIP picture will be

Swapping screens noisy


The main screen will switch the picture with the PIP screen.

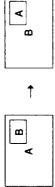

If a TV programme is on the PIP screen and a video source on the main picture, and you want to change channels, first press and then the programme buttons or PROGR +/-

Changing the position of the PIP

Press (g. repeatedly to change the position of the PIP screen within the main screen. There are four different positions available.

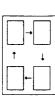

1-7. TELETEXT

TV stations broadcast an information service called Teletext via the TV channels. Teletext service allows you to receive various information pages such as weather reports on news at any time you want. For advanced teletext operation, use the buttons on the Full-Function side of the Remote Commander.

Direct Access Functions

Switching Teletext on and off

Select the TV channel which carries the teletext broadcast you want to watch. Press (a) to switch on leletext.

A letetext page will be displayed (usually the index page). If there is no letetext broadcast, P100 is displayed on the information line at the top of the screen.

To switch teletext off Press ().

Selecting a teletext page With direct page selection

Use the number buttons to input the three digits of the chosen

page number. If you have made a mistake, type in any three digits. Then reenter the correct page number.

With page-catching

Select a teletext page with a page overview (e.g. index page).

Using + or - select the desired page and press OK. The requested page will appear in a few seconds Accessing next or preceding page

Press (PAGE +) or (PAGE -).

The next or preceding page appears.

Superimposing the teletext display on the TV programme

Press

once in teletext mode or twice in TV mode. Press (E) again to resume normal teletext reception.

Preventing a teletext page from being updated

Press ((HOLD). The HOLD symbol ' d'splayed on the information line.

Press (to resume normal teletext reception

Using Fastext

With Fastext you can access pages with one key stroke. When a Fastext page is broadcast, a colour-coded menu will appear at the bottom of the screen. The colours of this menu correspond to the red, green, yellow and blue buttons on the Remote Commander.

Press the corresponding coloured button on the Remote Commander which corresponds to the colour-coded menu. The page will be displayed after some seconds.

4

Teletext errors may occur if the broadcasting signals are weak.

With the simple side of the Remote Com-mander

You can switch teletext on and off, operate Fastext, and directly select page numbers.

Note RGB input source cannot be displayed in PIP.

To select the desired time, enter four digits for the desired time (e.g. 1800) using the number buttons and press CW. The selected time is displayed at the top in the left-handed corner. At the requested time, the page will be displayed.

Press

to resume normal teletext mode

SUBPAGE

You may want to select a particular teletext page from several subpages which are rotated automatically. If you want to select one subpage, follow the operations below:

Using + or -, select ON for the SUBPAGE setting and press OK.

To select the desired subpage, enter four digits using PROG +/- or the number buttons. (e.g. enter 0002 for the second page of a sequence)

User Page Bank System

You can store up to 30 pages in the Teletext page bank system. In this way you have quick access to the pages you watch frequently.

Storing pages

There are 5 'banks' (A to E) for 5 teletext stations. In each bank you can store 6 preferred pages (P1 to P6).

Press (if Teletext is not on already) and MENU to show the TELETEXT MENU display.

Select the desired bank with + or - and press OK. The cursor will go to the first position (P1) of the preferred pages. Select Preset User Pages with + or - and press OK

4**3** 14 3.44

10 TO 10 TO

3

Fig. 39.

Input the three digits of your first preferred page with the number buttons and press OK.

The cursor will go to the second position.

Repeat step 4 for the other 5 page numbers you want to preset. If you do not want to preset at 6 page numbers available, press OK without inserting any number. After having finished the presenting press OK repeatedly until the cursor appears besides the next bank at the left margin.

Select Allocate Bank with + or - and press OK. ø

Select the programme position for which you want to preset pages with + or - and press OK. (See Fig. 39)

Select the desired bank with + or - (Banks A to E are available) and press OK. Repeat steps 3 to 8 for the other 4 banks available.

Displaying User Pages

Se act DID and Dress

Bate 8 SER PAGES

Select MENU.

Select User Pages with + or - and press OK. A table of the stored preferred pages will be displayed.

Select the desired page with + or - and press OK. The page will be displayed after some seconds. (See Fig. 40)

ş

To cancel the request Select "OFF" for the SUBPAGE setting and press OK.

This TV is provided with a menu-guided teletext system. When teletext is switched on, you can use the menu buttons to operate the teletext menu. Select the teletext menu functions in the

Using the Teletext Menu


Press MENU. The menu will be superimposed on the teletext

display. (See Fig. 34)

8

Using + or -, select the teletext function you want and press OK. (See Fig. 35)



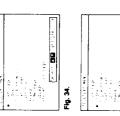

See page 49 for information about presetting and operating the user pages.

USER PAGES/PRESET USER PAGES

The index will give you an overview of the contents of the

INDEX

eletext and the page numbers. TOP/BOTTOM/FULL





Press + for Top to enlarge the uper haff, - for Bottom to enlarge the lower one and OK for Full to resume the normal size.

Fig. 36)







Press (=) to resume normal teletext reception. TEXT CLEAR

Some of the features may not be available depending on the Telefext service.

After having selected the function, you can watch a TV programme while waiting for a teletext page to be displayed. (See Fig. 37)

Press (=) to resume normal teletext reception

SUBTITLES

Your teletext service will inform you if a TV programme is subtitled. After having selected the function the subtitles will be displayed.

REVEAL

Using + or -, select ON to reveal the information or OFF to conceal it again. Sometimes pages contain concealed information, such as answers to a quiz. The reveal option lets you disclose the information. After having selected the function, an information line "REVEAL ON/OFF" will be displayed. (See Fig. 38)

TIME PAGE

Press (

to resume normal teletext reception.


Your teletext service will inform you, if a time coded page is available. You may have a page (e.g. an alarm page) displayed at a certain time.

Press OK to select ON for the Time Page setting. The TV programme you were watching before you selected Time Page is restored. An information window will be displayed at

5

CONNECTING AND OPERATING OPTIONAL EQUIPMENT 4

Connecting Optional Equipment You can connect optional audio-video equipment to this TV such as VTRs, video disc players, and stereo systems.

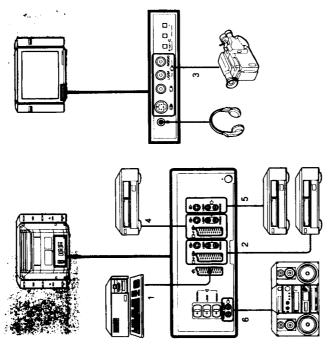

00000000000000000000000000000000000000	You can also selet and → buttons or press → buttons or Selecting the Selecting the The ⊕2 ⊕2 contraction on the symbol of the	Output modes Symbol ⊕2/-® 1 ⊕
D ₁		

Selecting input Press -© repeatedly to select the input source. The symbol of the selected input source will appear. To go back to the normal TV picture Press ○.	Input signal	Audio/video input through the - 3 1 connect	RGB input through the 👵 1 connector	Audio/video input through the ⊕2/-62 ∞	S video input through the (0.2/-602 or -60
Selecting Input Press © repeated The symbol of the se To go beck to the n Press ©.	Symbol	- Ф	Ģ	8	8 9
Specting Input with PPOGR +- or number buttons Vor can present video input sources to the programme positions so that you can select them with PPOGR +- or running PPOGR +- or details, see Present vor can be present vor can	page 37.) (6

Ģ

This section explains how to view the video input picture (of the video source connected to your TV), and how to select the output signal using direct access buttons or the menu system.

Selecting input and output

Symbol	input signal
- 9	Audio/video input through the - T connector
Ģ	RGB input through the - 1 connector
გ	Audio/video input through the G-2/-62 connector
8 2	S video input through the G-2/-62 or -62 connector
က မှ	Audio/video input through €3 and €3 on the front
င မွ	S video input through the -63 connectors on the front (4-pin connector)
4 Թ	Audio/video input through the (3-4/-6) 4 connector
@	S video input through the (3-4/-184 or -184 connector (4-pin connector)

You can also select the input mode using the $\frac{P-d-\frac{d}{2}}{2}$ and then press $-d$ buttons on the TV. In this case, first select $-\frac{d}{2}$, and then press $-d$ buttons to select the input. Selecting the output The $-\frac{d-2J}{2}-\frac{d}{2}$ connector outputs the source input from the other connectors.	Press G+ repeatedly to select the output. The symbol of the selected output source appears.	nodes	Symbol Θ -2/-6)2 connector outputs	The audio/video signal from the 🖰 1 connector	The audio/video signal from the ⊕2/ ©2 connector	The audio/S video signal from the ⊕2/-6 connector	The audio/video signal from the €3, €3 connectors	The audio/S video signal from the -€3, -€3 connectors	The audio/video signal from the 34/-604 connector	The audio/S video signal from the (3-4/-6) 4 connector
You can also sele and -/+ buttons o press -/+ buttons Selecting the The ⊕2/-€3 c other connectors.	Press ⊕ The symbo	Output modes	Symbol	-	ф ~	ф 2	ტ ტ	ф ф	ф Ф	4

₽

The audio/video signal from the C3, C3 connectors The audio/video signal from the ⊕-4/--® 4 connector The audio/video signal from the ∏ aerial terminal

Acceptable input signal	Available output signal
1 Normal audio/video and RGB signal	Video/audio from TV tuner
2 Normal audio/video and S video signal	Video/audio from selected source
3 Normal audio/video and S video signal	No outputs
4 Normal audio/video and S video signal	Video/audio displayed on TV screen (monitor out)
5 No inputs	S video/audio signal displayed on TV screen (monitor out)
6 No inputs	Audio signal (variable)

When connecting a monaural VTR Connect only the white (-) jack to both the TV and VTR.

(univarios or (univarios or (univarios or (univarios) and c. (ortorinarios) signata. Separatin the vitorinarios) signata provents them from intedering with ore another, and therefore improves picture quality (especially luminarios). This TV is equipped with 3 S-Video input jacks through which these separated signate can be input directly.

S-video input (Y/C imput) Video signals may be separated into Y

If the picture or the sound is distorted Move the VTR away from the TV.

output of the VTR to the advantage of the IV. We recommend that you tune in the wideo signal to programme number '0' For details see Preset channels manually on page 37.

1-9. FOR YOUR INFORMATION

Troubleshooting

Here are some simple solutions to problems which may affect the picture and sound.

No picture (screen is dark), no sound	• Plug the TV in.
	• Press 0 on the TV. (If 0 indicator is on, press \bigcirc or a programme number on the Remote Commander.)
	Check the aerial connection.
	 Check if the selected video source is on.
	• Turn the TV off for 3 or 4 seconds and then turn if on again using (i)
Poor or no picture (screen is dark), but good sound	Poor or no picture (screen is dark), but good sound • Press RAIGHTRESS, CONTRAST and COLOUR
Good picture but no sound	• Press Δ +.
	 Check loudspeakers connection.
	 if of isplayed on the screen, press of.
No colour for colour programmes	• Press • to enter the PICTURE CONTROL menu, select RESET, then press 0K.
Remote Commander does not function.	Replace batteries.

If you continue to have problems, have your TV serviced by qualified personnel. Never open the casing yourself

Checking and selecting the input and output sources using the menu

You can display the menu to see which input sources are selected for the TV screen and PIP screen, and which output source is selected. You can also select them on the menu display. Select Video Connection with +or - and press OK. The VIDEO CONNECTION menu appears. (See Fig. 41) You can see which source is selected for the TV and PIP input, and for the output. If you want to select the input and output on this menu, go on to the next step.

Select TV Screen (input source for the TV screen). PIP(input source for the PIP screen), or output (output source) with + or - and press OK. One of the source items changes colour. (See Fig. 42)

The selected source is confirmed, and the cursor appears. (See Fig. 44) Select the desired source with ... + or ... (See Fig. 43) For details about each source, see the table on page 23. Press OK.

Repeat steps 2 to 4 to select the source for other inputs or outputs.

Remote Control of Other Sony Equipment

You can use the TV Remote Commander to control most of Sony remote-controlled video equipment such as: Beta, 8mm or VHS VTRs or video disc players.

Set the VTR 1/2/3 MDP selector according to the equipment you want to control: Tuning the Remote Commander to the equipment

VTR 1: Beta or ED Beta VTR


VTR 2: 8mm VTR


VTR 3: VHS VTR


Use the buttons indicated in the illustration to operate the additional equipment. MDP: Video disc player

If your video equipment is furnished with a COMMAND MODE selector; set this selector to the same position as the VTR 1/2/3 MDP selector on the TV Remote Commander.

If the equipment does not have a certain function, the corresponding button on the Remote Commander will not operate.

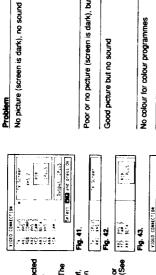


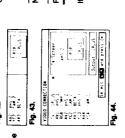

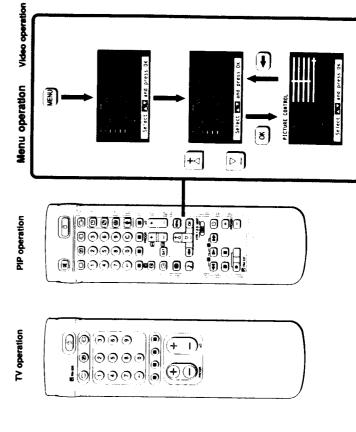


SECTION 2 DISASSEMBLY


2-1-1. REAR COVER REMOVAL (25 inch, 29 inch)

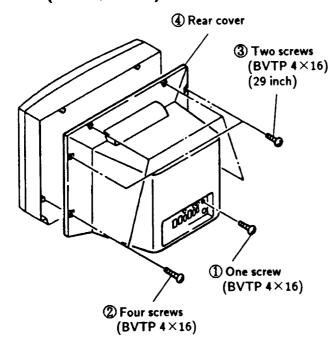

2-1-2. REAR COVER REMOVAL (34 inch)

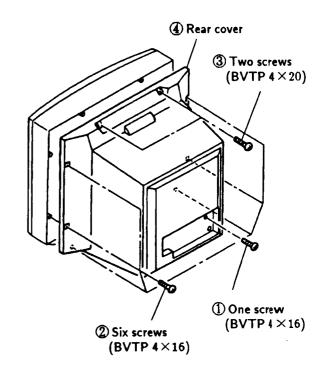


2-2-1. CHASSIS ASSY REMOVAL (25 inch, 29 inch)

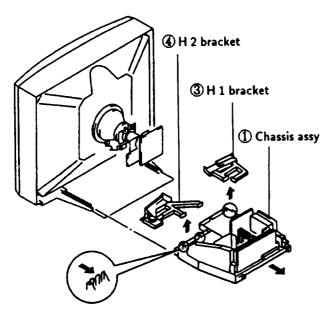

② Push the four claws of the main chassis in the direction of the arrow and remove the H 1 and H 2 bracket upwards.


2-2-2. CHASSIS ASSY REMOVAL (34 inch)

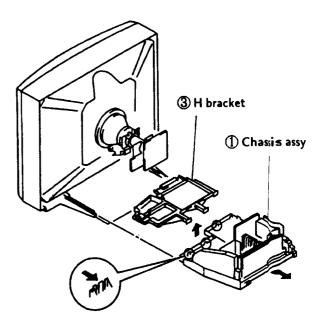


② Push the three claws of the main chassis in the direction of the arrow and remove the H bracket upwards.

2-3. SERVICE POSITION


※ Remove the H bracket from the main chassis assy and then perform the following servicing.
(Refer to 2-2. CHASSIS ASSY REMOVAL)

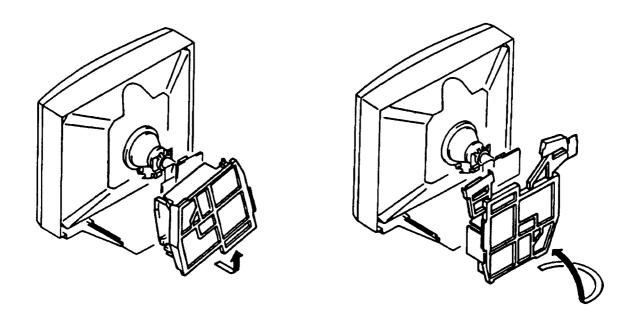


2-4. B 1, M AND V BOARDS REMOVAL

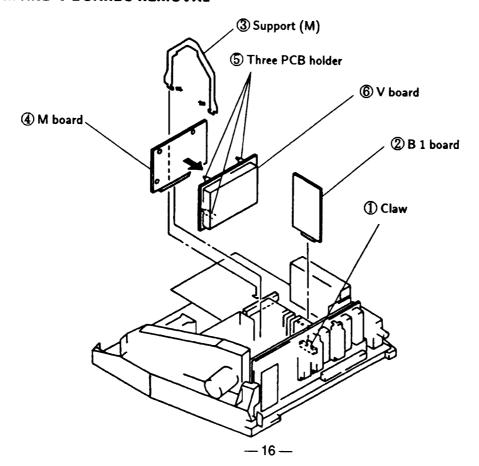


2-5. EXTENSION BOARD

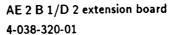


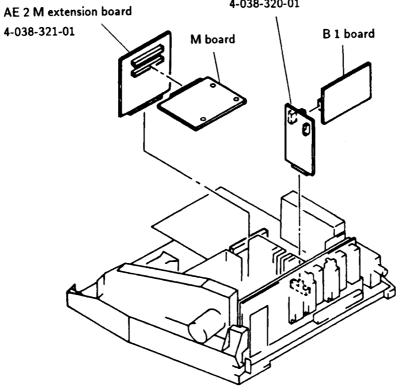


2-6. F BRACKET REMOVAL

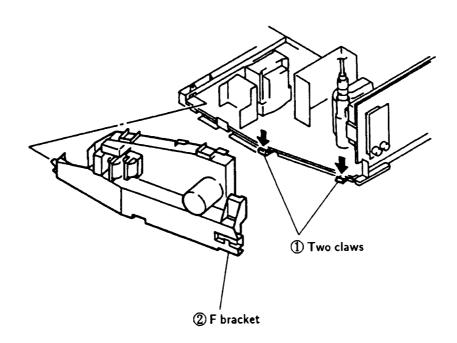


2-7. JAND K BOARDS REMOVAL

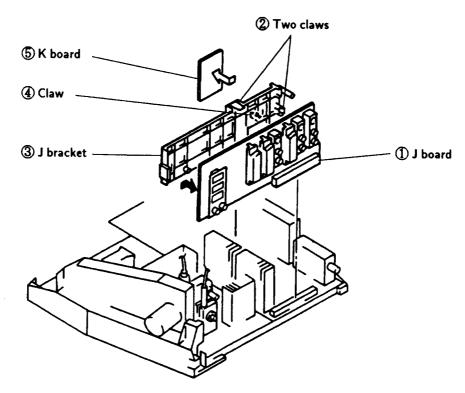


2-8. P BOARD REMOVAL

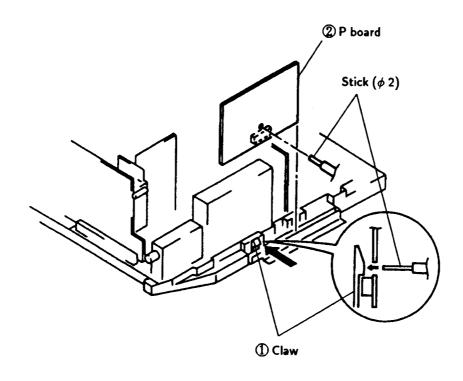


2-9-1. WIRE ROD

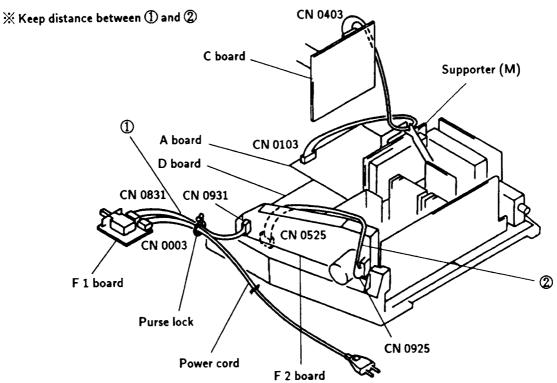


2-9-2. WIRE ROD

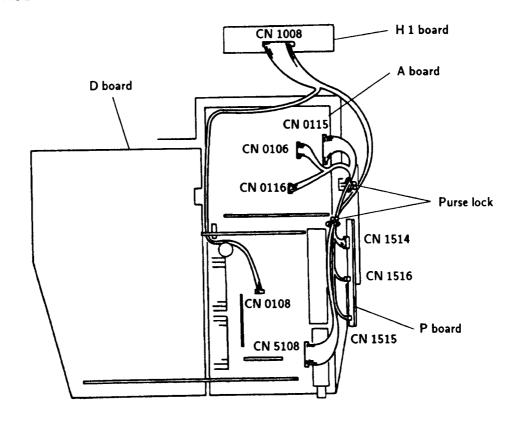

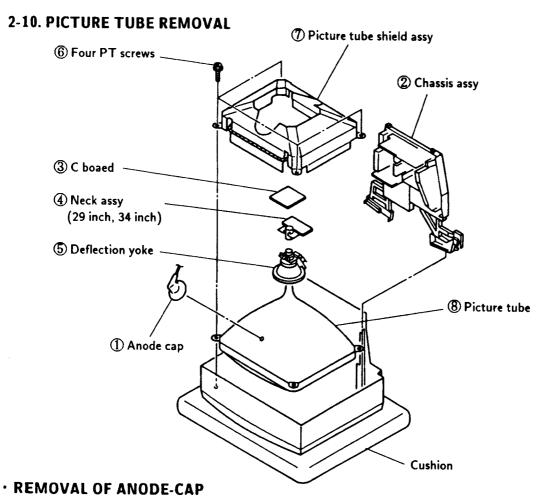


NOTE: Short circuit the anode of the picture tube and the anode cap to the metal chassis, CRT chield or carbon painted on the CRT, after removing the anode.

REMOVING PROCEDURES

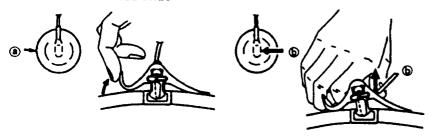


- ① Turn up one side of the rubber cap in the direction indicated by the arrow ⓐ.
- ② Using a thumb pull up the rubber cap firmly in the direction indicated by the arrow ⑤.

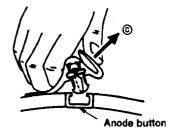


③ When one side of the rubber cap is separated from the anode button, the anode-cap can be removed by turning up the rubber cap and pulling up it in the direction of the arrow ⑥.

HOW TO HANDLE AN ANODE-CAP

- ① Don't hurt the surface of anode-caps with sharp shaped material!
- ② Don't press the rubber hardly not to hurt inside of anode-caps!
 A material fitting called as shatter-hook

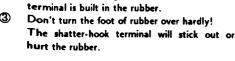



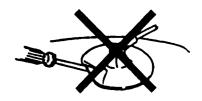

SECTION 3 SET-UP ADJUSTMENTS

- When complete readjustment is necessary or a new picture tube is installed, carry out the following adjustments.
- Unless there is specific instruction to the contrary, carry out these adjustments with the rated power supply.
- Unless there is specific instruction to the contrary, set the controls and switches this way:

☆ Brightness 50%

- Carry out the following adjustments in this order:
- 1. Beam landing
- 2. Convergence
- 3. Focus
- 4. White balance

Note: Testing equipment required.

- 1. Color bar/pattern generator
- 2. Degausser
- 3. DC power supply
- 4. Digital multimeter
- 5. Oscilloscope

Preparations:

- In order to reduce the influence of geomagnetism on the set's picture tube face it east or west.
- Switch on the set's power and degauss with the degausser.

3-1. BEAM LANDING

- Input the white signal with the pattern generator.
 Contrast
 Brightness
 Brightness
- 2. Position neck assy as shown in Fig.3-2.
- 3. Set the pattern generator raster signal to red.
- 4. Move the deflection yoke to the rear and adjust with the purity control so that the red is at the center and the blue and the green take up equally sized areas on each side. (See Fig. 3-1 3-3)
- 5. Move the deflection yoke forward and adjust so that entire screen is red. (See Fig. 3-1)
- 6. Switch the raster signal to blue, then to green and verify the condition.
- 7. When the position of the deflection yoke has been decided, fasten the deflection yoke with the screws.
- 8. If the beam does not land correctly in all the corners, use a magnet to adjust it. (See Fig.3-4)


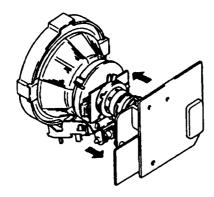


Fig.3-1

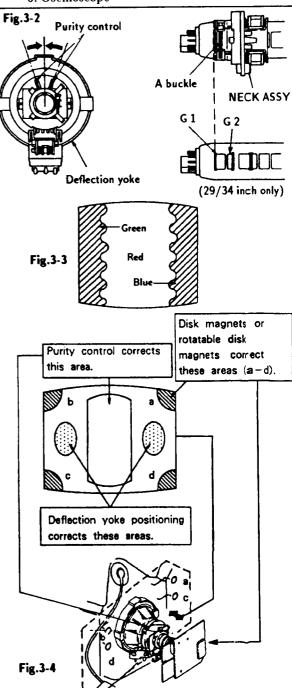


3-2. CONVERGENCE

Preparations:

- Before starting this adjustment, adjust the focus, horizontal size, and vertical size.
- Minimize the brightness setting.
- Provide dot pattern.


(1) Horizontal and vertical static convergence

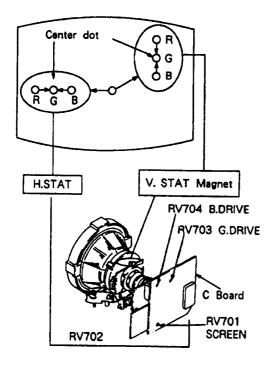


- (Moving horizontally), adjust the H.STAT control so that the red, green, and blue points are on top of each other at the center of the screen.
- 2. (Moving vertically), adjust the V.STAT magnet so that the red, green, and blue points are on top of each other at the center of the screen.
- 3. If the H.STAT variable resistor cannot bring the red, green, and blue points together at the center of the screen, adjust the horizontal convergence with the H.STAT variable resistor and the V. STAT magnet in the manner given below.


 (In this case, the H.STAT variable resistor and the V.STAT magnet influence each other)


 Tilt the V.STAT magnet and adjust the static convergence by opening or closing the V.STAT magnet.

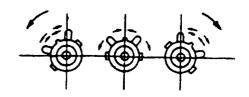


4. If the V.STAT magnet is moved in the direction of the (a) and (b) arrows, the red, green, and blue points move as shown below.

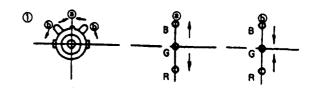


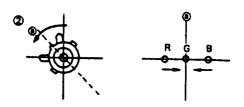

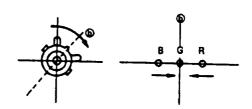

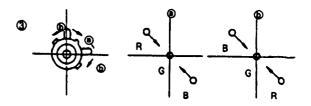

• Operation of BMC (Hexapole) Magnet

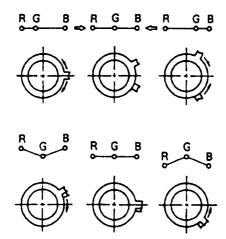


 The respective dot positions resulting from moving each magnet interact, so be sure to perform adjustment while tracking.

Use the H.STAT VR to adjust the red, green, and blue dots so they coincide at the center of screen (by moving the dots in the horizontal direction).




Preparations:

- Before starting this adjustment, adjust the horizontal static convergence and the vertical static convergence.
- 1. Slightly loosen the deflection yoke screws.

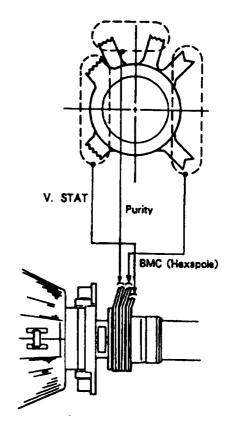

- 2. Remove the deflection yoke spacer.
- 3. Move the deflection yoke as shown in the figure below and optimize the convergence.
- 4. Tighten the deflection yoke screws.
- 5. Install the deflection yoke spacer.

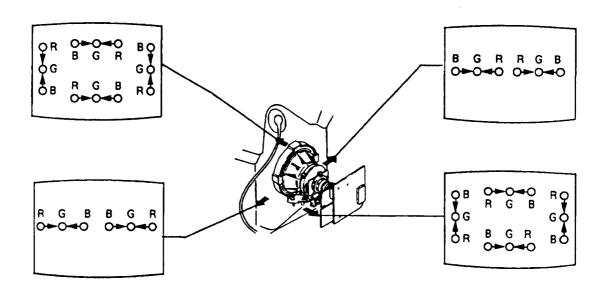


(3) Dynamic convergence adjustment (34 inch only)

- 1. Adjust horizontal convergence located at the center position of the screen with H STAT VR.
- Enter into service mode. (Refer to the section 2
 "Electrical Adjustment" on how to enter service
 mode.)
- 3. Select CXA 1526 on menu.
- 4. Select each item and adjust them so that each item attains optimal convergence.
- 5. Press OK button to write the data.

cx/	A 1526	
1	DC SHIFT	(32)
2	UPPER Y BOW	(4)
3	LOWER Y BOW	(5)
4	H AMP	(48)
5	H TILT	(29)
6	UPPER COR BOW	(32)
7	UPPER TILT	
8	LOWER COR BOW	(32)
9	LOWER TILT	(32)

R.G.B.dots movement on the screen of the set

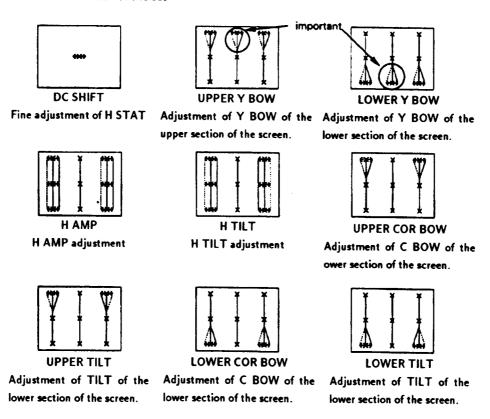


At this time, H.TILT, H.AMP, UPPER TILT, UPPER COR, BOW, LOWER TILT, and LOWER COR, BOW look like all the same, but the movement of the


right and left dots are reverse in all the TILT system. (Pay attention to the dotted lines.)

(4) Screen corner convergence

If you cannot adjust corner convergence properly, correct them with permalloy.

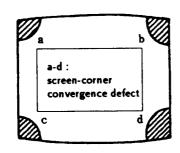




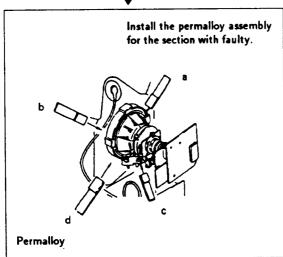

3-3. FOCUS

Adjust the focus to optimize the screen.

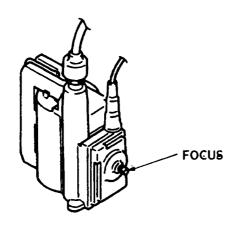

3-4. WHITE BALANCE

Screen G2 Setting

- 1. Input the dot signal from the pattern generator.
- 2. Set the picture brightness control to its lowest level.
- 3. Apply 180V DC to the R,G, and B cathodes with an external power supply.
- While watching the picture, adjust G 2 control RV 701 (Screen) to the point just before the return lines disappear.

White balance adjustment

- 1. Receive all-white signal.
- 2. Enter into service mode. (Refer to the section 4 "Electrical Adjustment" to how to enter service mode.)
- 3. Select CXA 1587 on menu.

09	SUB BRIGHT	ADJ.
10	SUB HUE	7
11	VM LEVEL	2
12	NR LEVEL	0
13	ABL MODE	0
14	G-DRIVE	ADJ.
15	B-DRIVE	ADJ.
16	G-AUTO CUT OFF	ADJ.
17	B-AUTO CUT OFF	ADJ.
18	R-MANUAL CUT OFF	ADJ.
19	G-MANUAL CUT OFF	ADJ.
20	B-MANUAL CUT OFF	ADJ.

- 4. Set picture to MAX.
- 5. Adjust G-DRIVE B-DRIVE with **(I)**, **(I)** buttons so that the white balance becomes optimum.
- 6. Press OK button to write the data for each tem.
- 7. Set picture to MIN.
- 8. Adjust G-AUTO CUT OFF, B-AUTO CUT OFF, R
 -MANUAL CUT OFF, G-MANUAL CUT OFF and
 B-MANUAL CUT OFF with . bittons so
 that the white balance becomes optimum.
- 9. Press OK button to write the data for each tem.


SECTION 4 CIRCUIT ADJUSTMENTS

4-1. ELECTRICAL ADJUSTMENTS

Service adjustment to this model can be performed with the supplied remote commander, RM-830 (for 25/29 inch) or RM-830 (for 34 inch)


HOW TO ENTER INTO SERVICE MODE

1. Turn on the main power switch of the set while pressing any two buttons on the front panel.

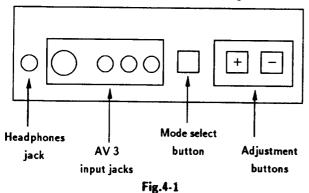

2. "TT" will appear on the upper right corner of the screen.

Command operation in service mode

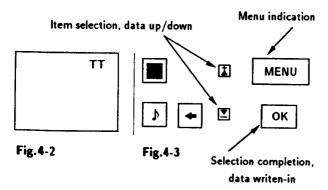

3. Press the MENU button of the commander to get the menu on screen.

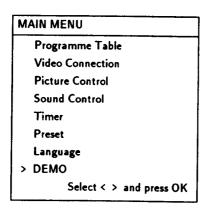


Fig:4-4

- 4. Press the ♣ and ▶ buttons of the commander and move > to DEMO.
- 5. Press OK button to proceed to the next menu.
- 6. The menu of fig.4-5 will appear on screen. Select DEVICE corresponding to the adjustment item from the table on next page.

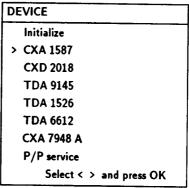


Fig.4-5

7. If adjustment item is CXA 1587, press the

button and move > to CXA 1587.

□

CXA 1587 S

	Item No.	Adjustment item	Data Amout
	01	PICTURE	3
	02	COLOR	1
	03	BRIGHT	1
	04	HUE	1
	05	SHARPNESS	7
	06	RGB PICTURE	3
	07	SUB CONTRAST	ADJ.
	80	SUB COLOR	ADJ.
>	09	SUB BRIGHT	ADJ.
	10	SUB HUE	7
	11	VM LEVEL	2
	12	NR LEVEL	0
	13	ABL MODE	0
	14	G-DRIVE	ADJ.
	15	B-DRIVE	ADJ.

- 8. Press OK button to get the next selection menu.
- 9. Press ∑ button and move > to the adjustment it em and press OK button.
- 10. Press the ▲ and ▶ buttons to change the data im order to comply each standard.
- 11. Press OK button to write data.
- 12. Turn off the power to quit service mode when completing the adjustment.

CXA 1587 S

01	PICTURE	53
02	COLOR	31
03	BRIGHT	31
04	HUE	31
05	SHARPNESS	7
06	RGB PICTURE	13
07	SUB CONTRAST	ADJ.
08	SUB COLOR	ADJ.
09	SUB BRIGHT	ADJ.
10	SUB HUE	7
11	VM LEVEL	2
12	NR LEVEL	0
13	ABL MODE	0
14	G-DRIVE	ADJ.
15	B-DRIVE	ADJ.
16	G-AUTO CUT OFF	ADJ.
17	B-AUTO CUT OFF	ADJ.
18	R-MANUAL CUT OFF	ADJ.
19	G-MANUAL CUT OFF	ADJ.
20	B-MANUAL CUT OFF	ADJ.
21	GAMMA LEVEL	0
22	DC TRANSFER RATIO	3
23	DINAMIC PICTURE	0
24	Y FILTER ADJ	ADJ.
25	Y DELAY TIME	15
26	Y DELAY SWITCH 1	0
27	Y DELAY SWITCH 2	1
28	SHARPNESS LIMIT	ON
29	ALL BLK	OFF
30	H SHIFT	32
31	DAC TEST	ON
32	PRE/OVER SHOOT	7
33	SHARPNESS FO	2
34	SUB SHARPNESS	3
35	R MUTE	OFF
2.0	G MUTE	OFF
36	GWIOTE	<u> </u>

CXA	1526	ADJ.
1	DC SHIFT	(32)
2	UPPER Y BOW	(4)
3	LOWER Y BOW	(5)
4	H.AMP	(48)
5	H TILT	(29)
6	UPPER COR BOW	(32)
7	UPPER TILT	(32)
8	LOWER COR BOW	(32)
9	LOWER TILT	(32)

34 inch only

	
AGING 1	OFF
AGING 2	OFF
AKB OFF	ON
INHIBIT RGB	OFF
FORCED RGB	OFF
V/2 V	OFF
AXIS	PAL
HUE SW	OFF
V EXTENTION	OFF
AFC 1	1
AFC 2	0
AFC OFF	ON
REF.POSITION	0
	AGING 2 AKB OFF INHIBIT RGB FORCED RGB V/2 V AXIS HUE SW V EXTENTION AFC 1 AFC 2 AFC OFF

CXD 2018 Q

01	V SIZE	ADJ.
02	V SHIFT	ADJ.
03	S CORRECTION	ADJ.
04	V LINEARITY	ADJ.
05	H SIZE	ADJ.
06	PIN AMP	ADJ.
07	TILT	ADJ.
08	UPPER CORNER	ADJ.
09	LOWER CORNER	ADJ.
10	V BOW	ADJ.
11	ANGLE	ADJ.
12	HV COMP.V	13
13	HV COMP.H	8
14	FRAME SHIFT	OFF
15	FREE RUN 60 Hz	OFF
16	SYSTEM 60 Hz	OFF
17	ASPECT WIDE	OFF
18	DOUBLE SCAM	OFF
19	INTERLACE	ON
20	H SHIFT	32
21	N/S CORRECTION	ADJ.
L	<u> </u>	

Typical Value (OSD based) when receiving PAL Philips pattern.

TDA 6612	ADJ.
Stereo-Separation	(30)

Should be adjusted twice 4:3 and 16:9 mode.

Y FILTER ADJUSTMENT

- 1. Input PAL RED pattern.
- 2. Connect an oscilloscope to CN 0403 ① pin (R OUT) on the C board.
- 3. Enter into service mode and press 3, 8.
- 4. Adjust data by △ or ▽ to minimize the chroma element of CN 0403 ① pin.

SUB BRIGHTNESS ADJUSTMENT


- 1. Input Phillips pattern.
- 2. Enter into service mode and press 23.
- Adjust data so that 0-IRE of the grey scale and CUT
 -OFF 20-IRE glitter slightly.

SUB CONTRAST ADJUSTMENT

- Input a video that contains small 100% area on the Black Back ground.
- 2. Enter into service mode and press 01 to have PIC max followed by 21.
- 3. Adjust data so that 2.5 Vp-p can be obtained at ① CN 0403 (R out).

SUB COLOR ADJUSTMENT

- 1. Input PAL color bar.
- 2. Connect an oscilloscope to CN 0403 ③ pin (B OUT) on the C board.
- 3. Enter into service mode and press 22 of CXA 1587, 8 SUB COLOR.
- 4. Adjust data so that the right sides of the waveform will be the same.

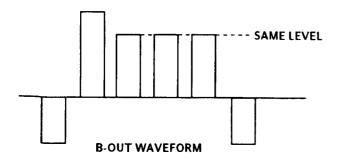

STEREO-SEPARATION ADJUSTMENT

- Input 1 kHz stereo signal to the L-ch and 400 Hz stereo signal to the R-ch.
- 2. Enter into service mode and press 19.
- 3. Adjust data so that sound does not leak to the R-ch and the L-ch.


DRIVE AND CUT OFF


See direct test mode list attached and refer to sub brightness or such for adjustment method.

DEFLECTION SYSTEM ADJUSTMENT

- 1. Enter into service mode and select CXD 2018.
- 2. Select and adjust each item in order to get an optimum image.


01	V SIZE	ADJ.
02	V SHIFT	ADJ.
03	S CORRECTION	ADJ.
04	V LINEARITY	ADJ.
05	H SIZE	ADJ.
06	PIN AMP	ADJ.
07	TILT	ADJ.
08	UPPER CORNER	ADJ.
09	LOWER CORNER	ADJ.
10	V BOW	ADJ.
11	ANGLE	ADJ.
12	HV COMP.V	13
13	HV COMP.H	8
14	FRAME SHIFT	OFF
15	FREE RUN 60 Hz	OFF
16	SYSTEM 60 Hz	OFF
17	ASPECT WIDE	OFF
18	DOUBLE SCAM	OFF
19	NON INTERLACE	ON
20	H SHIFT	32
21	N/S CORRECTION	ADJ.

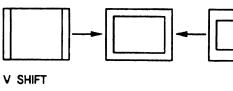

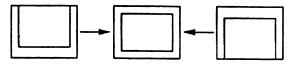




V SIZE

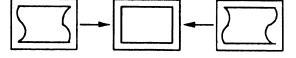



V LINEARITY

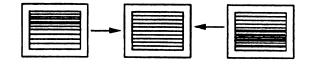




PIN AMP

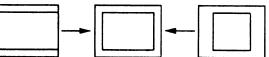


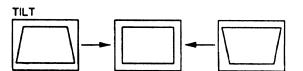


UPPER CORNER PIN

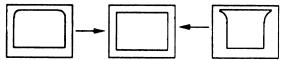


LOWER CORNER PIN

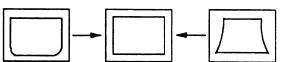


V BOW

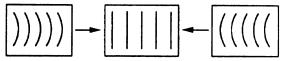

ANGLE

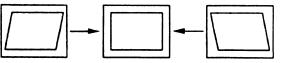

H SHIFT

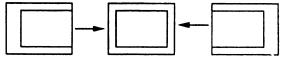


3. Press OK button to write the data.

If menu display may disturb the adjustment press of to clear, to resume it, press again.

4-2. VOLUME ELECTRICAL ADJUSTMENTS

+B (+135 V) ADJUSTMENT (RV 601)


D BOARD

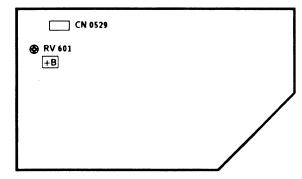

- 1. Turn on the power of the TV set.
- 2. Connect a digital multi-meter to ① pin of CN 0529 on D board.
- 3. Adjust RV 601 on D board to +135 V.

H.FREQ ADJUSTMENT (RV 506)


M BOARD

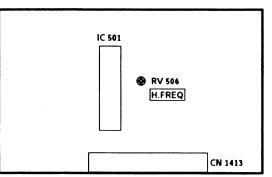

- 1. Connect GND to 12 pin of IC 501 on M board.
- 2. Connect a frequency counter to 4 pin of IC 501.
- 3. Adjust RV 506 on M board to 15,625+100 Hz.
- 4. Remove 12 pin of IC 501 from GND.


TEXT CLOCK ADJUSTMENT (CT 01)

V BOARD

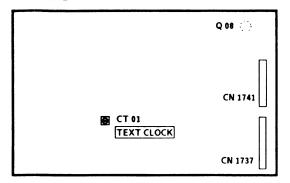

- 1. Get TEXT MENU on screen.
- 2. Connect GND and the base of Q 08 on V board.
- 3. Adjust CT 01 on V board so that the MENU stands still as much as possible.

AGC ADJUSTMENT (IF BLOCK)

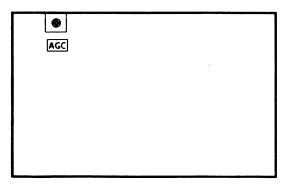

- 1. Receive off-air signal.
- 2. Adjust AGC VR so that there is no snow noise and cross-modulation.
- 3. Change receiving channel and confirm status.

4-3. T

Is avai by pre

08

16

4-3. TEST MODE 2:

Is available by pressing Test button two times, OSD "TT" appears. The functions described bellow are available by pressing the two numbors. To release the Test Mode 2, press two times 0, or switch TV in Standby Mode.

01 p 02 p 03 \ 04 \	picture maximum picture minimum
02 F 03 V 04 V	picture minimum
03 \ 04 \	
04 \	
	Volume 35%
	Volume 50%
05	Volume 65%
06_ ١	Volume 80%
07	Aging Condition (Volumin., Picture max., Brightness
١,	max., Aging 2 Mode of CXA 1587, TDA 2595 is
- 1	locked to CXA 1587 via PIN 34 of μ -Con.)
08	Shipping Condition (Analog Values are RESET due
	to factory setting, Prog 1 is selected, TT Mode is
	switched off)
09	dummy
10	Tenth entry is deleted
11	Balance
12	Hue
13-14	dummy
15	Read factory setting from NVM
	Reads Volume, Balance, Treble, Bass, Brightness,
	Contrast, Hue, Sharpness, Colour values from ROM
	to the actual used values (Last Power Memory)
16	Save actual used values as RESET values
	Memorize actual used values Balance, Treble, Bass,
	Hue, Sharpness at RESET position in NVM
17	Preset Lavel for AV Sources
18	dummy
19	Stereo Seperation
20	Tenth entry is deleted
21	Sub Contrast
22	Sub Colour
23	Sub Brightness
24-29	dummy

30	Tenth entry is deleted		
31	Green Drive		
32	Blue Drive		
33	Green Cut Off (Auto Cut Off)		
34	Blue Cut Off (Auto Cut Off)		
35	Red Cut Off (Manual Cut Off)		
	(Auto Cut Off is switched off)		
36	Green Cut Off (Manual Cut Off)		
	(Auto Cut Off is switched off)		
37	Blue Cut Off (Manual Cut Off)		
	(Auto Cut Off is switched off)		
38	Y-Filter adjustment (Trap is switched off and TDA		
	9145 is switched in forced NTSC Mode)		
39	dummy		
40	Tenth entry is deleted		
41	Default setting of CXA 1587		
	(Only in Plog 99 available)		
42	Default setting of CXA 2018		
	(Only in Plog 99 available)		
43	Default setting of CXA 1526		
	(Only in Plog 99 available)		
44	(all Port High) Not yet		
45	(all Port High) Not yet		
46-48	dummy		
49	Erease the NVM Testbyte (this byte detects already		
	stored NMV's) After selecting this function, switch		
	TV Off and On \rightarrow the NVM will be preset by μ -		
	Controller. (Not the channel data)		

Note: For No. 35, 36, 37 and 38 special pressing (AKB, forced Color Mode, Trap) is selected.


After selecting a new Test Mode Number, the AKB is switched ON, the Trap is switched On and TDA 9145 is switched to Auto Search Mode.

In Test Mode 2 the Menu display is switchable by Speaker-Off button.

4-4. ERROR MESSAGE

Self diagnos system can operates as follows.

• When MP can't get the acknowledge back from the device, LED starts flashing according to the table as attached.

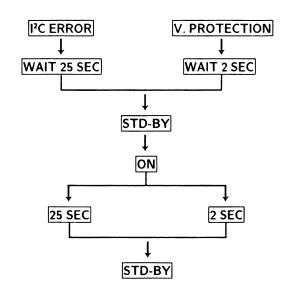

In case of more errors in parallel, the blinking error shows max. Priority according to the error number (e.g. error 2 and error 5 appears together, then LEDs shows error 2).

TABLE OF ERRORS

ERROR COUNT	IC TYPE	FUNCTION
1	I C BUS	SDA low
2	X 24 C 16	EEPROM
3	SDA 3202	Tuner PII
4	TDA 9145	Colour decoder
5	CXA 1587	RGB/Jungle
6	TDA 6612	Sound processor
7	CXD 2018	V deflection
8	CXA 1545	AV switch
11	SDA 5248	Text
13		V protection


No IK return

Stand by LED blinking

4-5. ERROR II C BUS DIAGNOSIS SYSTEM IN AE 2 CHASSIS AVAILABLE

For all ICs in AE 2 chassis which are necessary to get picture and sound there is a built in error I²C Bus diagnosis system.


In case of no acknowledge bit, LED A and LED B starts blinking as shown.

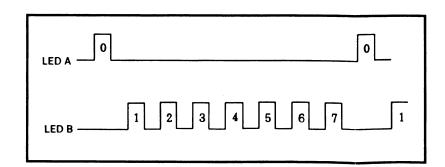


stands


ise and


5-1. BLOCK DIAGRAMS (1)

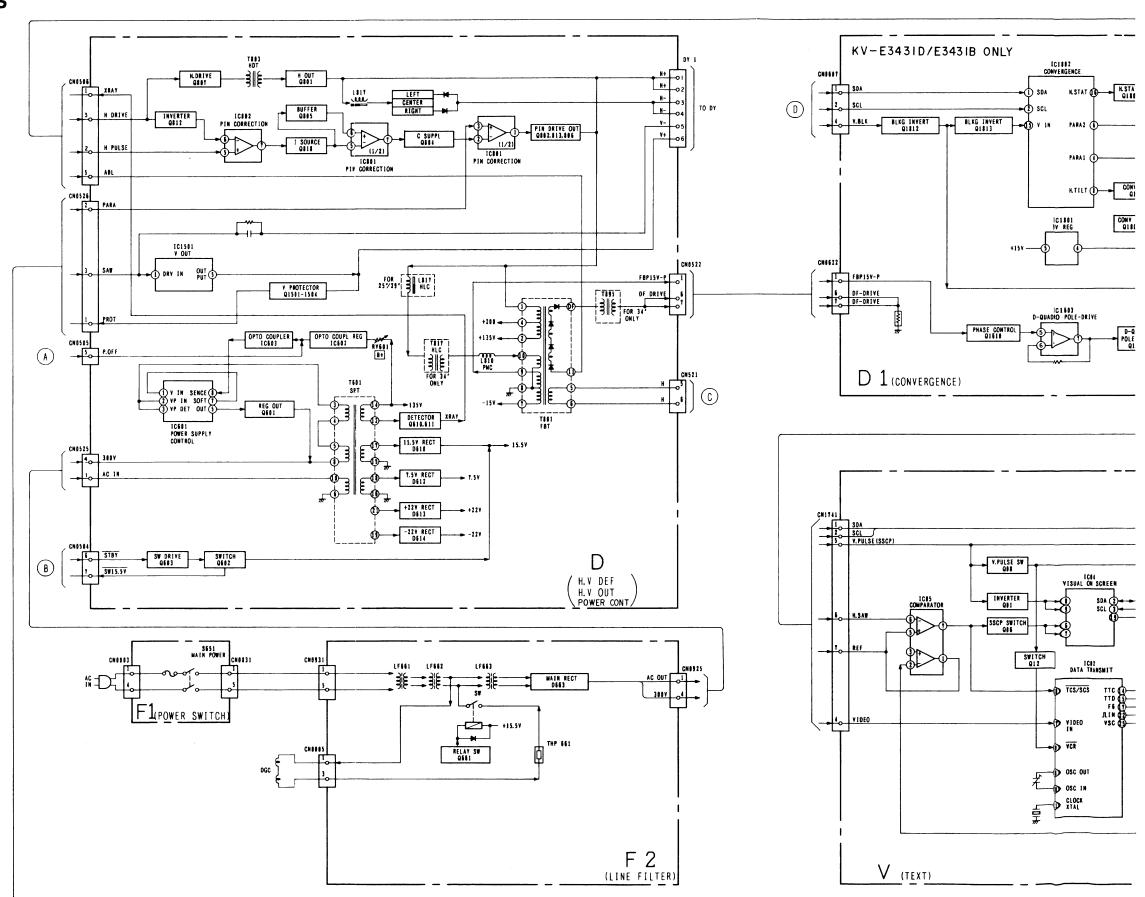

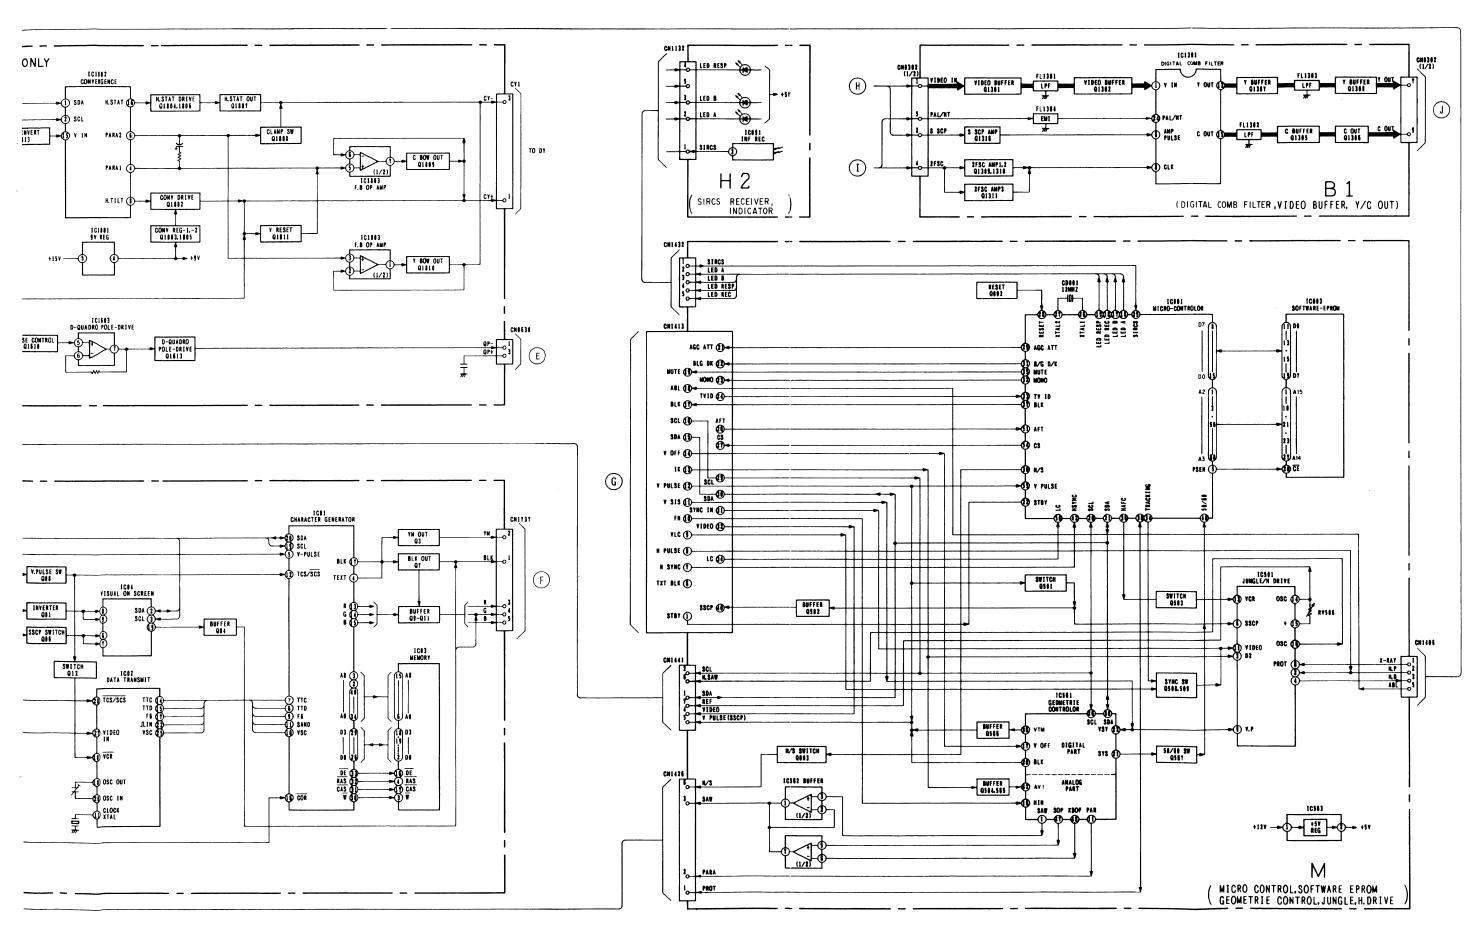


5-2. BLOCK DIAGRAMS (2)

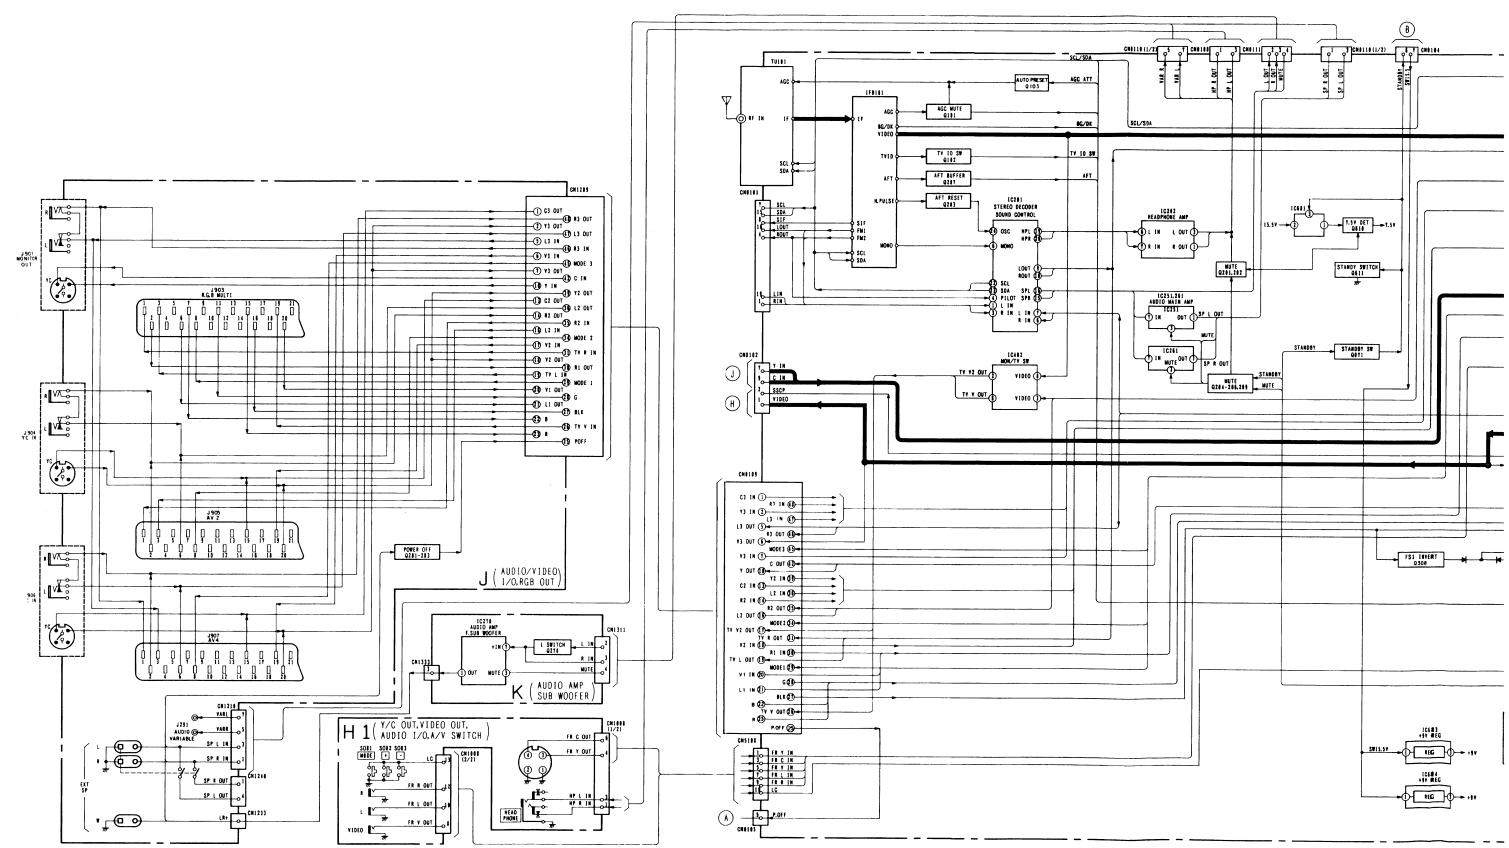

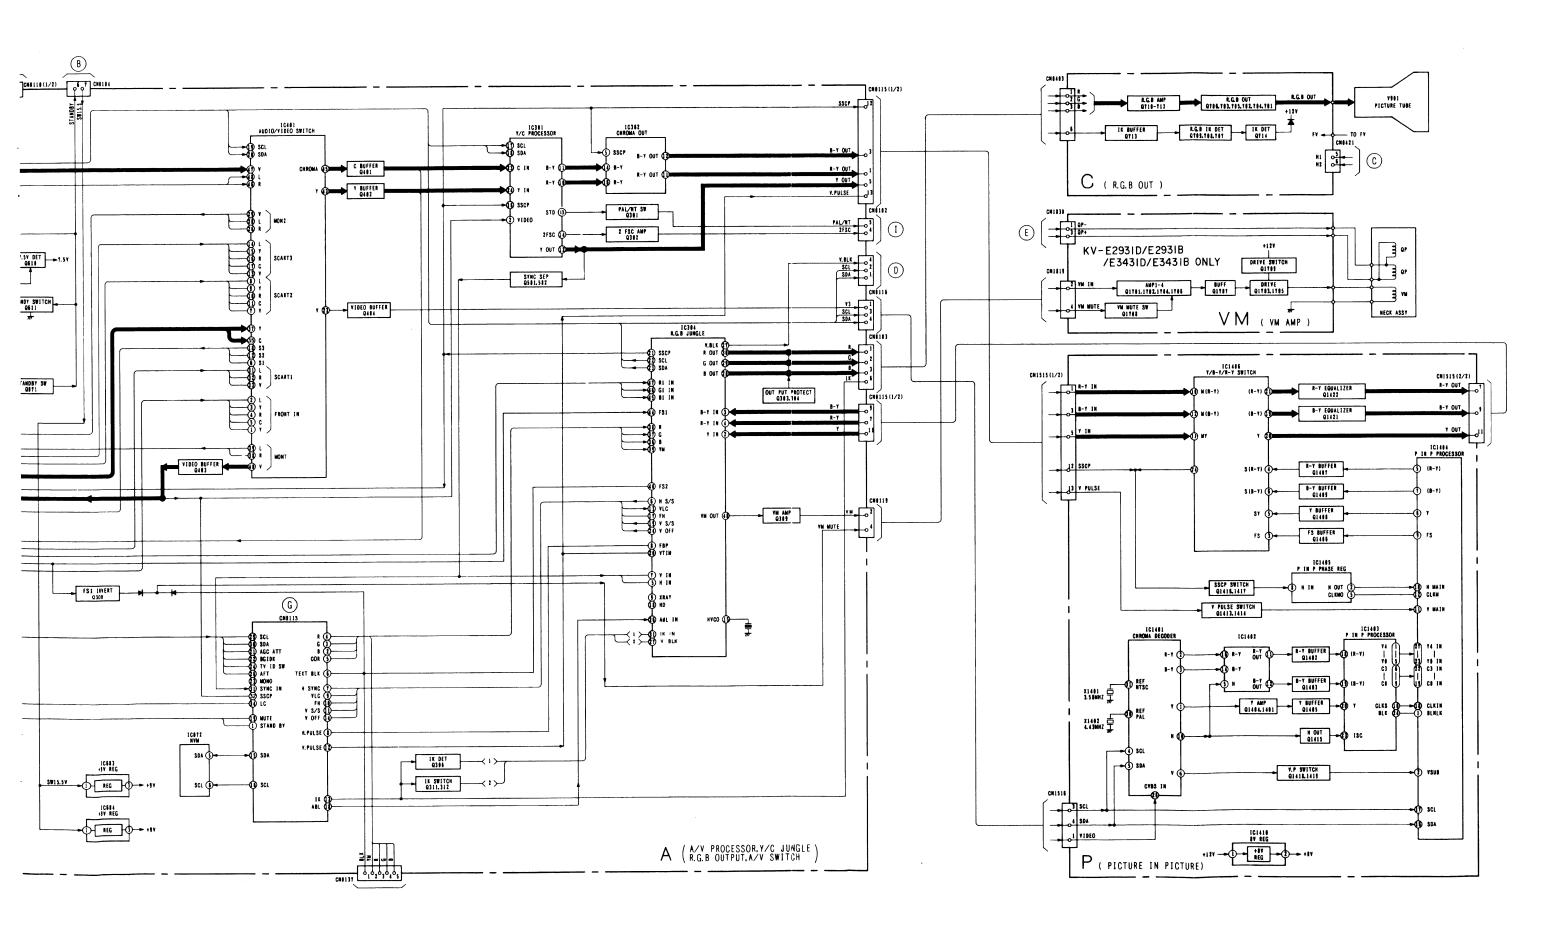

5-3. CIRCUIT BOARDS LOCATION

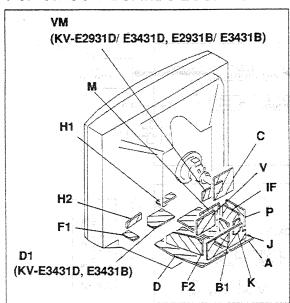

5-4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

— Conductor Side —

- · All capacitors are in uF unless otherwise noted. pF: μμF 50WV or less are not indicated except for electrolytics and tantalums.
- · All electrolytics are in 50V unless otherwise noted.
- · All resistors are in ohms.
- $k\Omega = 1000\Omega$, $M\Omega = 1000K\Omega$
- · Indication of resistance, which does not have one for rating electrical power, is as follows.

Pitch: 5 mm

Rating electrical power 1/4W

- · METAL FILM (:RN) resistors in 1%, 1/6W unless otherwise noted.
- · Chip resistors are 1/10W otherwise noted.
- METAL CHIP (:RN-CP) resistors in 0.5%, 1/6W unless otherwise noted.
- : nonflammable resistor.
- Δ : internal component.
- : panel designation, or adjustment for repair.
- · All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
- · ___: earth-ground.
- · +: earth-chassis.

- All voltages are in V.
- Voltage are do with respect to ground unless otherwise
- Readings are taken with a 10 M Ω digital multimeter.
- · Readings are taken with a color-bar signal input.
- · Voltage variations may be noted due to normal production tolerance.
- No mark : PAL or COMMON

• () : SECAM

- 1 1:NTSC 4.43
- < >:NTSC 3.58 •: 8+ bus.
- signal path. (RF)
- Circuled numbers are waveform references.

Reference information

RESISTOR : RN METAL FILM

: RC SOLID

NONFLAMMABLE CARBON : FPRD

NONFLAMMABLE FUSIBLE : FUSE

NONFLAMMABLE WIREWOUND : RW

NONFLAMMABLE METAL OXIDE : RS

NONFLAMMABLE CEMENT : RB : ※

ADJUSTMENT RESISTOR

COIL : LF-8L MICRO INDUCTOR CAPACITOR : TA TANTALUM

STYROL : PS : PP POLYPROPYLENE

: PT MYLAR

METALIZED POLYESTER : MPS

METALIZED POLYPROPYLENE : ALB **BIPOLAR**

HIGH TEMPERATURE : ALT

: ALR HIGH RIPPLE

The components identified by shading and mark Λ are critical for safety. Replace only with part number specified.

Note:


Les composants identifiés par un tramé et une marque ▲ sont critiques pour la sécurité. Ne les remplacer que par une pièce portant le numéro spécifié.

[LINE FILTER]


IAC IN, POWER SWI

[Y/C OUT, VIDEO OUT, AUDIO I/O, A/V SWITCH]


- F2 Board -

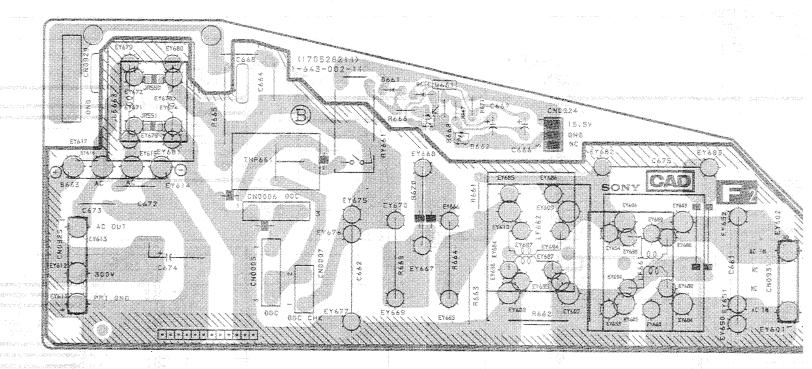

- F1 Board -

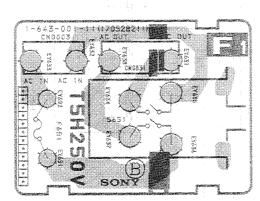

- H1 Board -

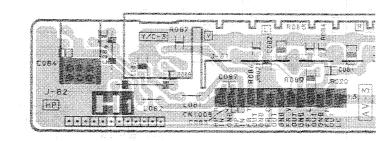

KV-E2531D/E2931D/E3431D KV-E2531B/E2931B/E3431B RM-830 RM-830 RM-832

KV-E2531D/E2931D/E3431D KV-E2531B/E2931B/E3431B RM-830 RM-830 RM-832




J [AUDIO/VIDEO VO]


H2


REMOTE SENSOR, A.B SAT AND RES INDICATOR


— J Board —

- H2 Board -

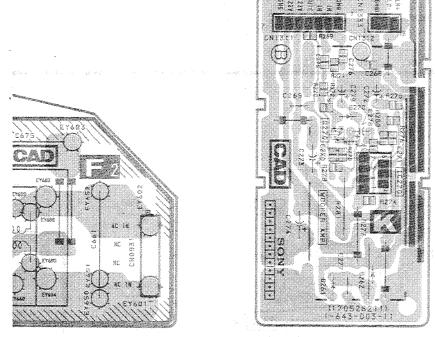

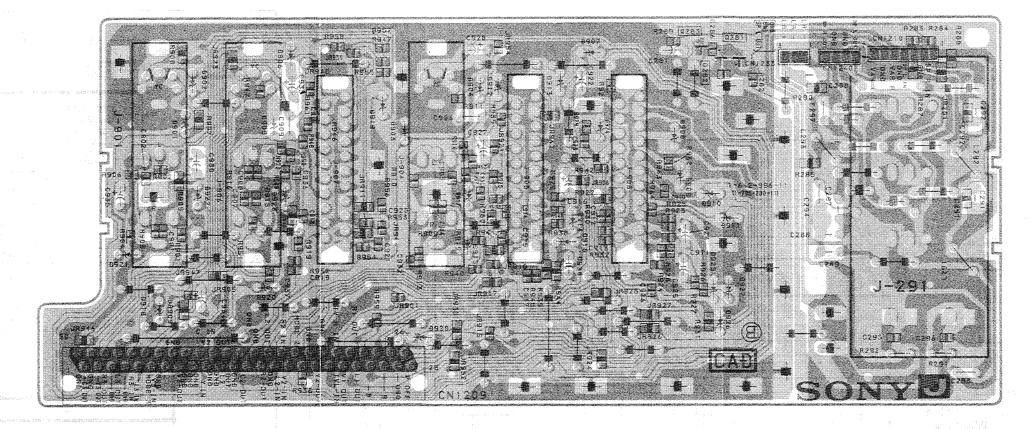

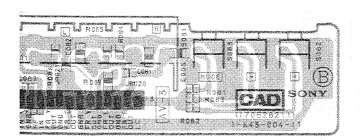


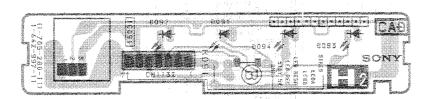


· Pattern from the side which enables seeing.


• : Pattern of the rear side.




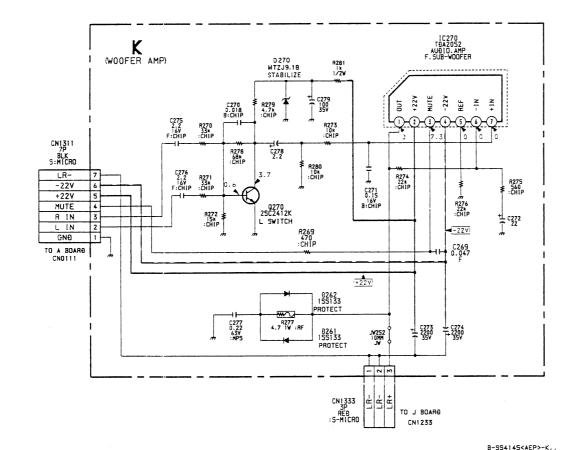



K BOARD IC270 TDA2052

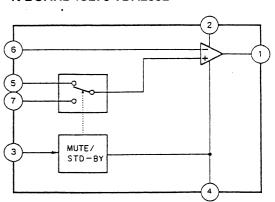


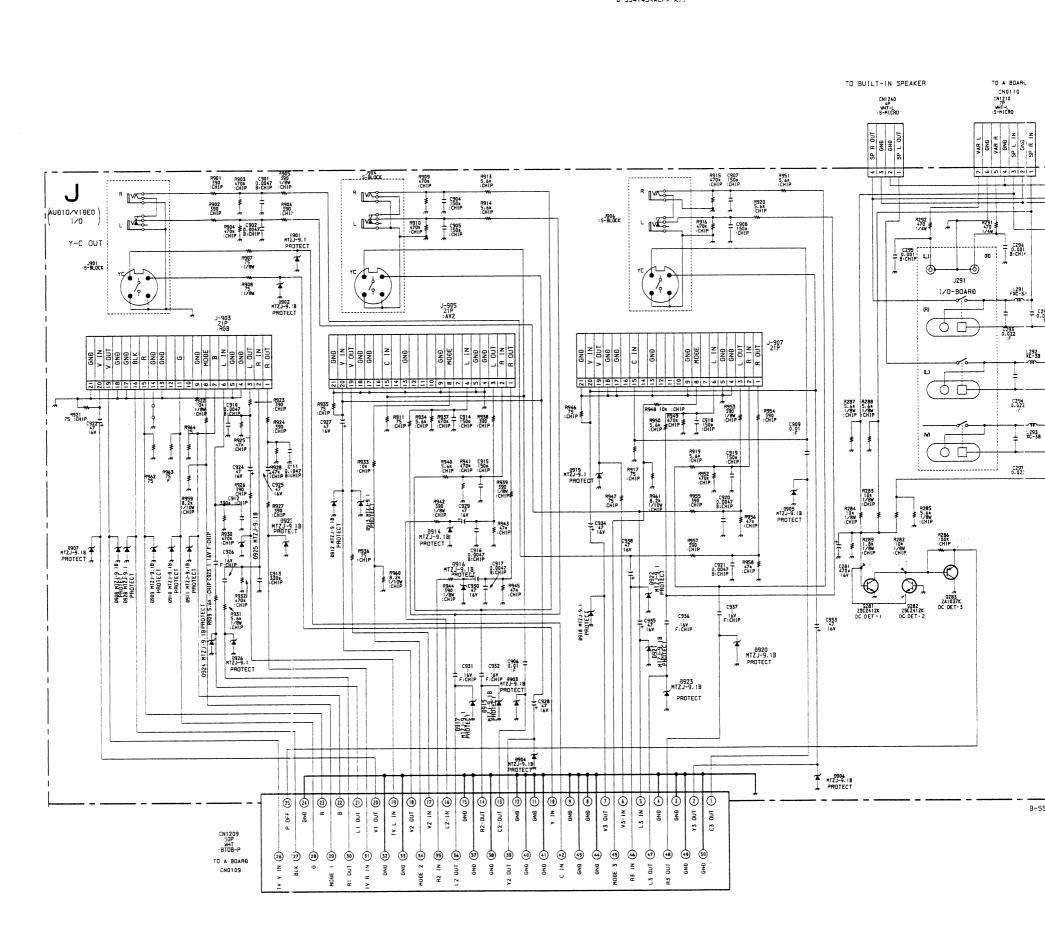


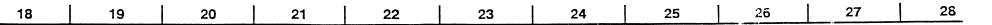

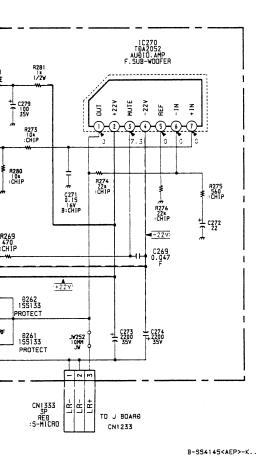

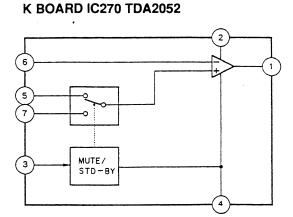

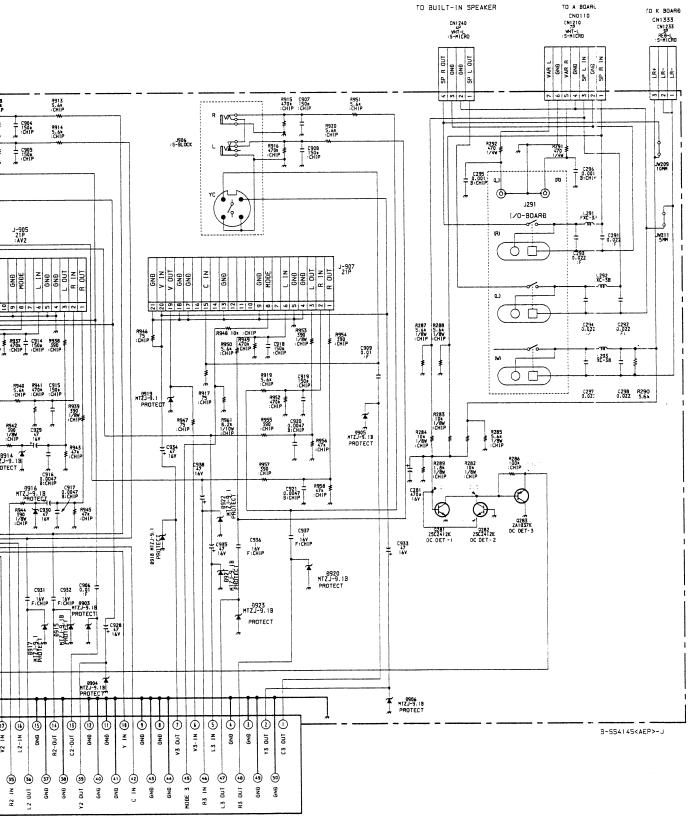

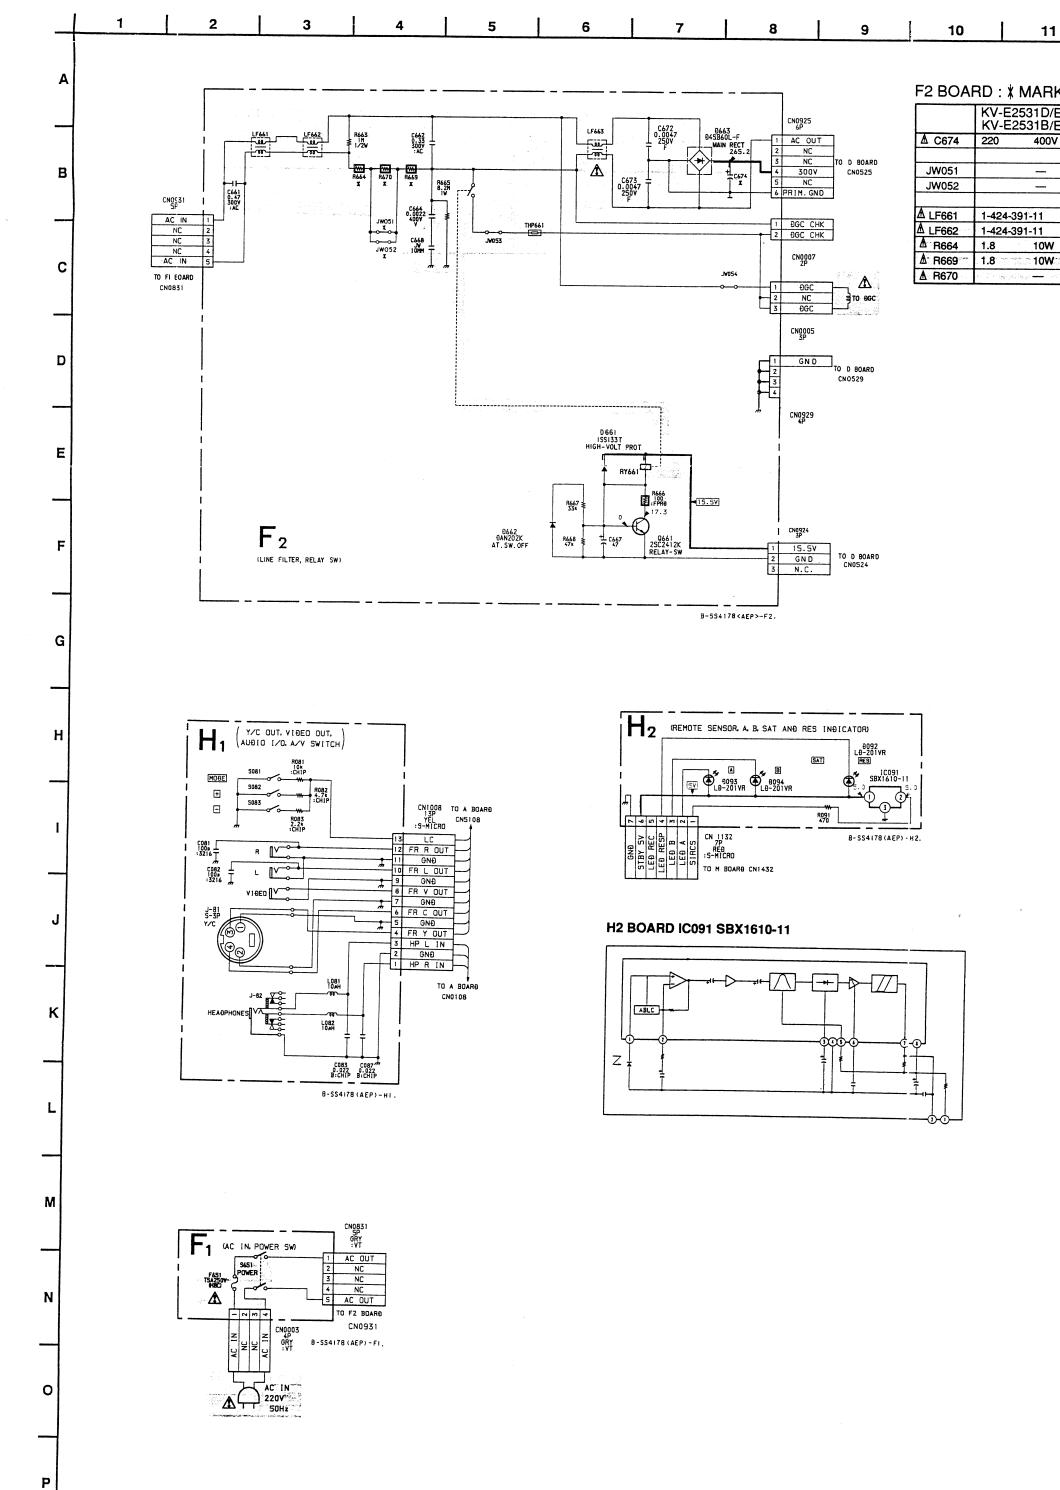



11

400V

10W


10W

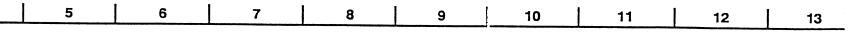

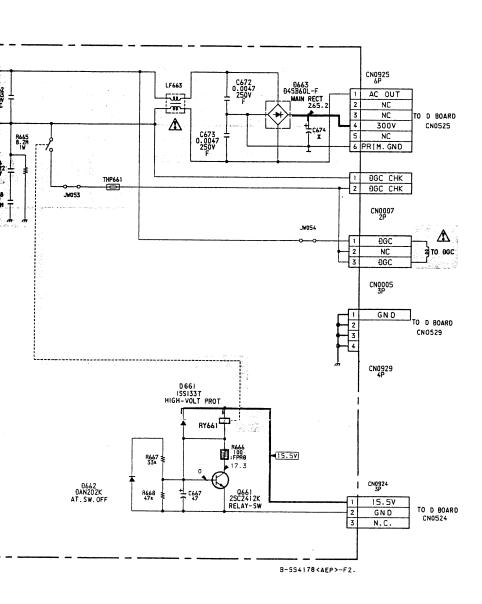



F2 BOARD: X MARK


	KV-E2531D/E2931D KV-E2531B/E2931B	KV-E3431D KV-E3431B
∆ C674	220 400V	330 400V
JW051		5MM
JW052		5MM
∆ LF661	1-424-391-11	1-424-436-11
∆ LF662	1-424-391-11	1-424-436-11
⚠ R664	1.8 10W : RB	1.2 10W : RB
∆ R669 ~~	1.8 10W : RB	1.2 :RB
∆ R670	n de Francisco de Francisco de Pro-	1.2 10W : RB

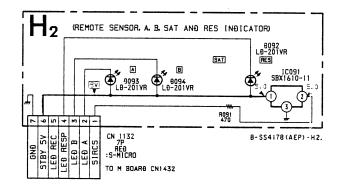



H2 BOARD IC091 SBX1610-11

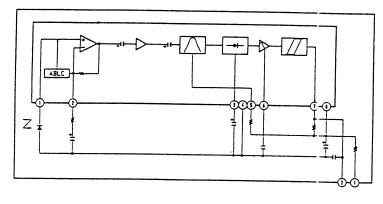

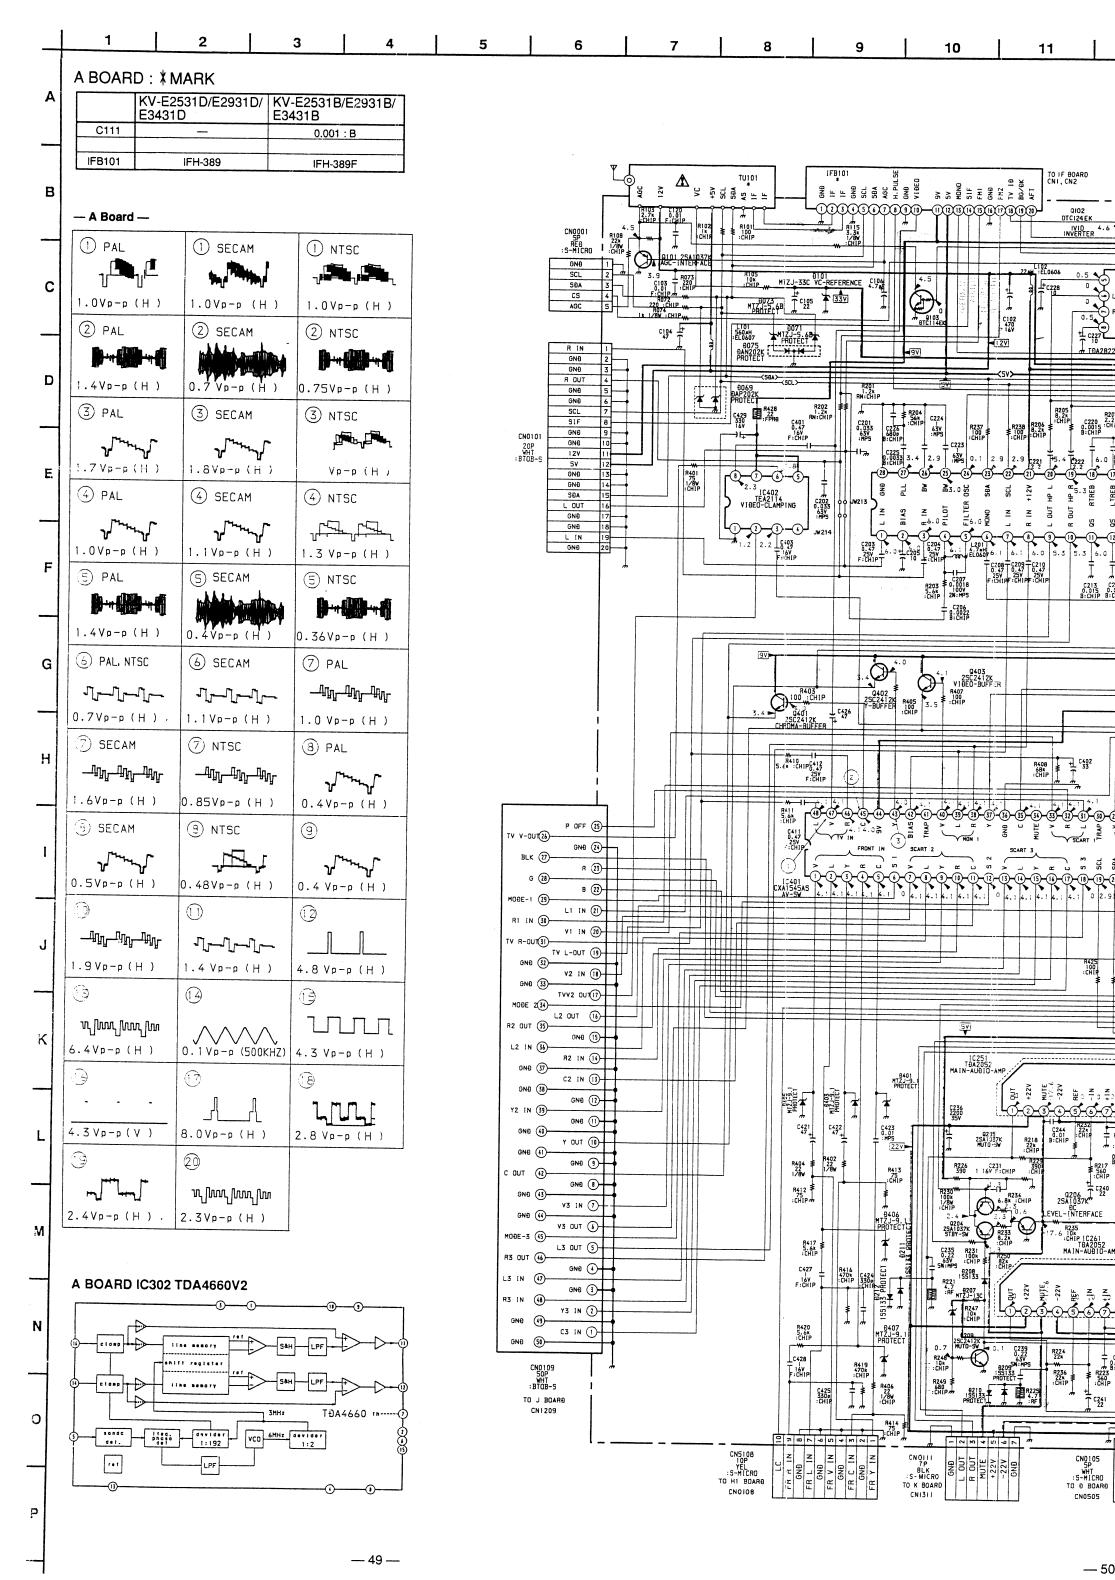

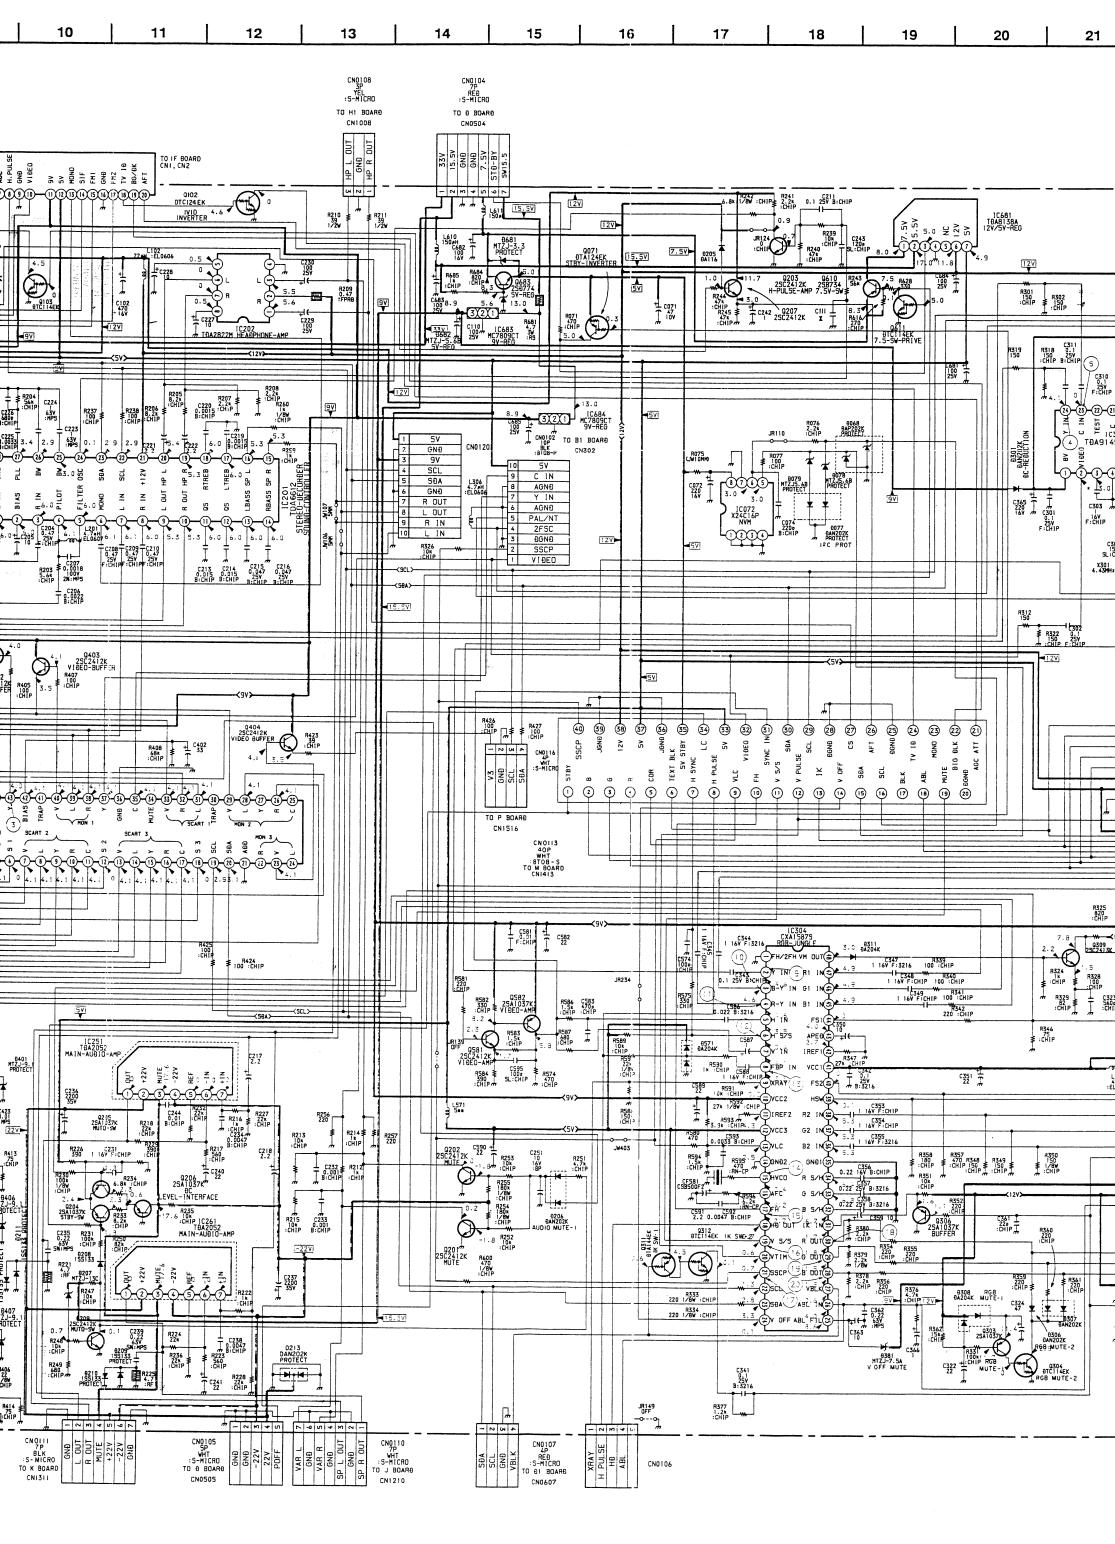


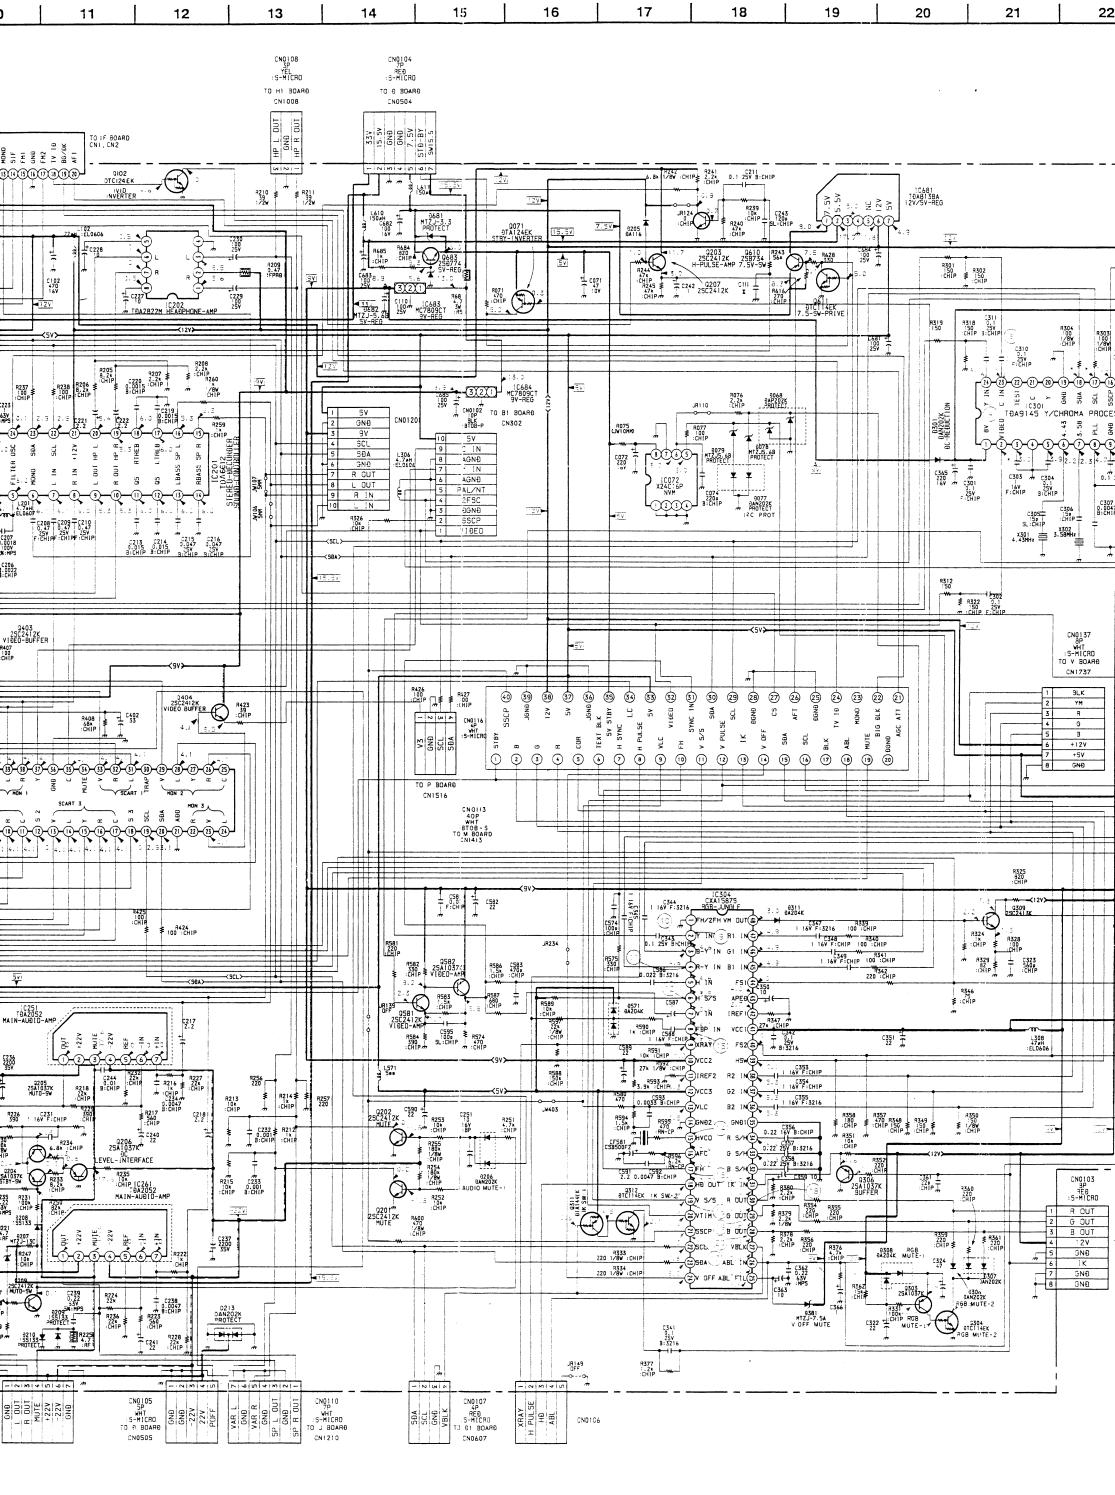

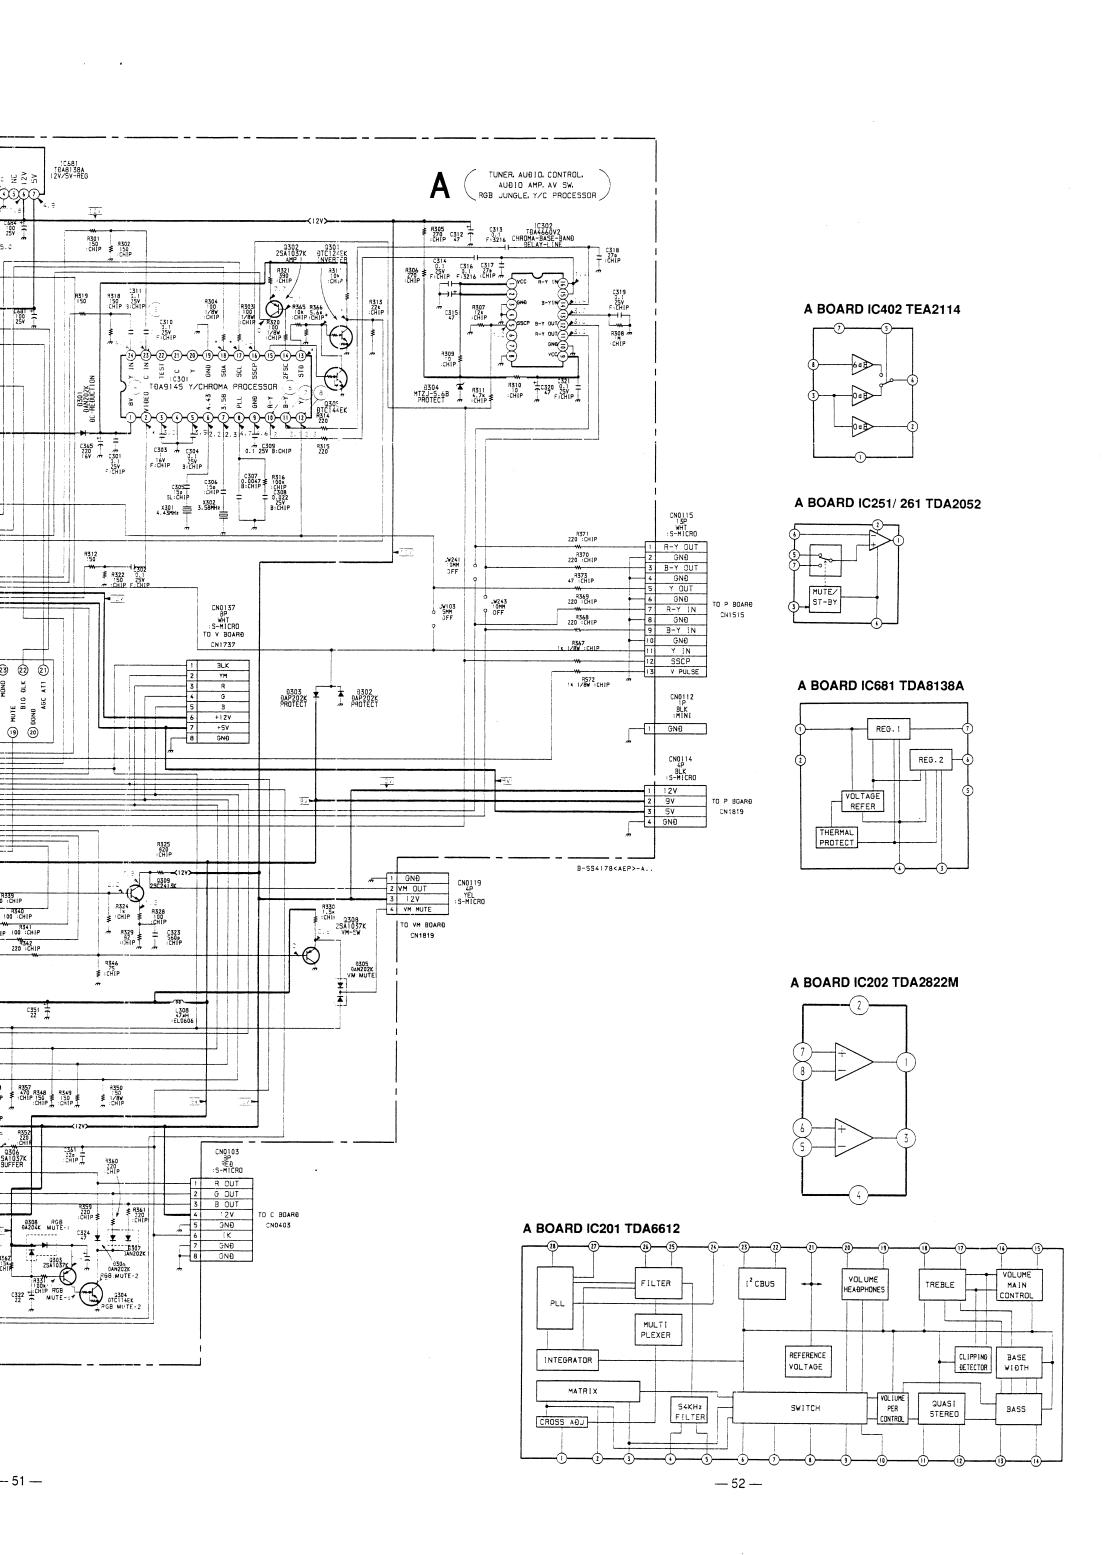



— A Board —

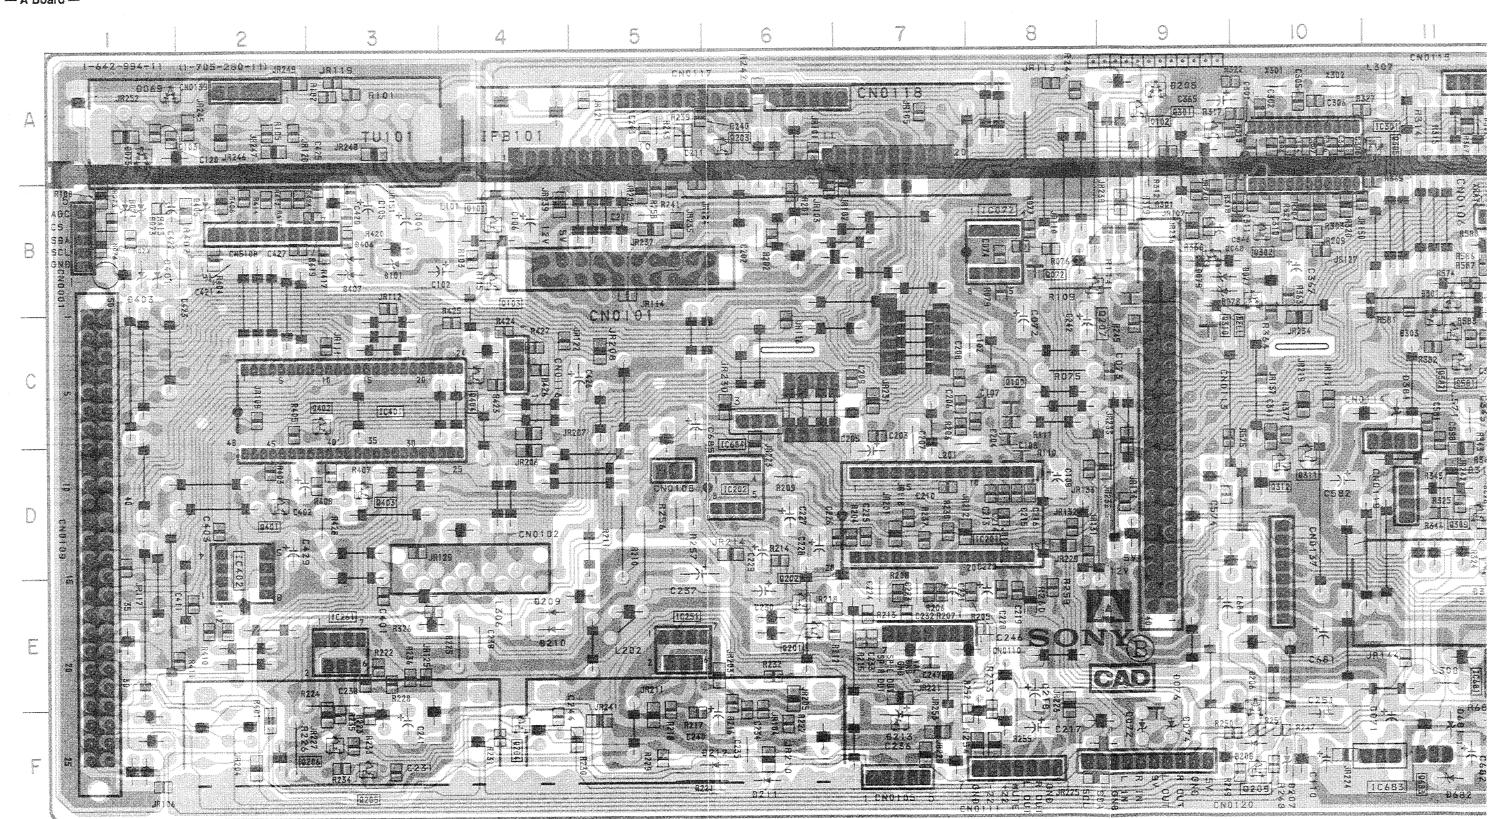

- A Board -


13

12


11	0	Q581	
	_	Q 610	F-12
IC072	B-8	Q611	F-12
IC201	D-7	Q683	F-11
IC202	D-6	DIC	NE
IC251	E-5		
IC261	E-3	D068	
IC301	A-10	D069	A-1
IC302	A-13	D071	B-1
IC304	C-12	D073	B-1
IC401	. C-3	D075	A-1
IC402	D-2	D077	B-10
IC681	E-12	D078	B-9
IC683	F-11	D079	B-9
IC684	C-6	D101	B-3
TDANIC	ISTOR	D205	A-9
IDANO	io i Un	D206	E-10
Q701	F-12	D207	F-10
Q101	B-4	D208	F-10
Q102	A-9	D209	E-4
Q102	B-4	D210	E-4
Q201	~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	D211	F-6
Q202	E-6	D212	F-6
Q203	A-6	D213	F-7
Q204	F-4	D301	B-11
Q205	F-3	D302	A-12
Q206	F-3	D303	C-11
Q207	C-9	D304	B-13
Q208	F-10	D305	D-11
Q209	A-9	D306	E-13
Q301	A-10	D307	E-13
Q302	E-13	D308	E-13
Q303	E-13	D311	D-11
Q304	E-12	D381	C-11
Q306	D-12	D401	B-1
Q308 :	D-11	D403	B-1
Q309	D-10	D405	B-2
Q311	D-10	D406	B-3
Q312	D-2	D407	B-3
Q401	C-3	D571	C-12
Q402	D-3	D681	F-11
Q403	C-4	D682	,
Q404			


							enables	seeing.
	:	Pattern	of the	e re	ar sic	le.		


A BOARD IC301 TDA9145

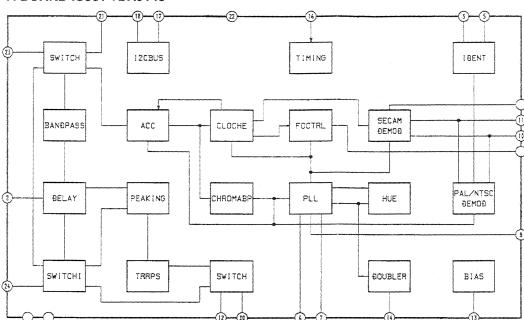



A BOARD IC304 CXA1587S

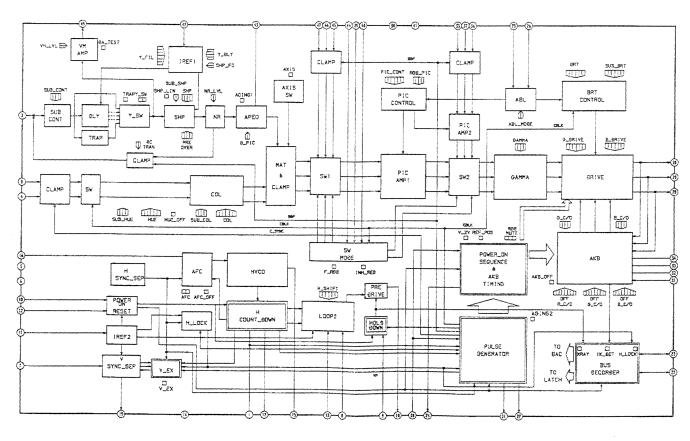


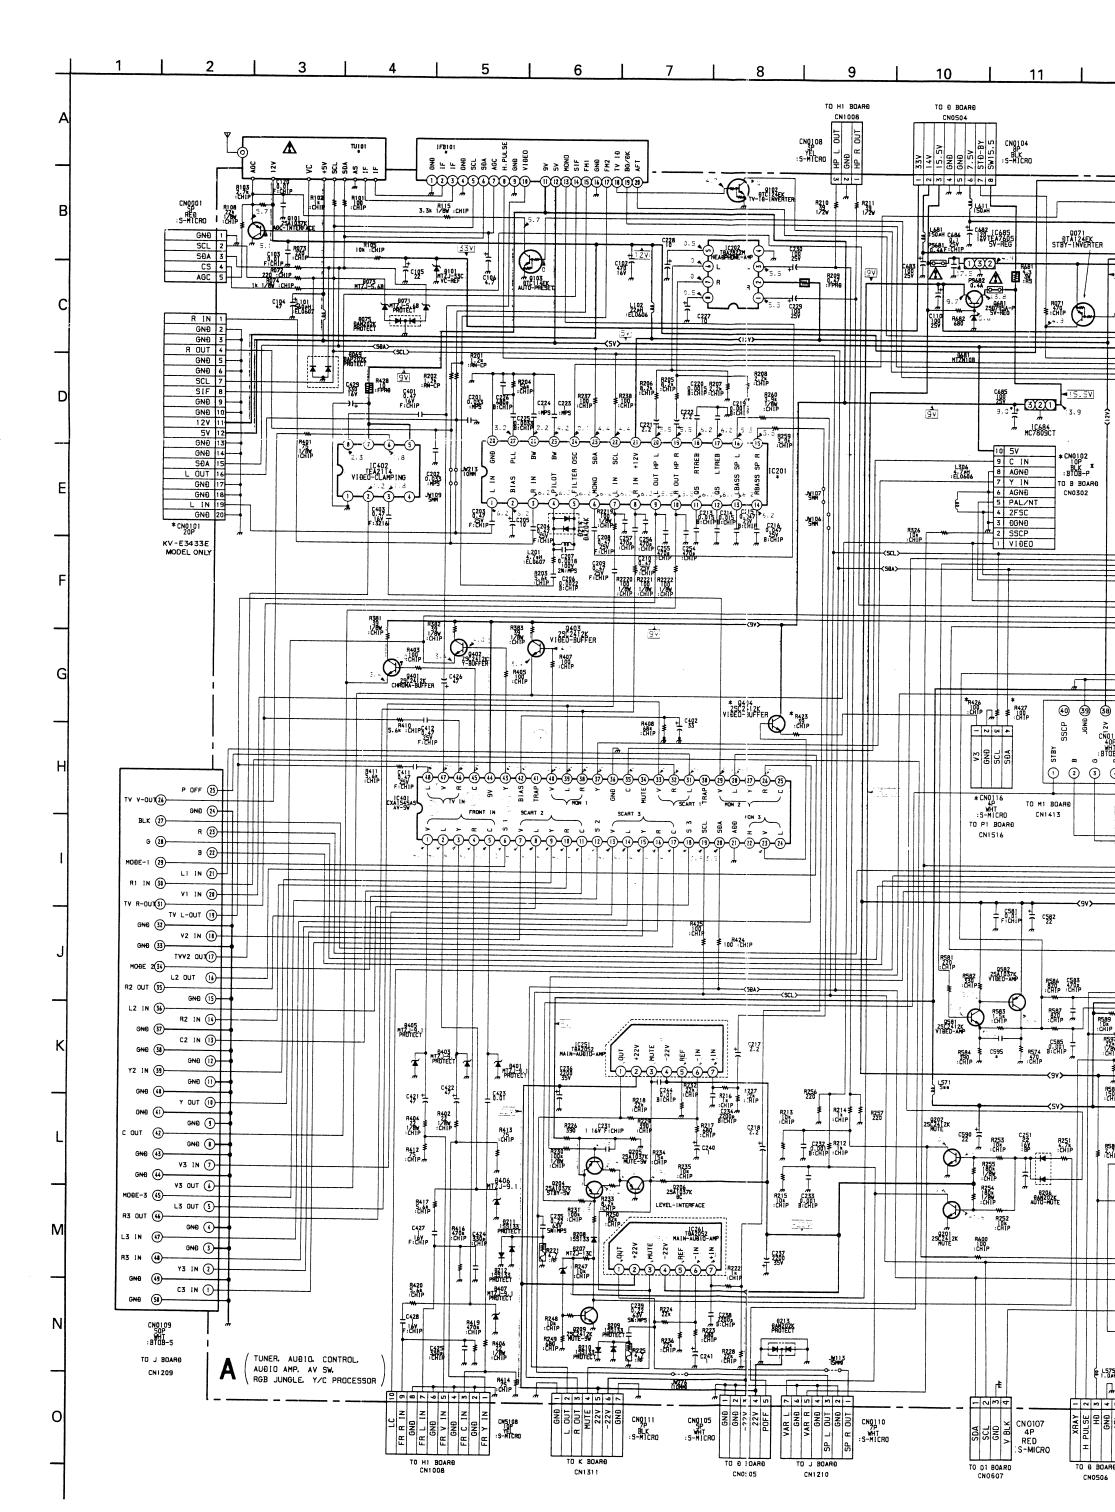


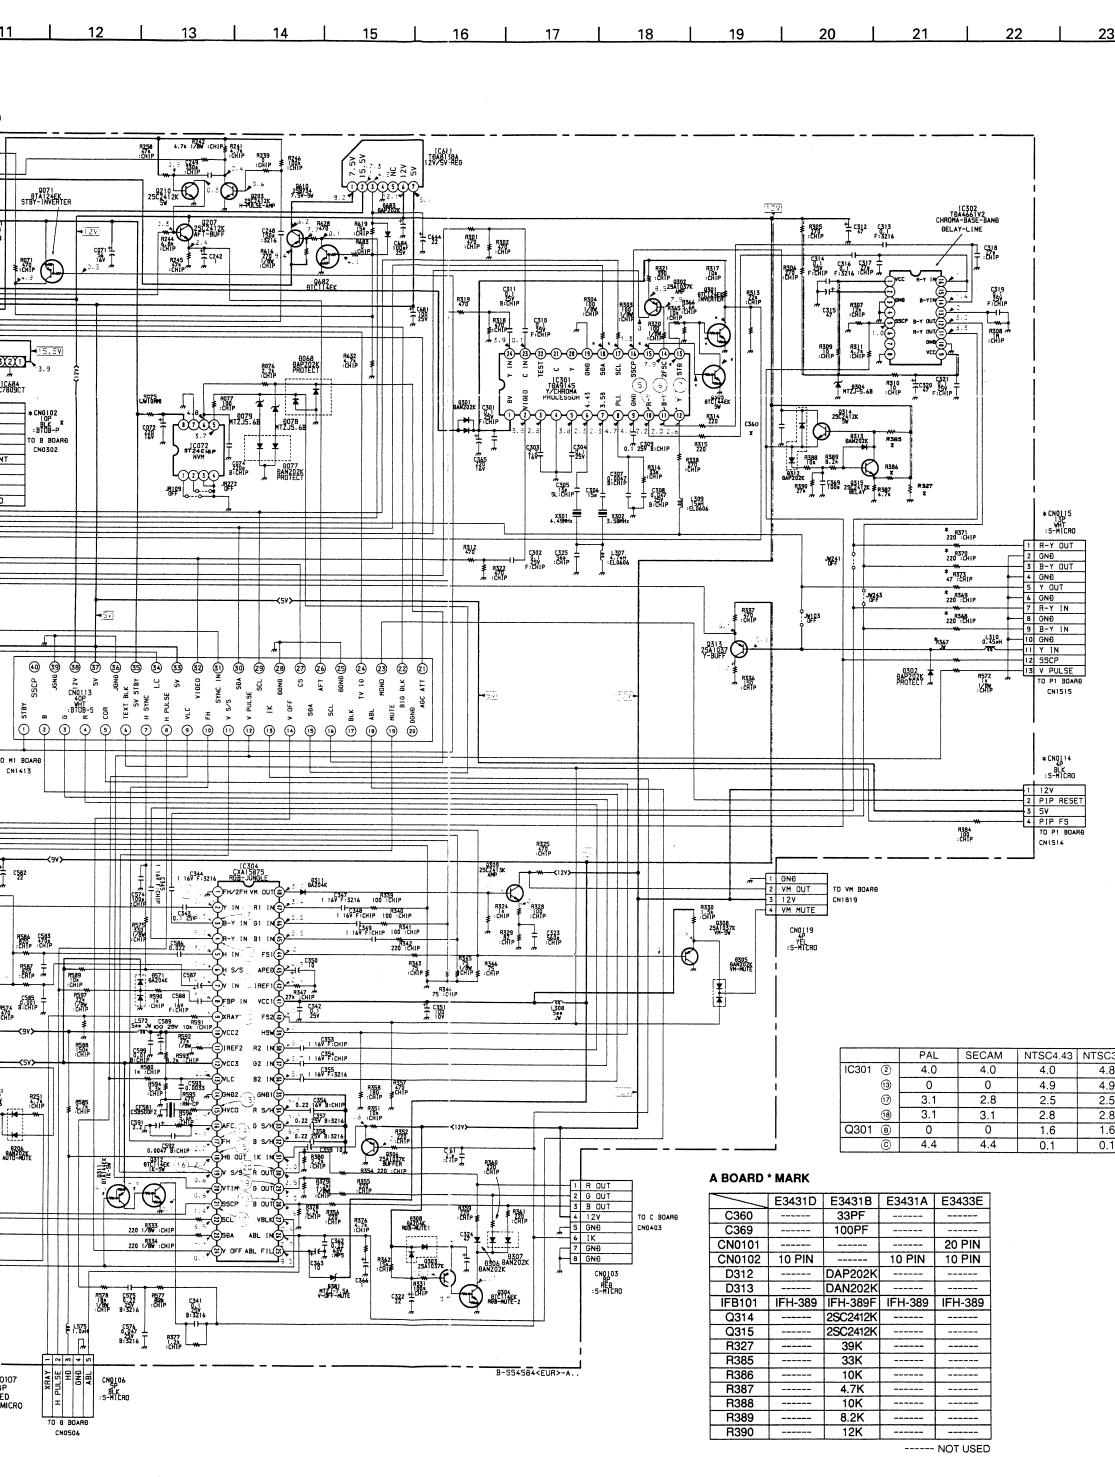


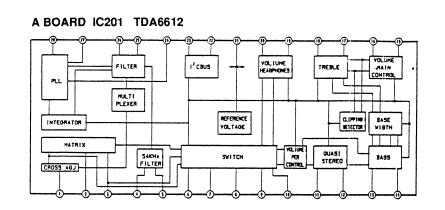


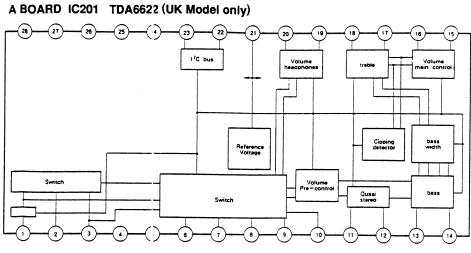


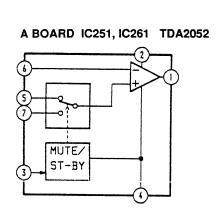


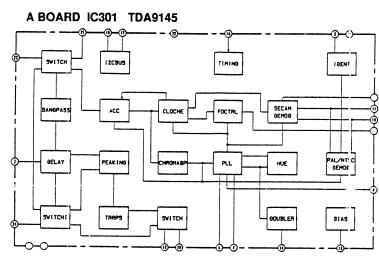

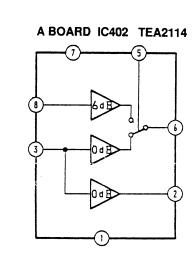


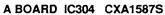


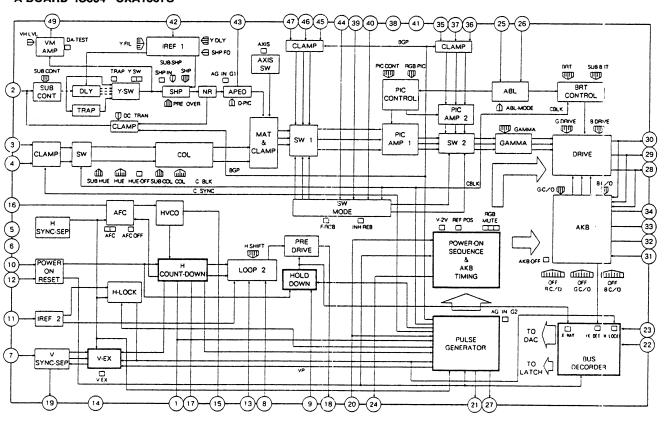

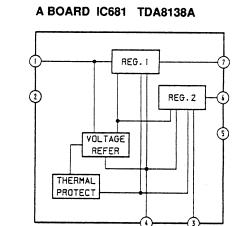

A BOARD

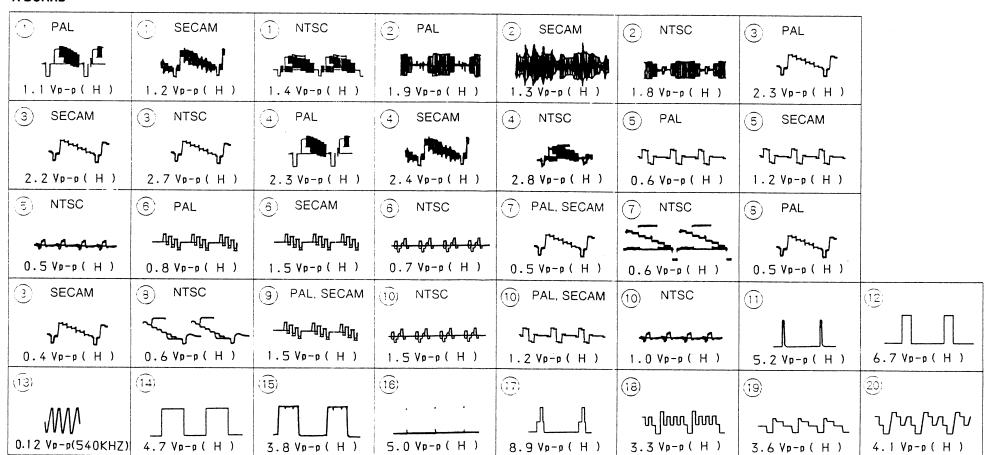

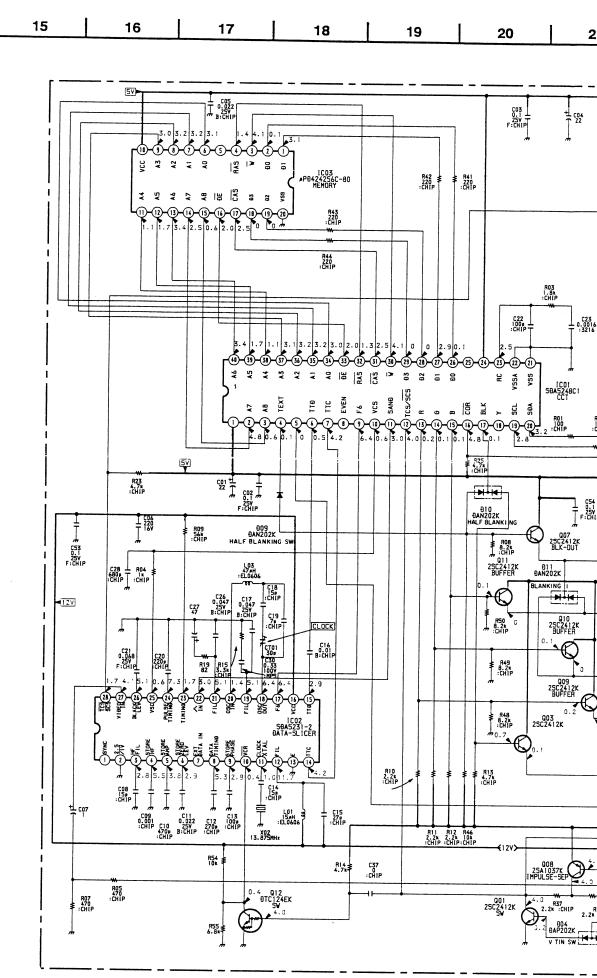

D BOARD : X MARK


12


13


14


		MAR							
		/-E250 /-E250			'-E29 '-E29		K\	/-E34 /-E34	31D
C603	0.0022	400	,	0.0022	400		1,,,		010
C612	0.0056	50V		0.0068	63 V	,	0.0068	63V	
∆ C821	0.021	1.2K	ν	0.021	1.2		1.2KV	: PP	
C823	0.47	50V		0.47	50V		1	50V	
C824	0.0047	63V		0.0022	63 V		0.0022	63V	
∆ C826	0.068	630\	,	0.068	630	v	0.056	630V	
C827	0.047	100\	7	0.1	100	V MPS	0.1	63V	
C833	1.8	200\	,	2	200		1.8	200V	
C834	0.62	200	,	0.82	200		1.2	200V	
C851	0.0047	400V	,	0.001	63V		0.001	63V	
∆ C854	330P	2KV	В	560P	2KV	Α	330P	2KV	В
C863	0.047	1000		0.047	100	v			
C866	0.001	400V	,		_		1		
C869	0.1	100V		0.1	100	V : NPS	0.1	63V	
C1507	0.22	100V	: MPS	0.27	100	V : MPS	0.27	100V	: MPS
C1513					_		68P	50V	
CN0522	<u> </u>						9P		
	ļ								
D811							ERB44-0	X 6	
JW304	20MM	JW			_			_	
JW305	20MM	JW			_			_	
	ļ								
L802	<u> </u>						2.2MMH		:EL060
L817	HLC			HLC			HLT		
R601	8.2	1W	: RS	2.2	1W	: FS	2.2	1W	: RS
R630	2.2K	1/4W		2.2	1/4W			_	
R801	6.8K		: CHIP	1.5K		: CHIP	1.5K		: CHIP
R821	1.5K		: RS	1.2K	3W	: F:S	1.2K	3W	: RS
R822	1.5K		: RS	1.2K	3W	: F3	1.2K	3W	: RS
R825	0.47	_1W	: RS	0.47	1W	: F/S	0.27	1W	: RS
R834	330K		: CHIP	150K		CHIP	180K		CHIP
R838	56K		: CHIP	68K		: CHIP	100K		: CHIP
R839	1.8K		: CHIP	3.6K		: CHIP	3.6K		: CHIP
R845					_		270K		: CHIP
R847	100K		: CHIP	82K		: CHIP	150K		: CHIP
R849	33	3W	: RS	15	2W	: RS	15	2W	: RS
R864	30K	_	: RN-CP	15K		: RN-CP	150K		: RN-CF
R868	33K	1/4W		15K	1/4W		8.2K	1/4W	
R1502	3.9K			3.6K			3.6K		
R1509	56K			47K			47K		
1 T601	(SMT7)		RST	(SMT89)		: RST	(SMT89)		RST
T801	UX-2600	42		UX-2600A	2		UX-2602A	3	
T895		_	7				DFT		


— D Board —

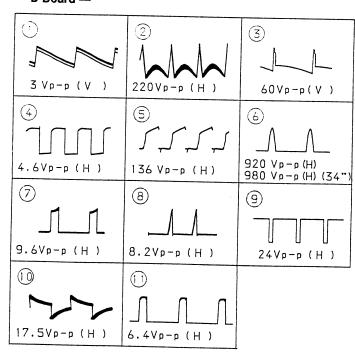


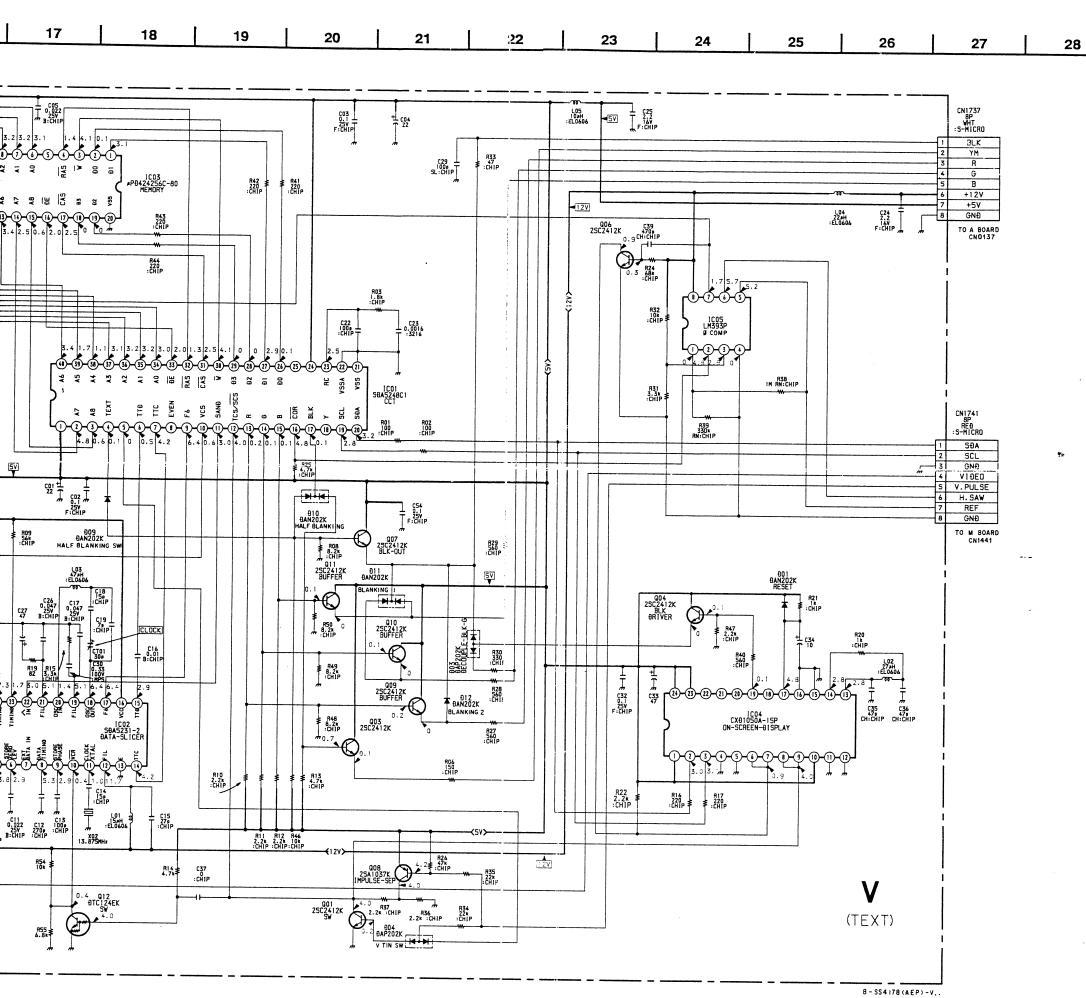


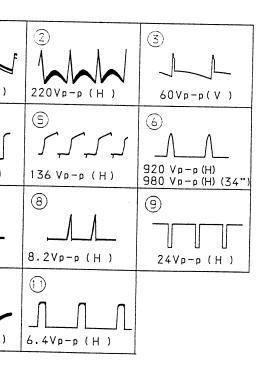

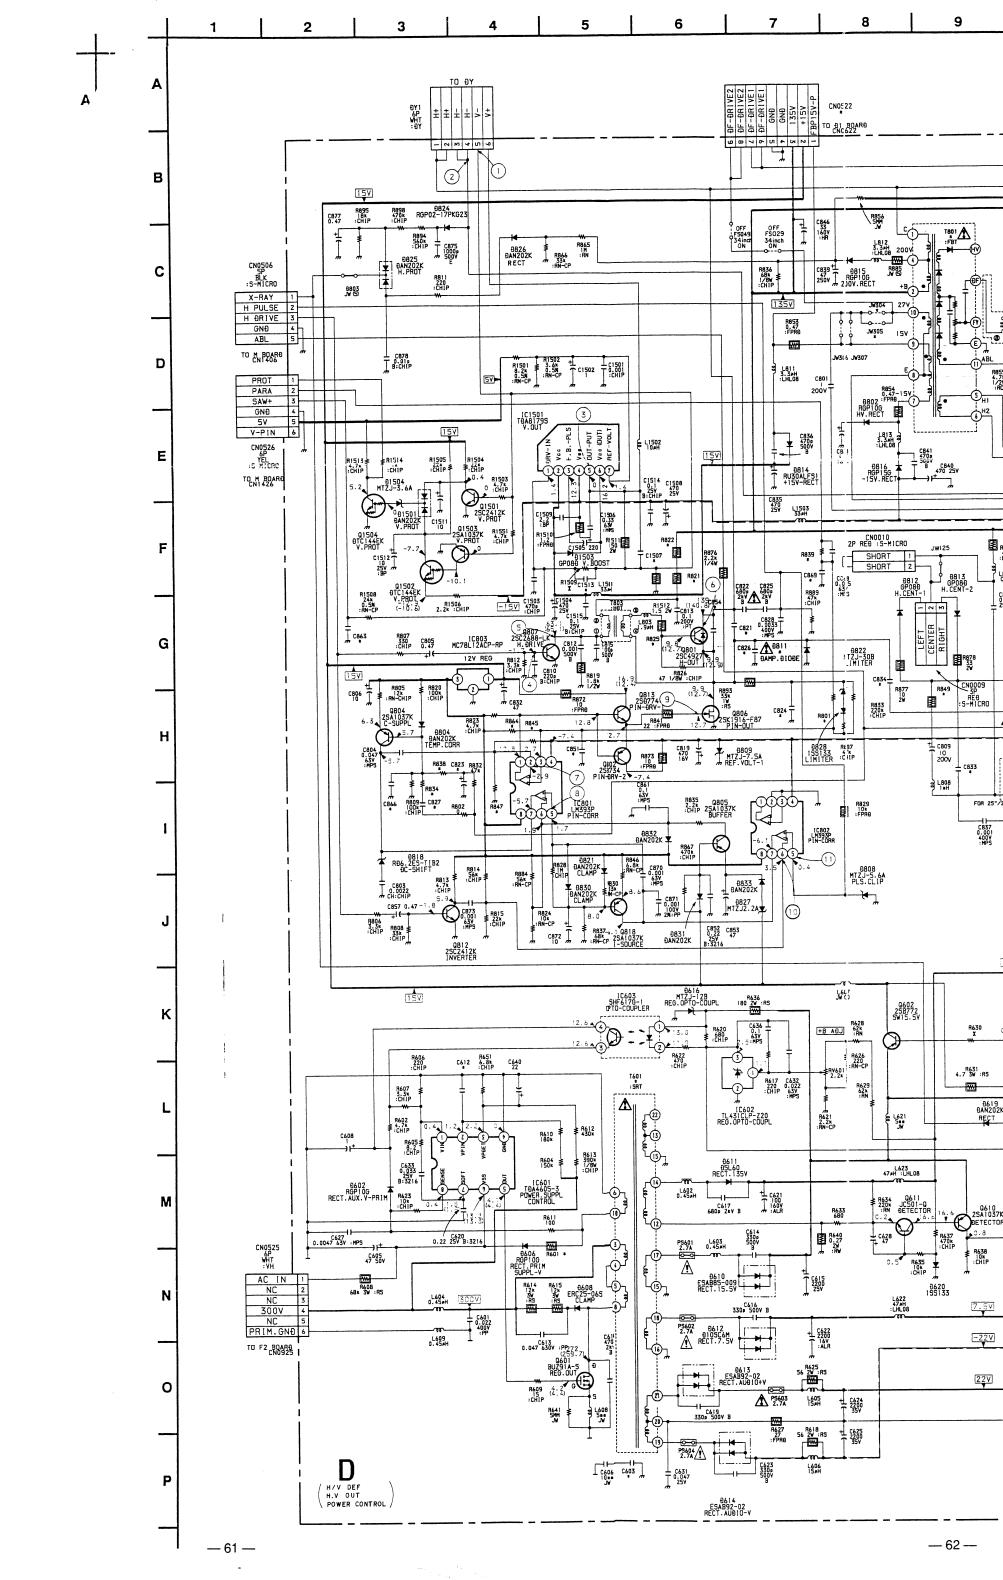

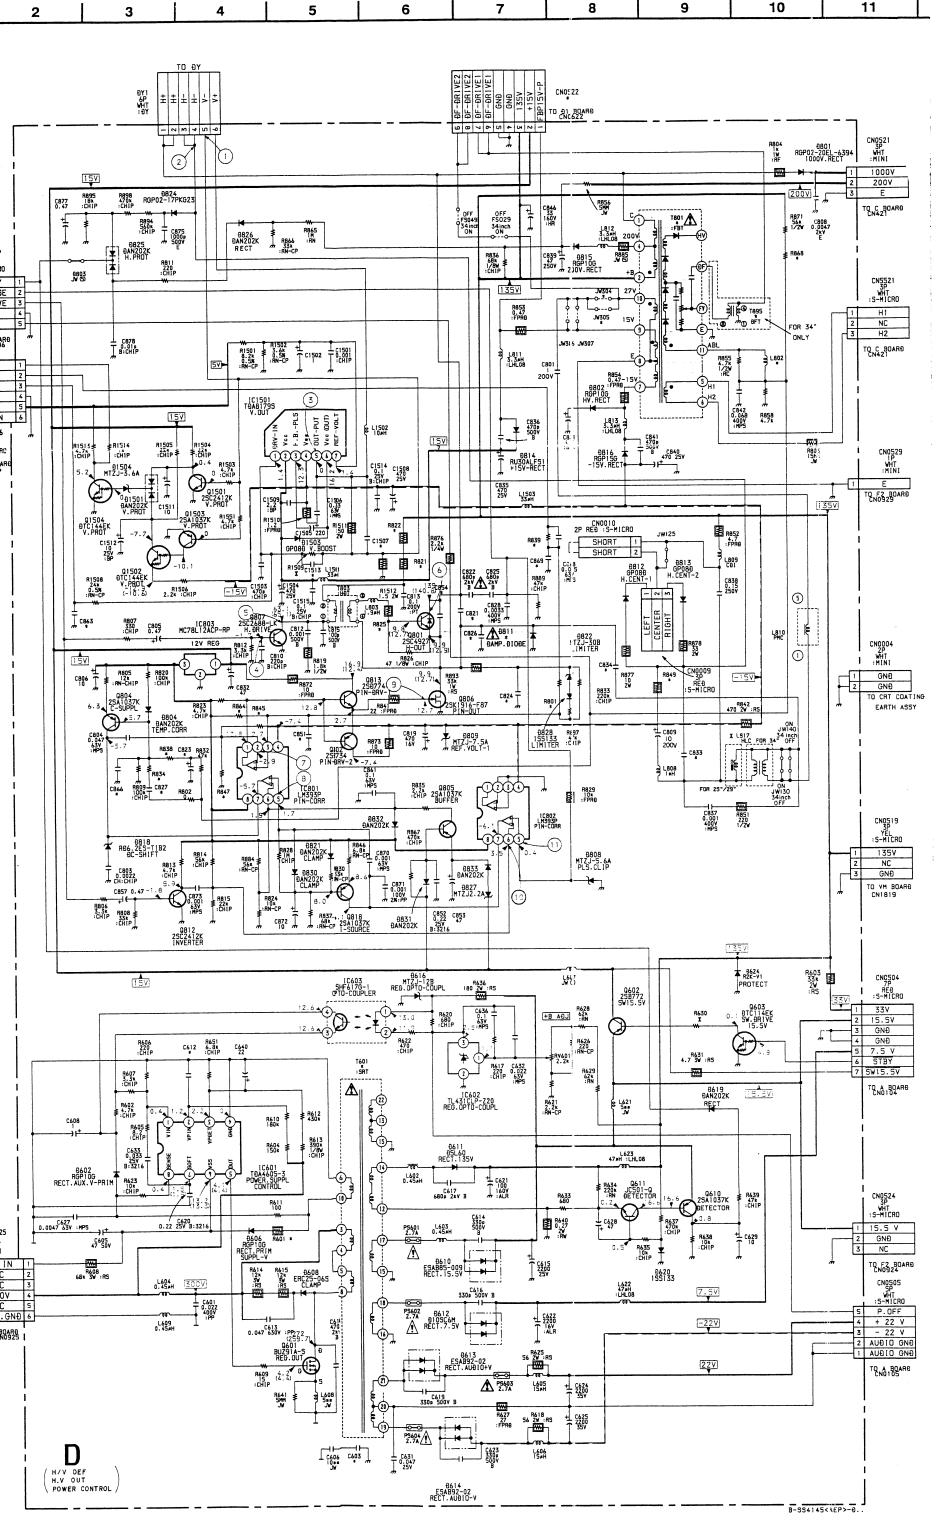


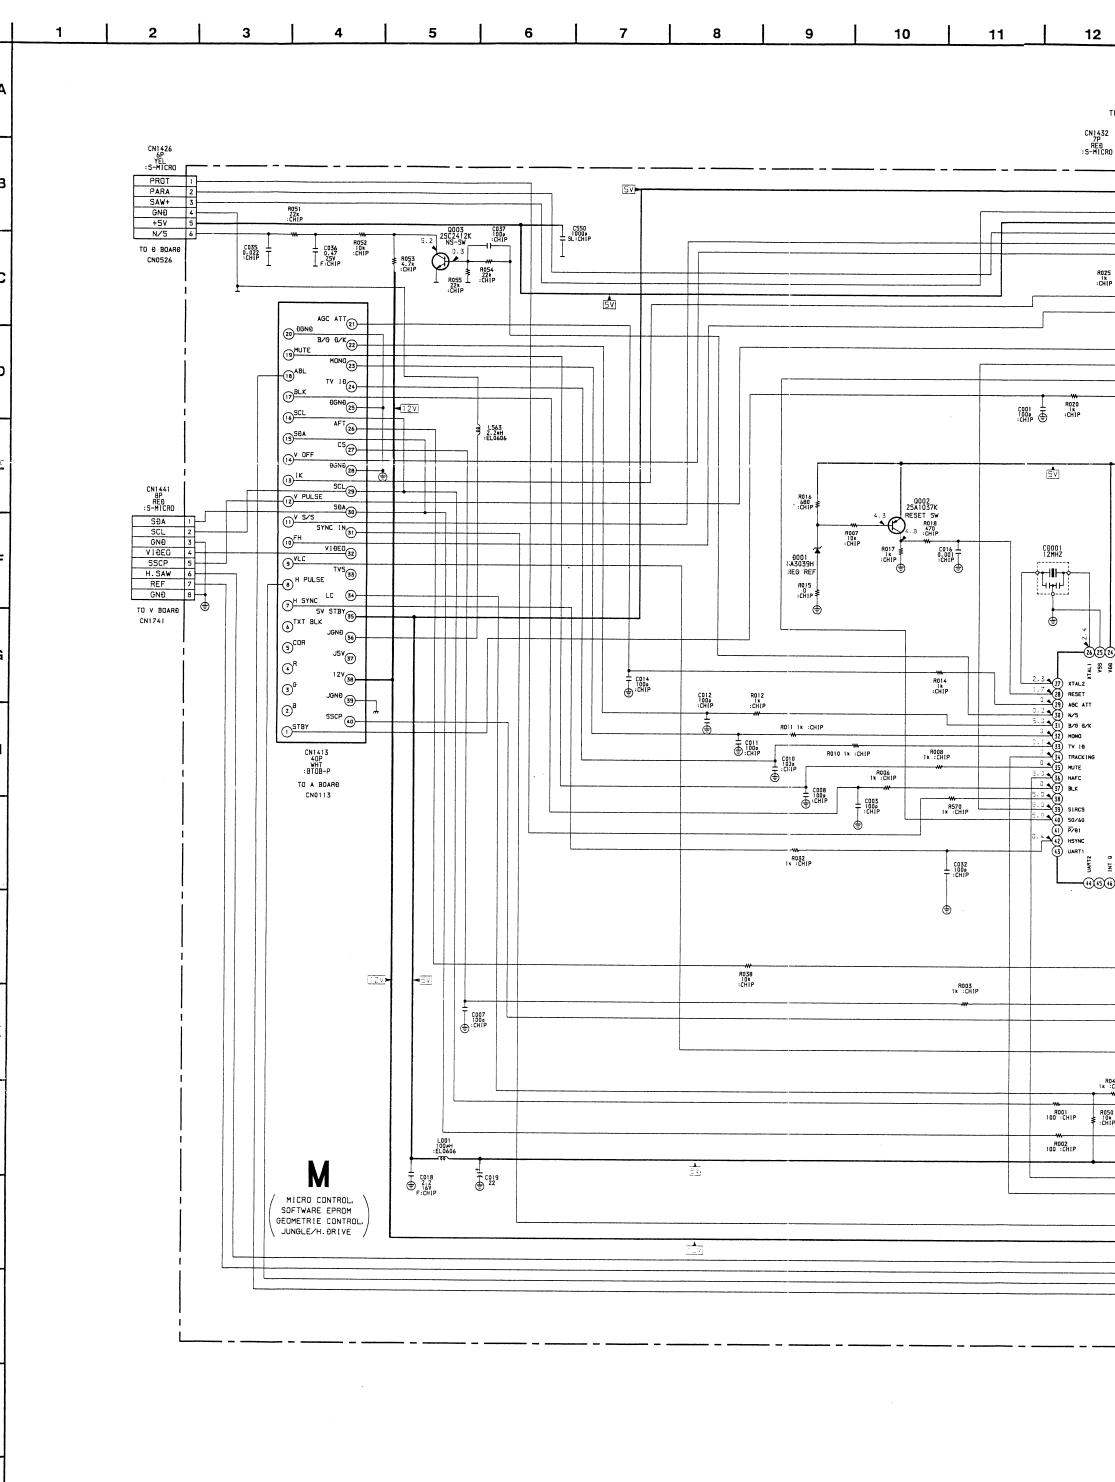

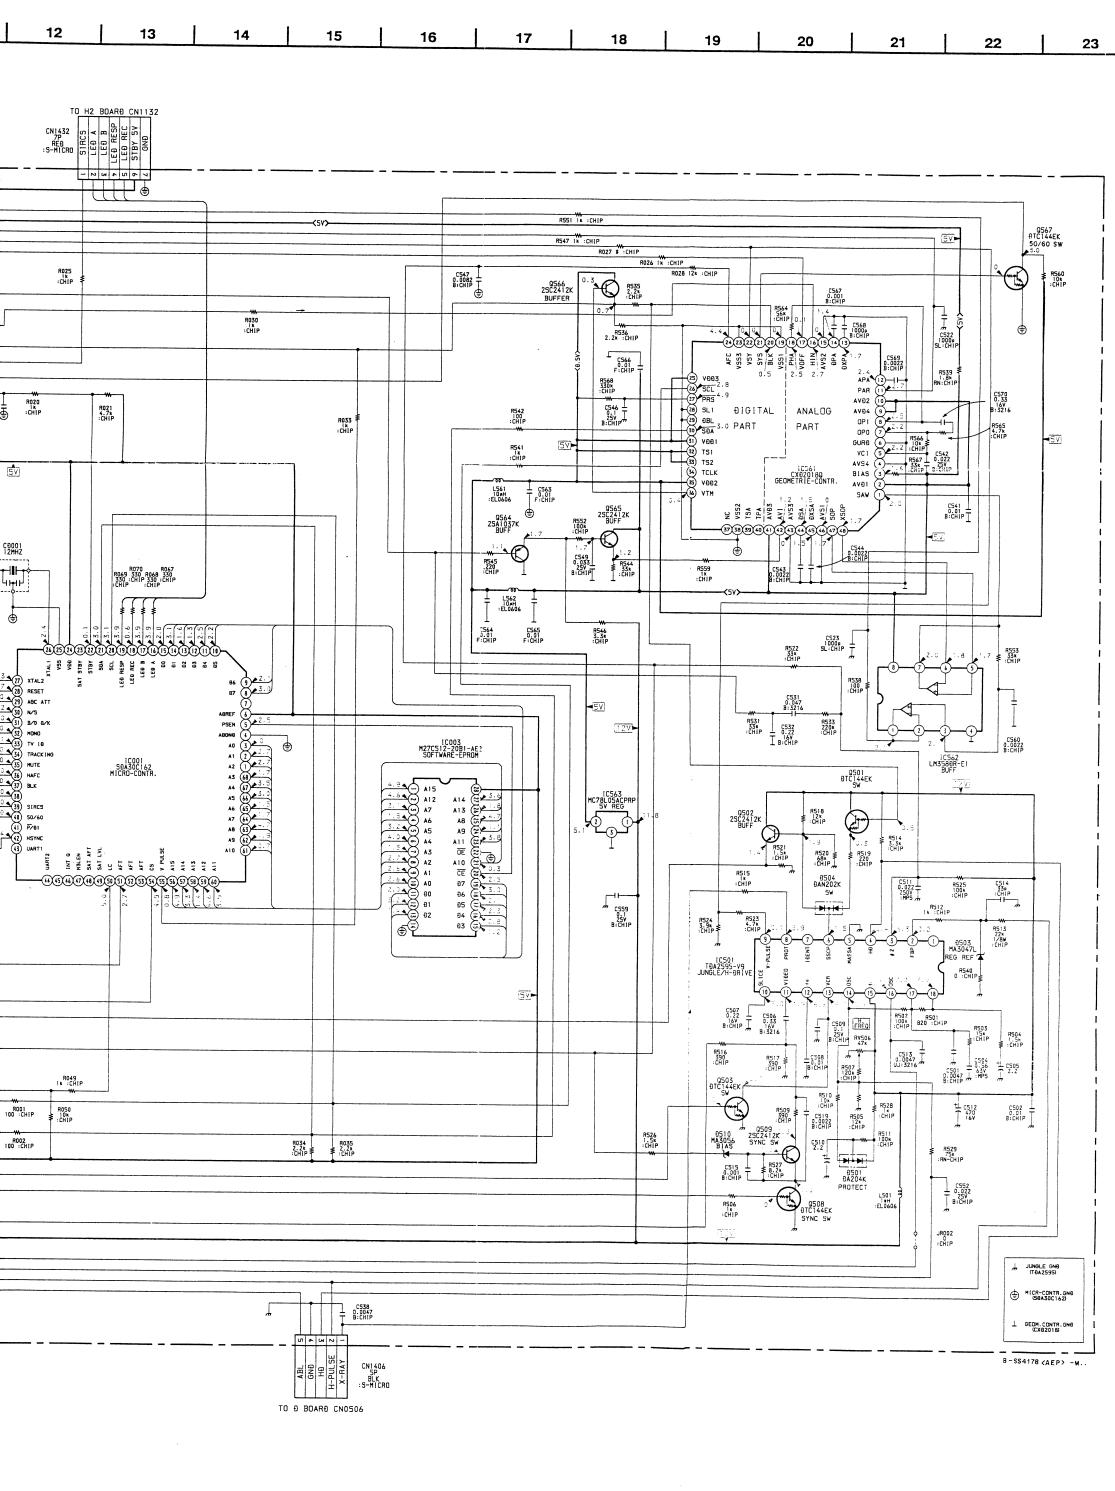



— M Board —

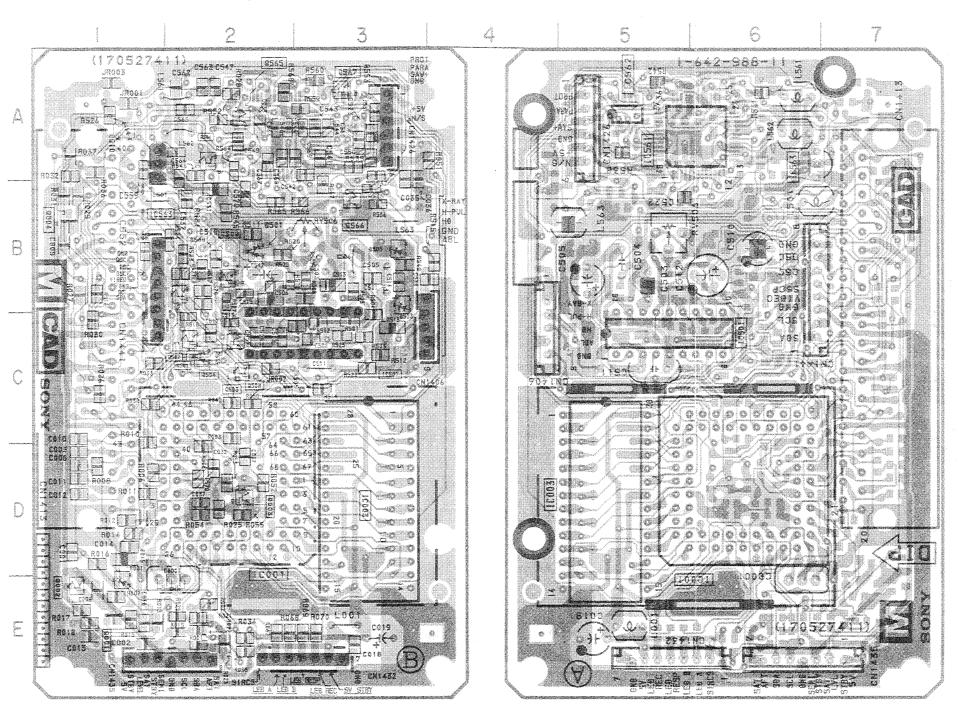


- M Board -

IC	***************************************
IC001 : E)-2
IC003 E)-3
IC501 C	>-3
IC561 : A	<u>\-6</u>
IC562 : A	\-5
IC563 E	3-1
TRANSIST	OR
Q002 E	-1
Q003 E)-2
<u> </u>)-2
Q502 1 E	3-2
Q503 C	7-2
Q508 : C)-2
	}-2
	\-2 ⁻
Q565 A	\-2
Q566 E	3-3
Q567 : A	1-3
DIODE	
D001 E	-1
	-2
D503 B	-3
	:-2
	-3
~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~~	1
VARIABLE	
RESIS	TOR
RV506 B	-3

Pattern from the side which enables seeing.

· Pattern of the rear side.

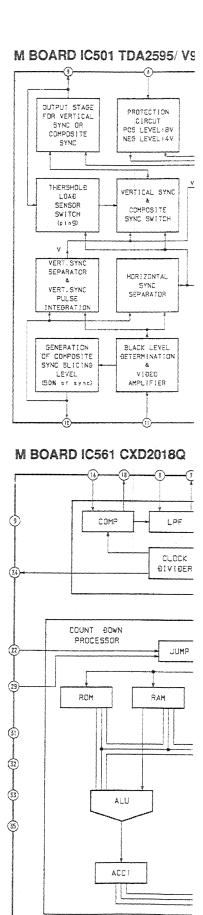


# 6 . .... 0.0 00 0.0 0.0 0.0 0000000000000


#### - M Board -

y						
IC						
IC001	D-2					
IC003	D-3					
1000	C-3					
IC561	A-6					
IC562	A-5					
IC563	B-1					
TRANS	SISTOR					
Q002	E-1					
Q003	D-2					
Q501	C-2					
Q502	B-2					
Q503	C-2					
Q508	C-2					
Q509	B-2					
Q564	A-2					
Q565	A-2					
1 (2/13/23/23	B-3					
Q567	A-3					
DIC	DE					
D001	E-1					
D501	B-2					
D503	B-3					
D504	Ç-2					
D505	B-3					
D510	A-1					
VARIABLI	Ε					
	RESISTOR					
RV506	B-3					

- Pattern from the side which enables seeing.
- Pattern of the rear side.

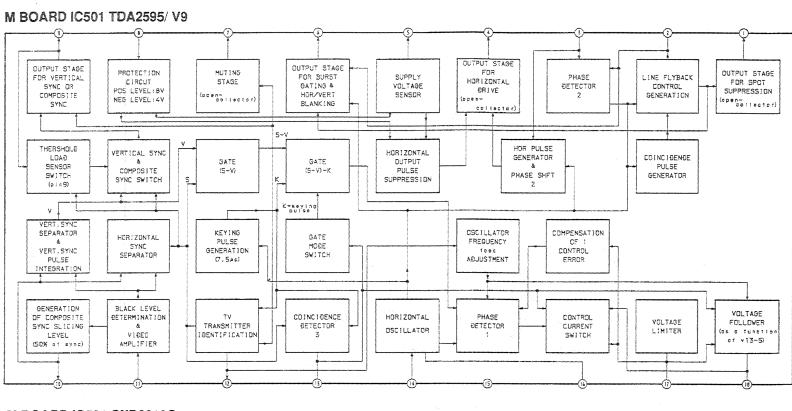


#### M BOARD IC561 CXD2018Q

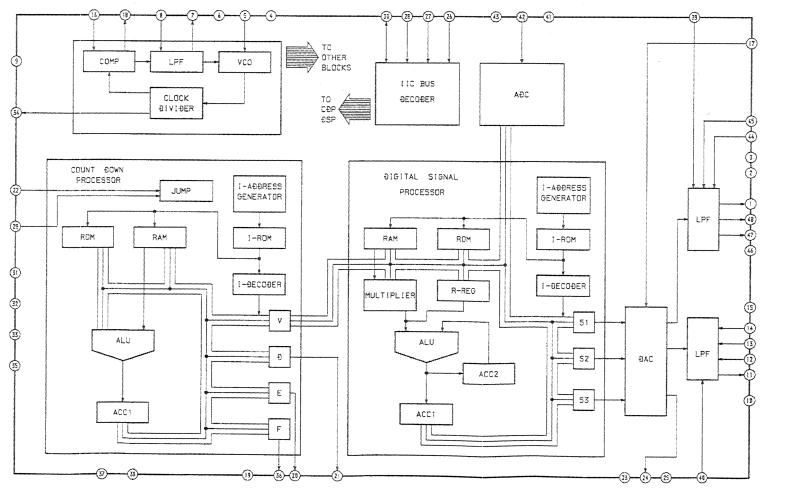


D1 [CONVERGENCE]

- D1 Board - (KV-E3431D, E3431B ONLY)

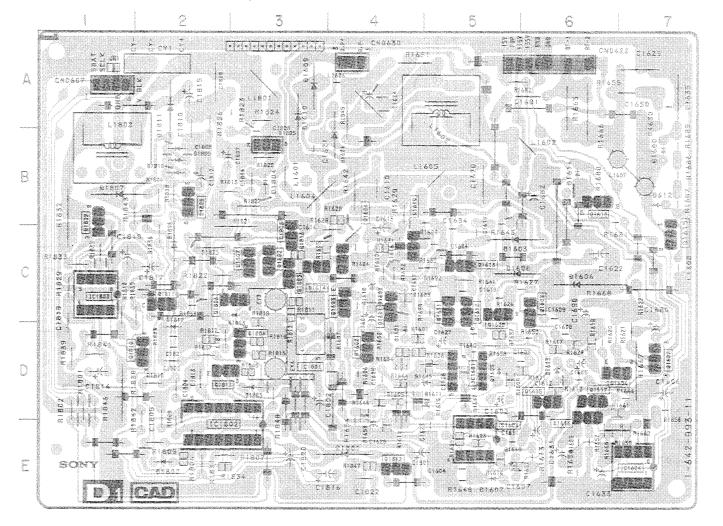

— D1 Board — (KV-E3431D, E3431B ONLY)

ŀ	С
10.000	; E-5
IC1801	D-3
IC1802	E-2
IC1803	C-1
TRANS	SISTOR
Q1610	C-4
Q1613	C-5
Q1802	<b>C</b> -3
	C-3
	D-3
	C-3
Q1806	C-3
Q1807	C-3
Q1808	B-2
	B-1
	D-2
Q1811	C-2
Q1812	E-4
Q1813	D-2
DIC	DE
D1603	C-5
D1801	E-4
D1802	E-2
D1803	D-3
D1804	B-3
D1805	B-3
D1806	C-2
D1807	B-1
D1808	B-2
D1809	B-2
01010	B-2
D1811	A-2
D1812	D-2

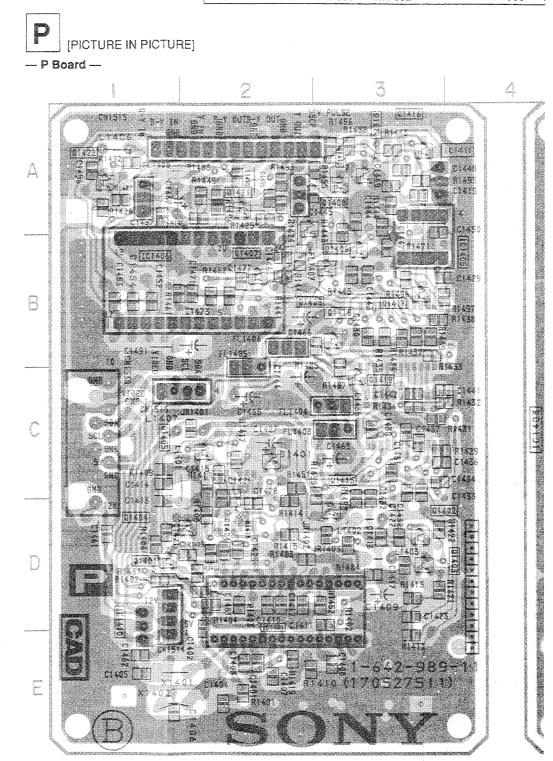


	*
IC	>
IC1603 ;	E-5
IC1801	D-3
IC1802	E-2
IC1803	C-1
TRANS	·
Q1610	C-4
O1613 +	C-5
Q1802	C-3
Q1803	C-3
Q1804	D-3
Q1805	C-3
	C-3
Q1806 Q1807	<b>C</b> -3
Q1808	B-2
Q1809	B-1
Q1810	D-2
Q1811	C-2
Q1812	E-4
Q1813	D-2
DIO	
D1603	C-5
D1801	E-4
D1802	E-2
D1803	D-3
D1804	B-3
D1805	B-3
D1806	C-2
D1807	B-1
D1808	B-2
D1809	B-2
D1810	8-2
D1811	

D1812

D-2



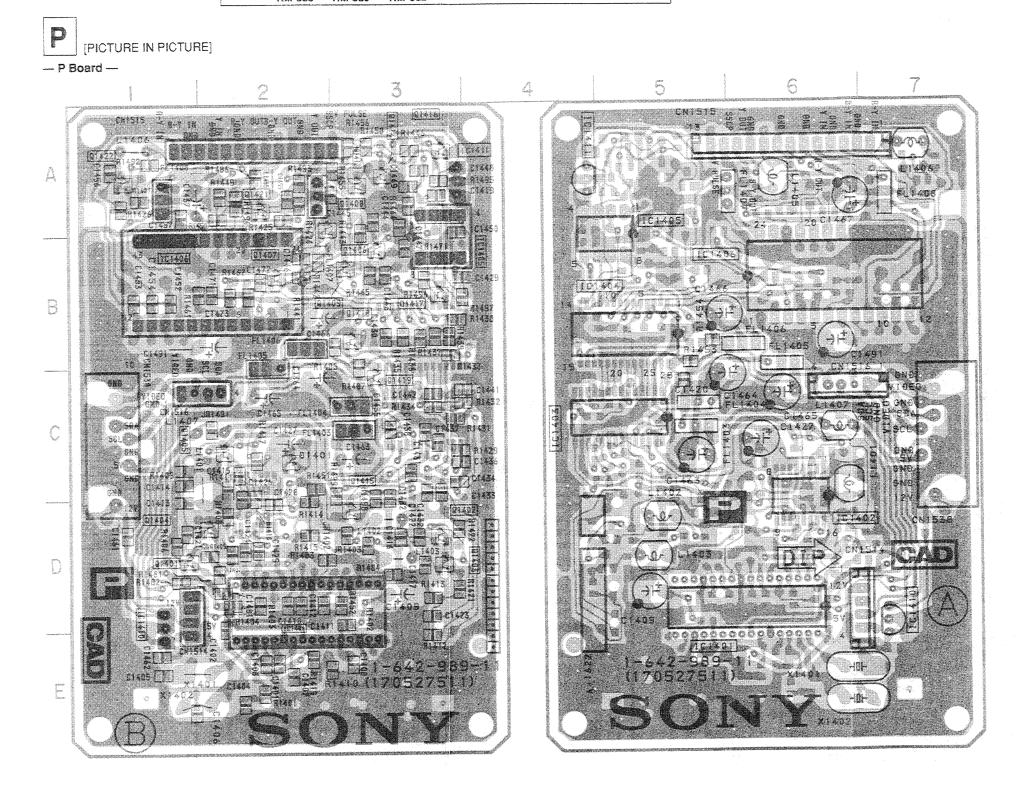



- P Board -

	I(	
	IC1401	
	IC1402	D-6
	IC1403	
	IC1404	<b>B-</b> 5
	IC1405	B-3
	IC1406	B-2
	IC1410	D-1
	IC1411	Δ-Δ
	TRANS	ISTOR
	Q1401	D-1
	I ()1402 -	• 0-3
	U1403	D-3
		D-2
		C-2
		B-3
	Q1407	B-2
		A-2
	Q1409	B-3
	Q1413	A-3
	Q1414	A-3
	. W1415	D-3
	Q1410	A-3
	Q1417	B-3
	Q1418	B-3
	Q1419	C-3
	Q1421	A-2
	Q1422	A-1
•	DIC	DE
	D1401	C-2


[•] Pattern from the side which enables seeing.

^{• :} Pattern of the rear side.

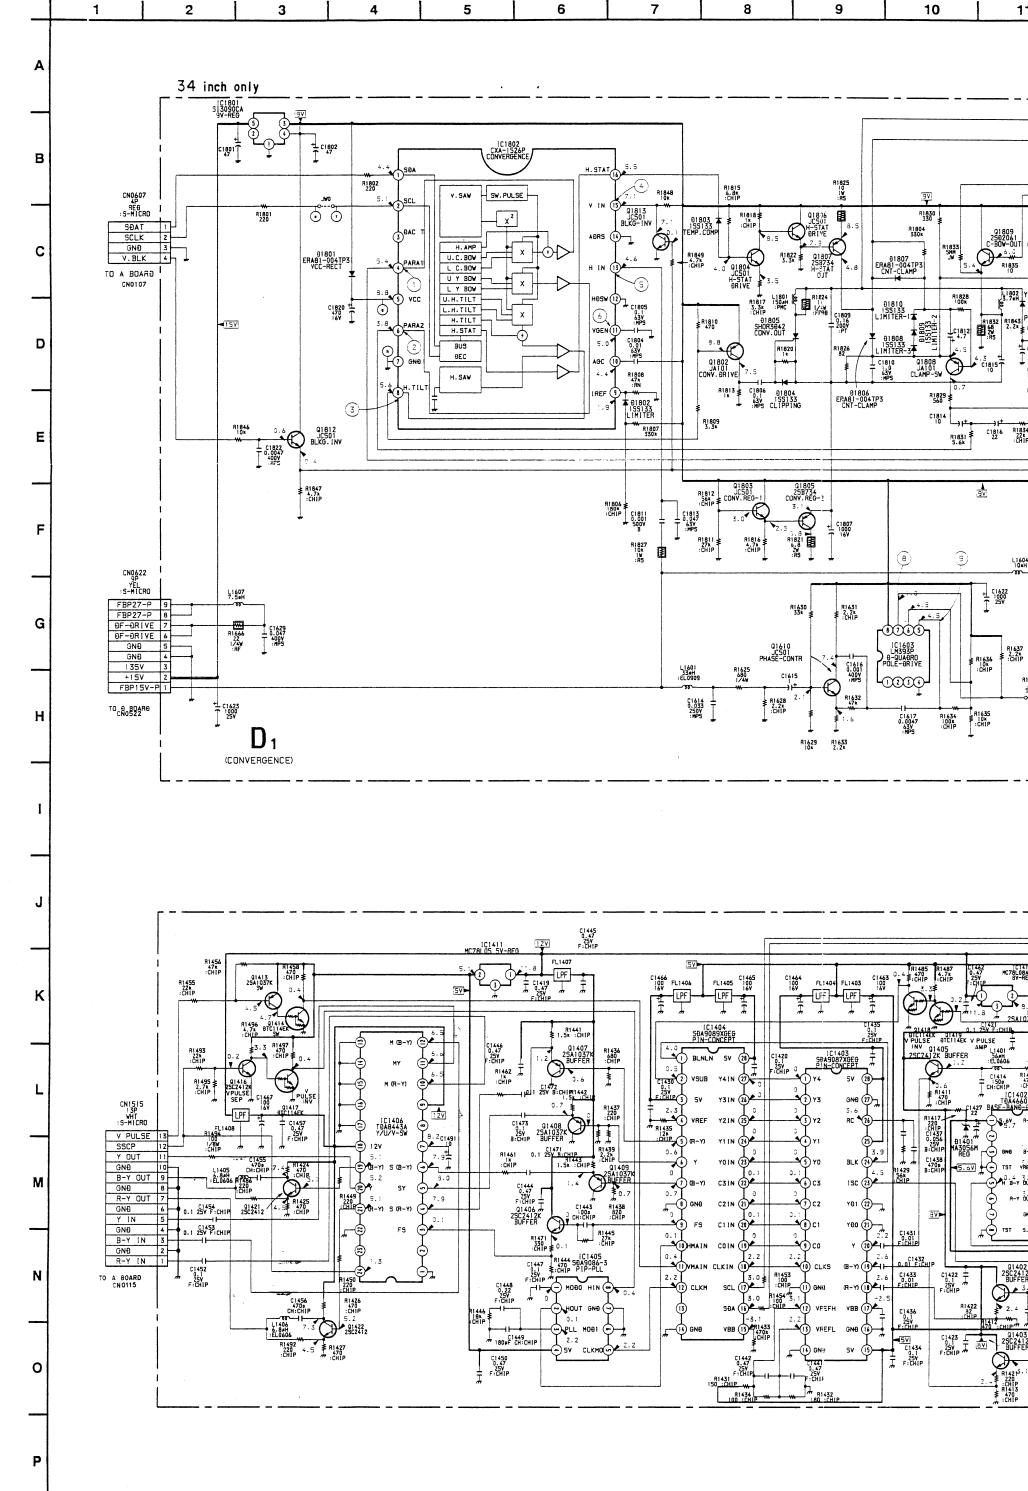


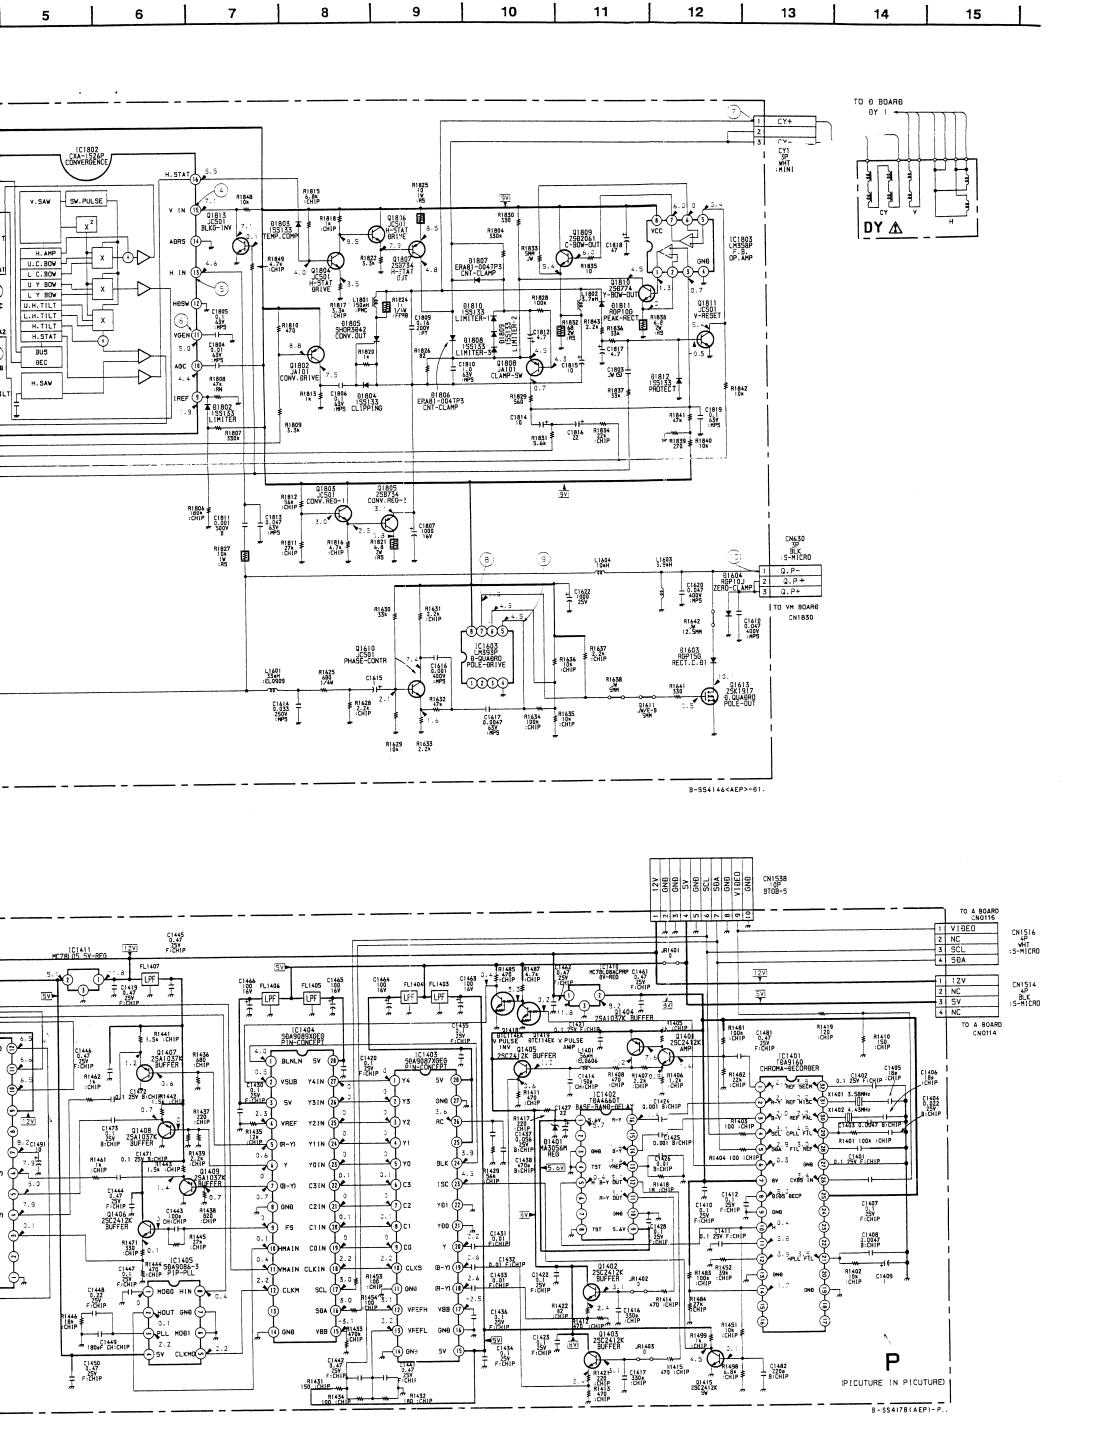


# — D1 Board — (KV-E3431D, E3431B ONLY)

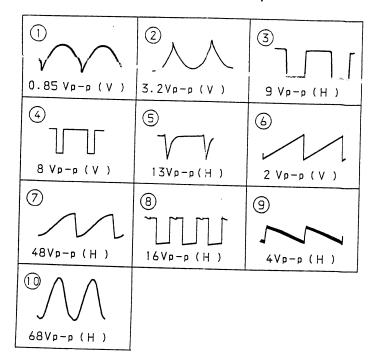



# P BOARD IC1406 TDA8443A

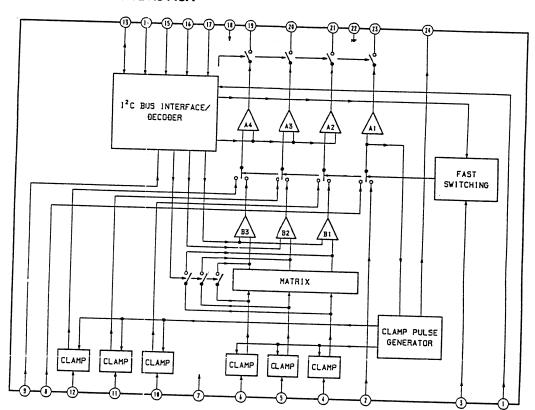



# P BOARD IC1402 TDA4660

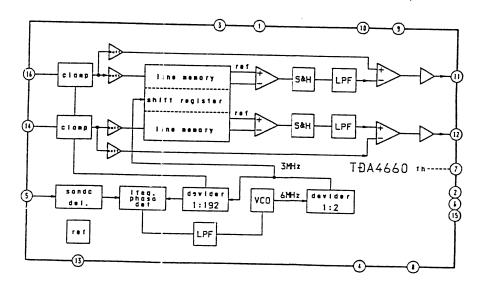

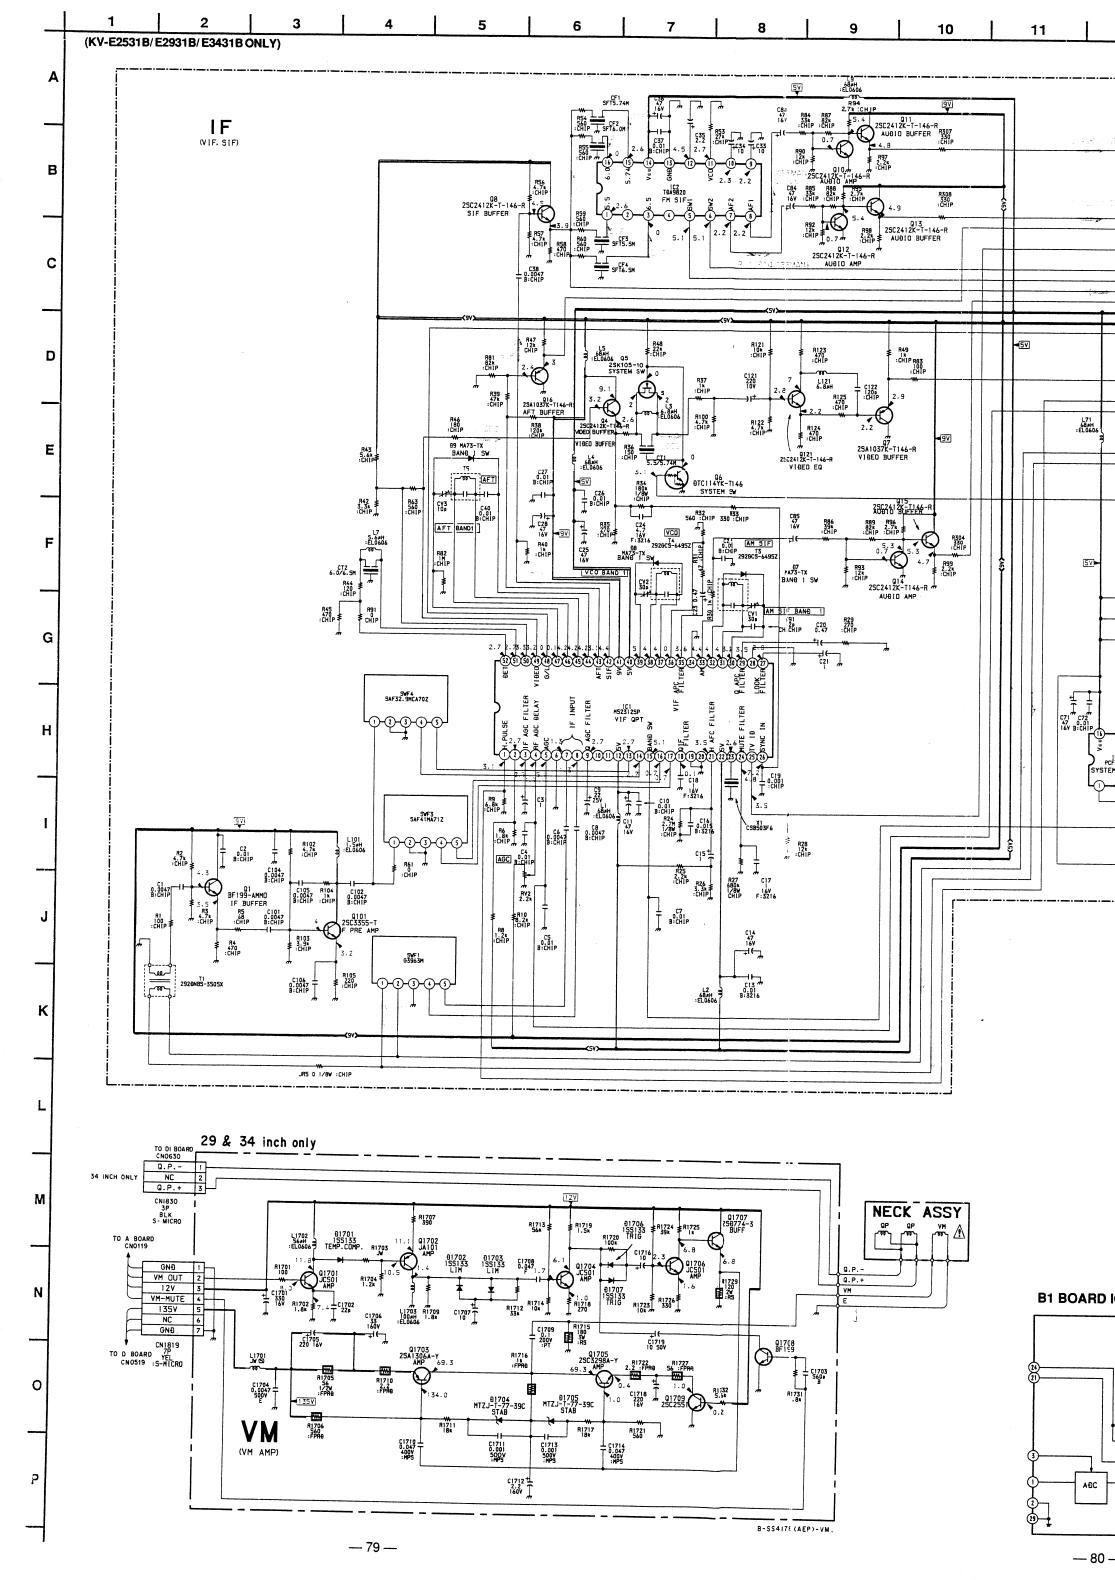

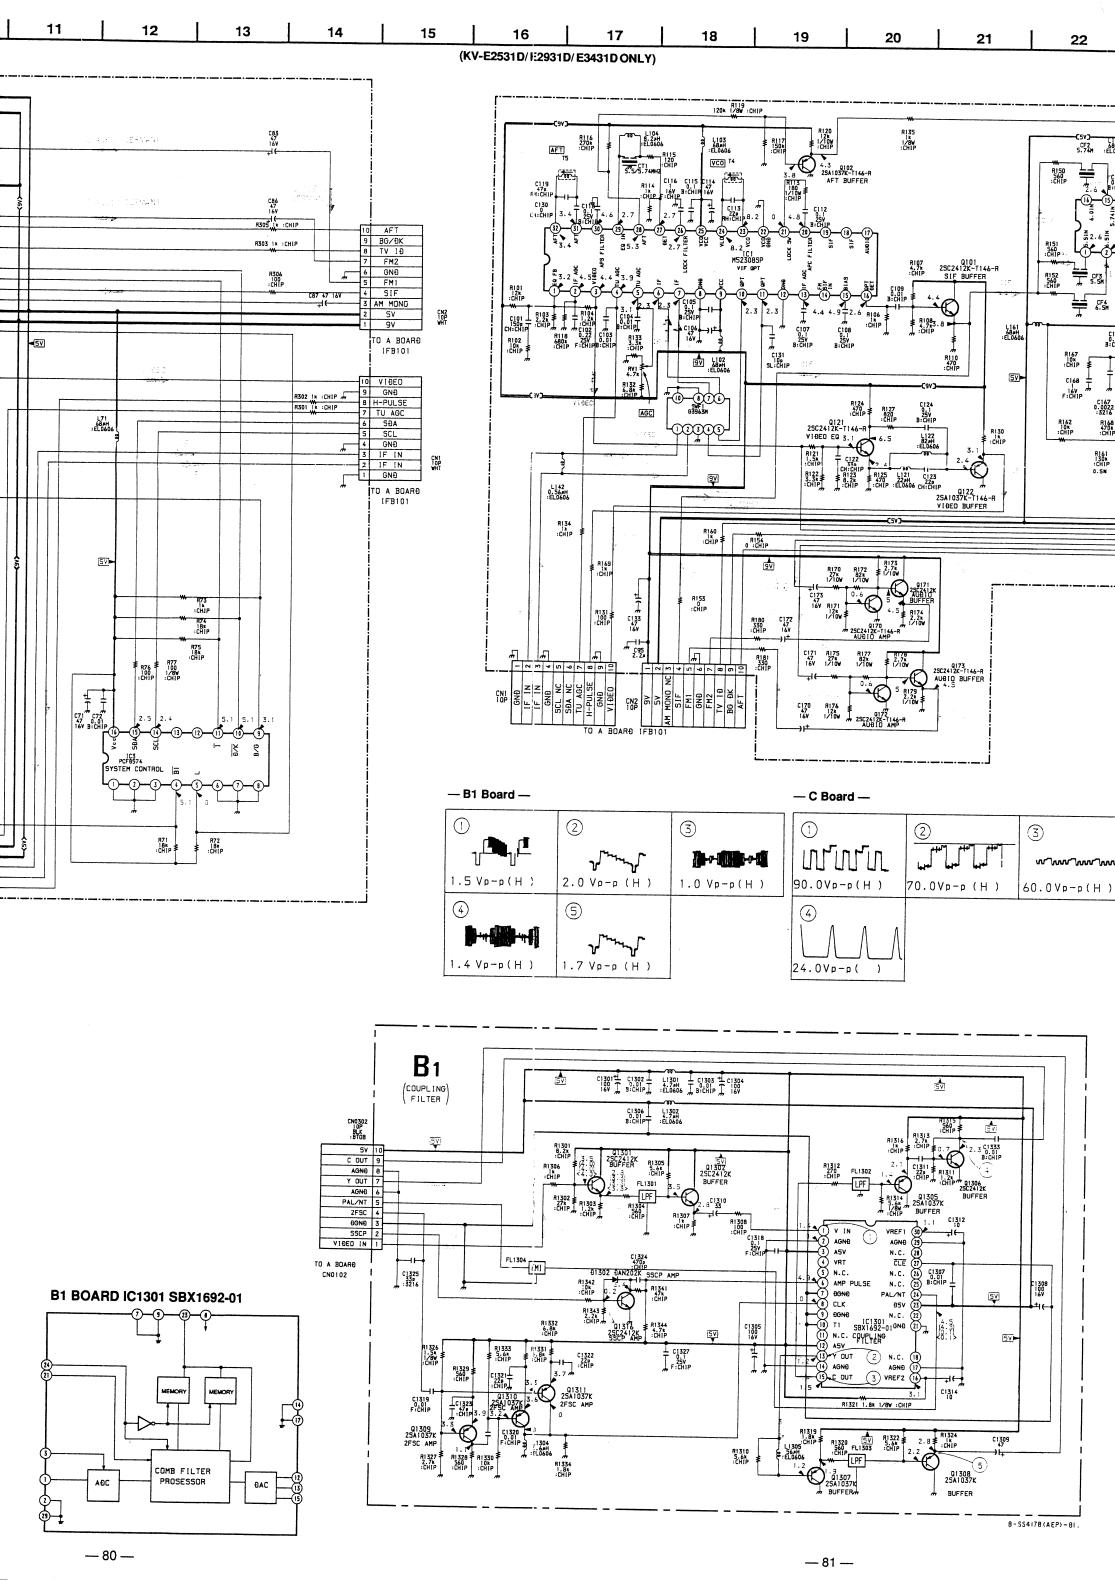


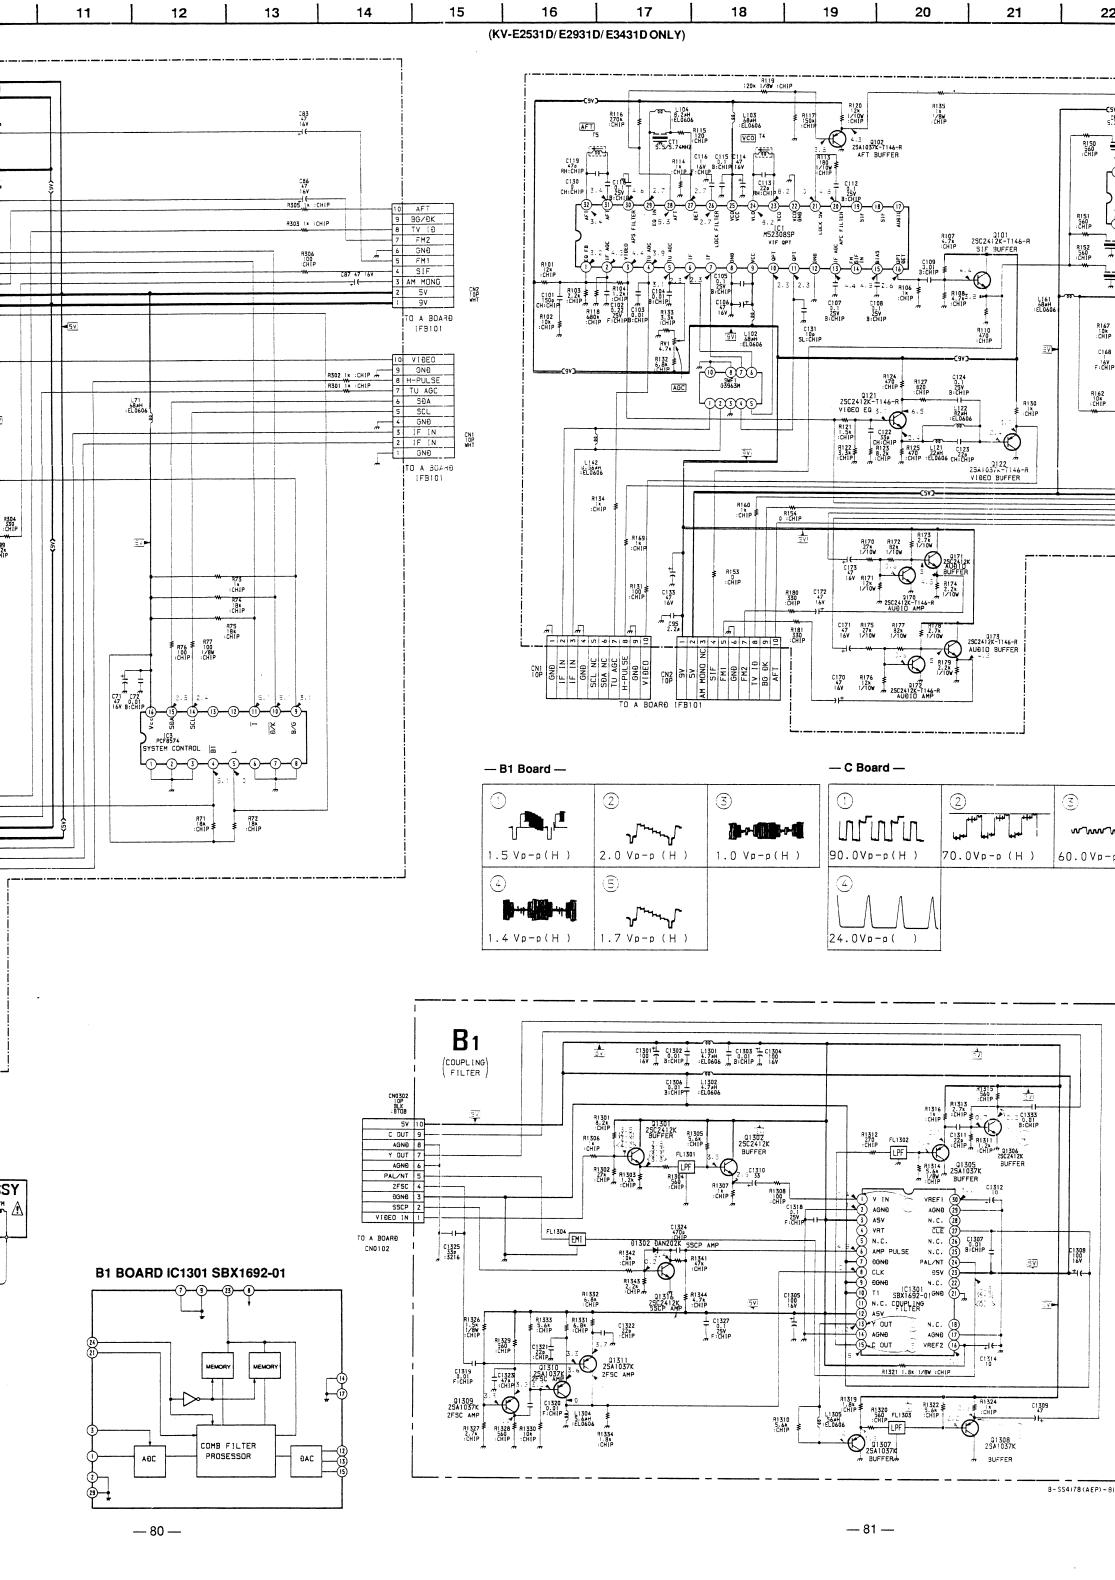

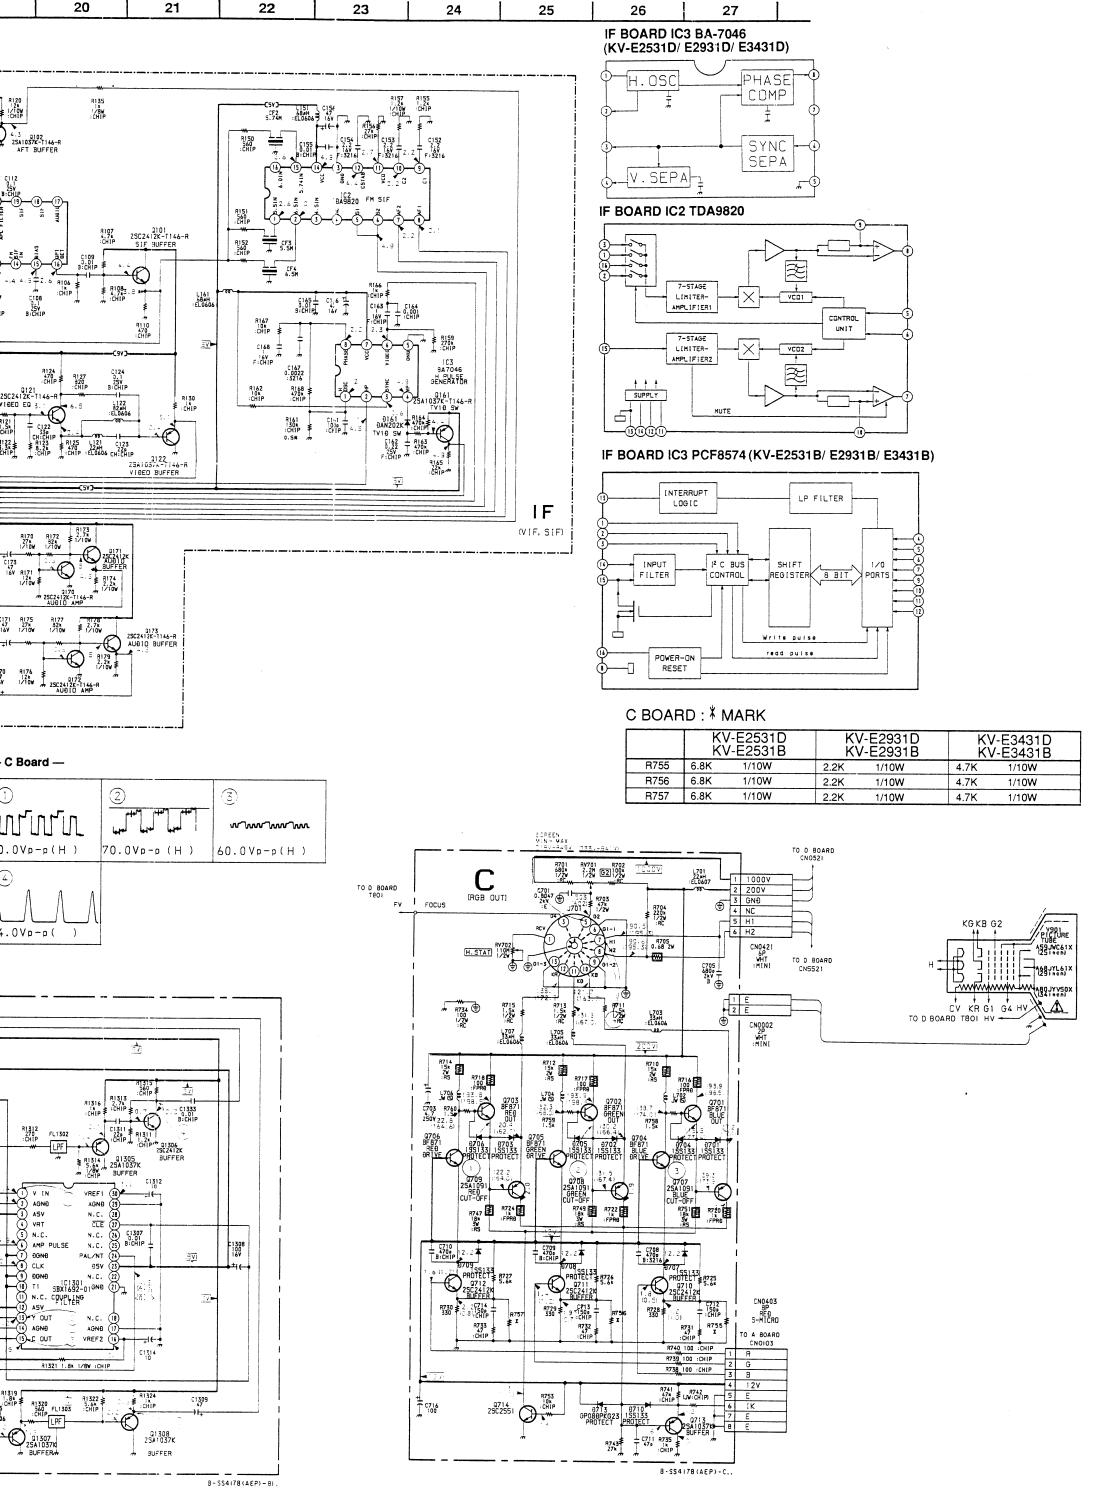




- B1 Board -

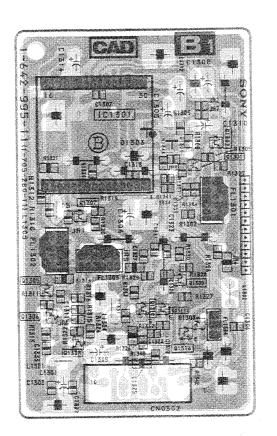


- Salar : Pattern from the side which enables seeing.
- Pattern of the rear side.

#### -- VM Board -- (KV-E2931D/ E3431D, E2931B/ E3431B ONLY)

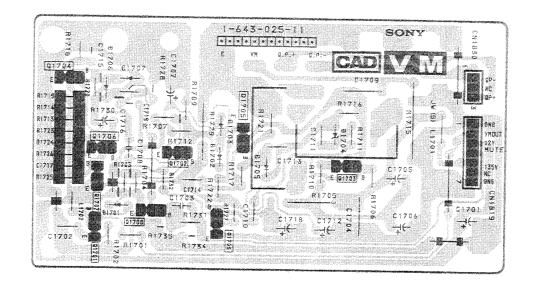


[R.G.B OUT]

— C Board —

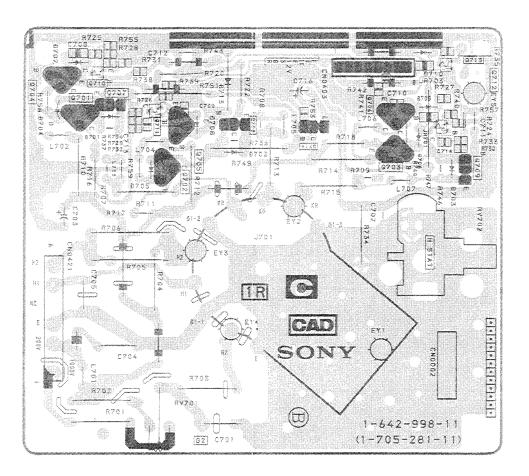

-- IF Board -- (KV-E2531 D/E2931 D/E3431 D ONLY)

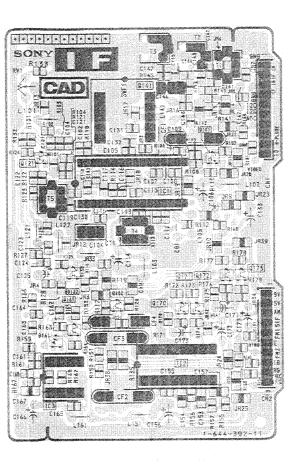




—IFBo




(1-705-281-11)



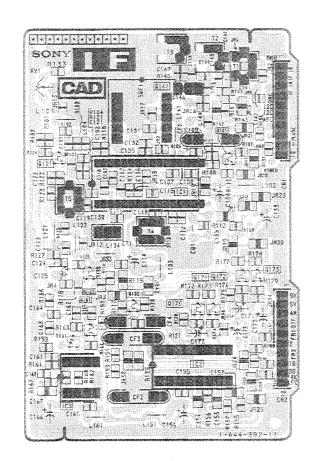


—IF Board — (KV-E2531B/E2931B/E3431B ONLY)

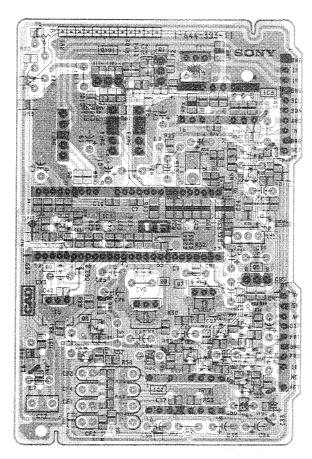

<u>02</u> C701

### 5-5. SEMICONDUCTORS

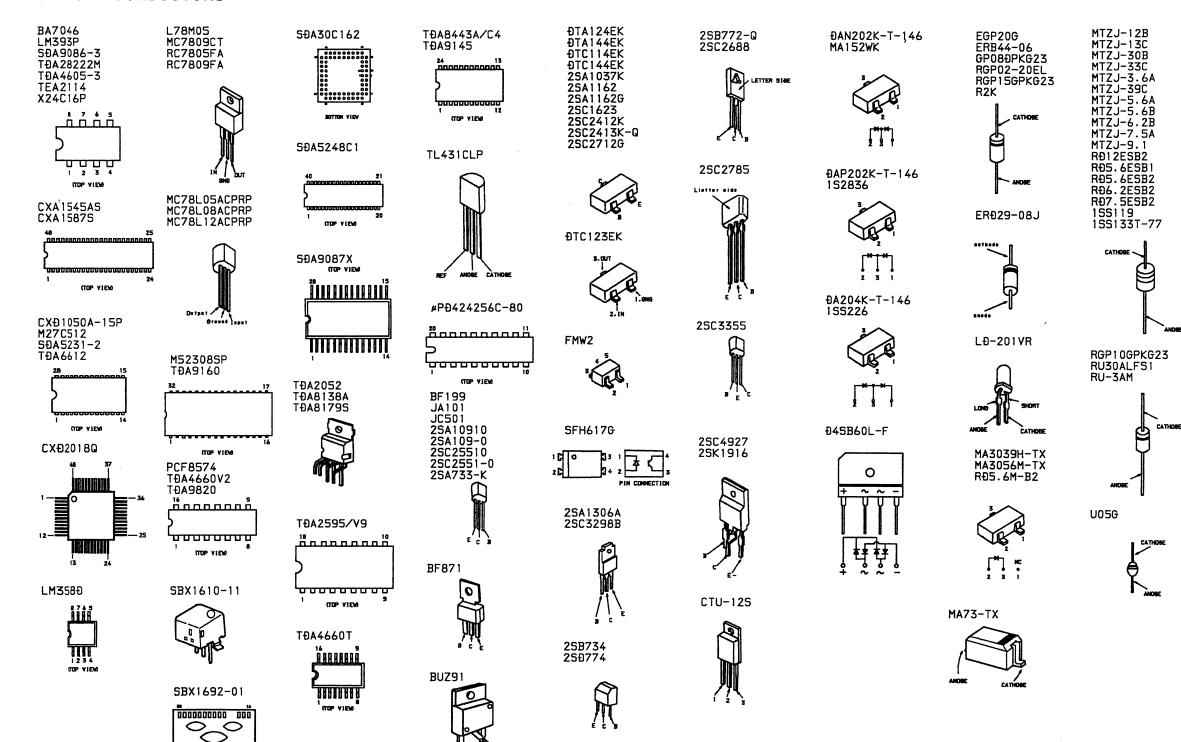

NOTE:

 Items with not stocke routine se

The const indicated column

6-1. CHA

■ : BVTP4>

REF.NO. PART

1 *1-64. 2 *1-64. 3 4-20. 4 \( \Lambda \). 1-57. 5 *A-16: 6 4-03: 7 \( \Lambda \). 4-38! 8 \( \Lambda \). 1-59!


₾. 1-590

9 #A-16; 10 #A-16; #A-16;

# 2SB772-Q 2SC2688




2SC2785

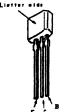

2SC3355



2SC4927 2SK1916

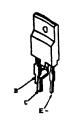

CTU-125



ĐAN202K-T-146 MA152WK




ĐAP202K-T-146 1S2836



ĐA204K-T-146 155226




**Đ45B60L-F** 

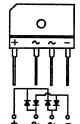

MA73-TX

EGP20G ERB44-06 GP08DPKG23 RGP02-20EL RGP15GPKG23

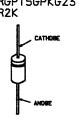

MTZJ-12B MTZJ-13C MTZJ-33C MTZJ-33C MTZJ-3.6A MTZJ-5.6A MTZJ-5.6B MTZJ-6.2B MTZJ-7.5A MTZJ-9.1 RÐ12ESB2 RÐ5.6ESB1 RÐ5.6ESB1 RÐ5.6ESB2 RÐ5.6ESB2 RÐ5.5ESB2 RÐ5.5ESB2

155119 155133T-77

RGP10GPKG23

RU30ALFS1 RU-3AM

U05G

ERÐ29-08J



LÐ-201VR



MA3039H-TX MA3056M-TX RÐ5.6M-B2







# NOTE:


- Items with no part number and no description are not stocked because they are seldom required for routine service.
- The construction parts of an assembled part are indicated with a collation number in the remark
- delay should be anticipated when ordering these

Items marked "*" are not stocked since they The components identified by shading and mark  $\Delta$  are seldom required for routine service. Some are critical for safety. delay should be anticipated when ordering these Replace only with part number specified.

Les composants identifies par une trame et une marque A sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

### 6-1. CHASSIS (KV-E2531D/ E2531B/ E2931D/ E2931B)


■: BVTP4x16 7-685-663-79

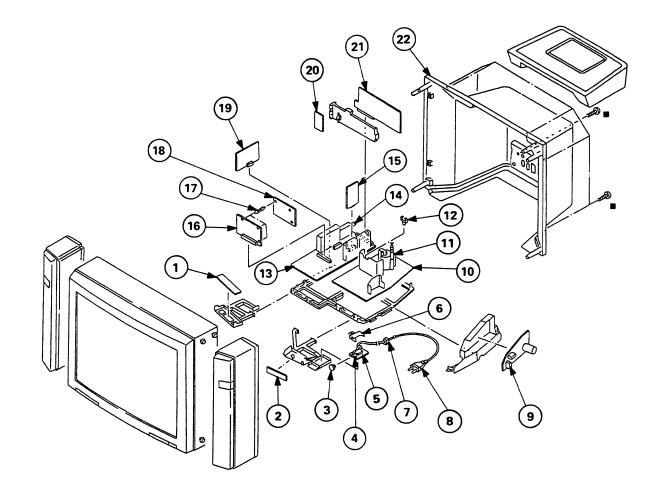

REF.NO. PART NO.	DESCRIPTION RE	MARK	REF.NO	D. PART NO.	DESCRIPTION	REMARK
1	F1 BOARD, COMPLETE COVER, POWER SWITCH HOLDER, AC CORD CORD, POWER (WITH CONNECTOR) (KV-E2531B, E2 CORD, POWER (WITH NOISE FILTER) (KV-E2531D, E2 F2 BOARD, COMPLETE D BOARD, COMPLETE (KV-E2531B, E2531D)	931D) )	12 13 14 15 16 17 18	⚠.1-453-118-11  *3-646-071-00  *A-1632-101-A  *A-1632-090-A  ⚠.1-693-185-11  *A-1620-036-A  *A-1635-001-A  *4-385-948-01  *A-1645-024-A  *A-1622-005-A  *1-643-003-11  *A-1651-033-A  4-201-017-11  4-200-026-21	TUNER (UV916H) B1 BOARD, COMPLETE M BOARD, COMPLETE HOLDER, PCB V BOARD. COMPLETE	D)

# 6-3. SPEAKER (KV-E2531D/ E2531B/ E2931D/ E2931B)


### ■: BVTP4x16 7-685-663-79

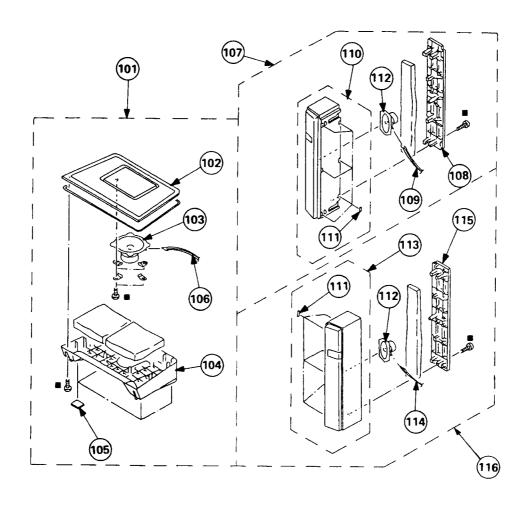

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION	REKARK
	A-1678-043-A X-4200-004-3 1-544-767-11 4-200-027-11 4-200-009-01 1-696-409-11 A-1678-041-A A-1678-041-A 4-036-628-01 4-036-628-01 1-696-406-11 X-4030-418-1 X-4030-427-1	BOX ASSY, WOOFER BOARD ASSY, BAFFLE SPEAKER (13CM) BOX, WOOFER CUSHION, FOOT CABLE, SPEAKER (WITH GROMMET) BOX COMPLETE ASSY (L)  PANEL (LEFT), REAR (KV-E2931B, E29 PANEL (LEFT), REAR (KV-E2931B, E29 CABLE, SPEAKER (WITH GROMMET) BOX (LEFT) ASSY, SIDE  (KV-E2531B, E29 (KV-E2931B, E29 (	108-112 E2931D) 531D) 931D) 111 E2531D)	112 113 114 115	4-200-006-01 1-504-151-11 X-4030-414-1 X-4030-426-1 1-696-407-11 4-036-626-01 4-036-644-01 A-1678-047-A A-1678-040-A	(KV-E2531B,	11  52 310) 53 D) 93 D) 11 ~115 52 310) 11 ~115

### 6-2. PICTURE TUBE (KV-E2531D/ E2531B/ E2931D/ E2931B)




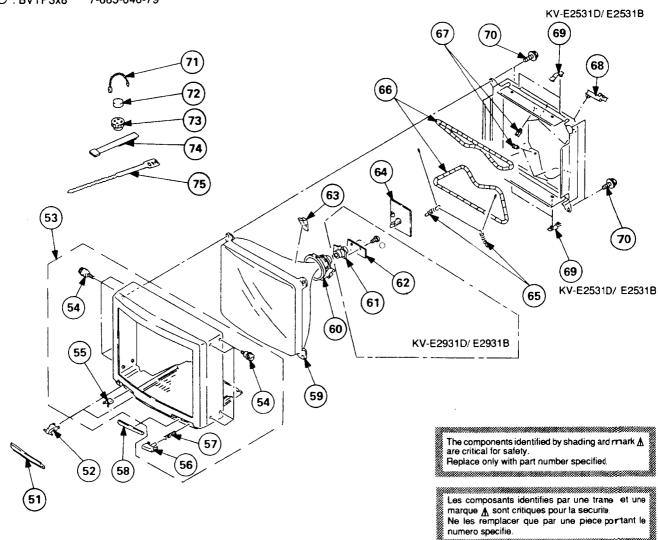

REF . NO	T. PART NO.	DESCRIPTION REMARK	REF.NO. PART NO.	DESCRIPTION RE	MARK
51	X-4201-006-8		61 1-452-509-42	NECK ASSY, PICTURE TUBE (NA-308) (KV-E2931B, E29	02101
<b>E</b> 2	X-4200-001-9 3-703-035-11	LID ASSY, CONTROL (KV-E2931B,E2931D) SHAFT, LID	62 *A-1644-028-A	VM BOARD, COMPLETE (KV-E2931B,E2931	
52 53	X-4030-417-1	CABINET ASSY (WITH BEZEL ASSY) 54~57	63 3-704-495-01	SPACER, DY	
		(KV-E2531B, E2531D)		C BOARD, COMPLETE (KV-E2531B,E2531D) C BOARD, COMPLETE (KV-E2931B,E2931D)	
	X-4030-411-1	CABINET ASSY (WITH BEZEL ASSY) 54~57 (KV-E2931B, E2931D)	*A-1638-025-A 65 4-303-774-21	SPRING, GROUND WIRE (KY-E25311, E 253	
54	X-4374-104-1	SCREW (B) ASSY, ORNAMENTAL	4-369-318-31	SPRING, TENSION (KV-E2931B,E2931 D)	
55	4-392-036-01	CATCHER, PUSH	66 A 1-402-746-21 A 1-402-747-21	COIL, DEGAUSSING (KV-E2531B, E253 1D) COIL, DEGAUSSING (KV-E2931B, E293 1D)	
56 57	4-200-013-01 4-329-112-21	BUTTON, POWER SPRING	67 4-034-296-01	HOLDER, DGC	
58	4-200-017-31	WINDOW, ORNAMENTAL	68 *4-387-284-01	HOLDER, LEAD	
59	<b>∆.8-733-231-05</b>	PICTURE TUBE (A59JWC61X) (KV-E2531B.E2531D)	69 <b>*4</b> -385-916-01 70 <b>4</b> -036-188-01	HOLDER (D) (KV-E2531B,E2531D) SCREW (M). PT	
	<b>1.8-733-831-05</b>	PICTURE TUBE (A68JYL61X)	71 4-308-870-00	CLIP, LEAD WIRE	
60	A 1 451 311 31	(KV-E2931B, E2931D)		MAGNET, DISK; IOMM ø	
60	<b>∆</b> 1-451-311-21	DEFLECTION YOKE (Y25FXA) (KV-E2531B, E2531D)		MAGNET, ROTATABLE DISK; 15MM / PERMALLOY ASSY, CORRECTION	
	<b>▲</b> 1-451-313-21	DEFLECTION YOKE (Y29FXA)	75 3-701-007-00	BAND, BINDING	
		(KV-E2931B, E2931D)	i		

# 6-5. PICTURE TUBE (KV-E3431D/ E3431B)

### ●: BVTP3x12 7-685-648-79

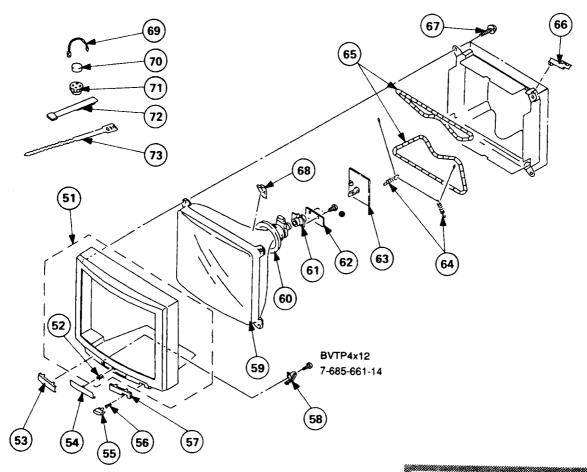


The components identified by shading and mark  $\triangle$  are critical for safety. Replace only with part number specified.

Les composants identifies par une trame et une marque  $\Delta$  sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

REF.NO.	PART NO.	DESCRIPTION	REMARK	REF.NO. PART NO.	DESCRIPTION	REM ARK
60 A 61 A	X-4200-119-1 4-392-036-01 4-200-435-01 4-200-828-01 4-200-444-01 4-329-112-41 4-200-443-01 X-4029-881-1 8-733-723-05 1-451-315-11 1-452-579-11 *A-1342-189-A	CABINET ASSY (WITH BEZEL ASSY) CATCHER, PUSH PLATE, ORNAMENTAL DOOR BUTTON, POWER SPRING WINDOW, ORNAMENTAL DAMPER ASSY PICTURE TUBE (A80JYV50X) DEFLECTION YOKE (Y34FXA) NECK ASSY, PICTURE TUBE (NA322) VM BOARD, COMPLETE	52	64 *4-376-036-01 65 <u>A.1-402-748-11</u> 66 *4-387-284-01 67 4-200-976-01 68 3-704-495-01 69 4-308-870-00 70 1-452-032-00 71 1-452-094-00	C BOARD, COMPLETE SPRING, TENSION COIL, DEGAUSSING HOLDER, LEAD SCREW, PT SPACER, DY CLIP, LEAD WIRE MAGNET, DISK; 10MM  MAGNET, ROTATABLE DISK; 15MM  PERMALLOY ASSY, CONVERGENCE BAND, BINDING	

## 6-4. CHASSIS (KV-E3431D/ E3431B)

### **II**: BVTP4x16 7-685-663-79

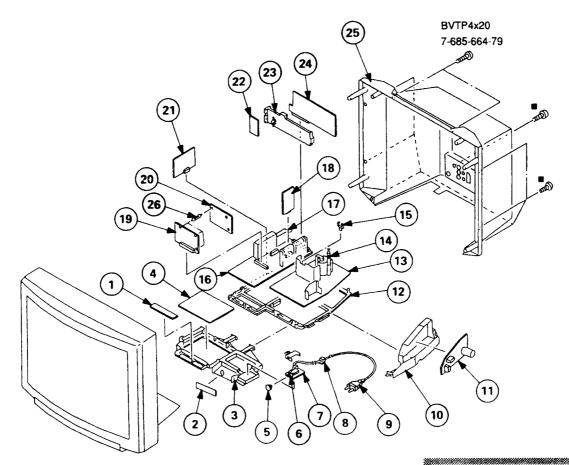

The components identified by shading and mark \( \frac{\Lambda}{\text{ are critical for safety.}}\)
Replace only with part number specified.

Les composants identifies par une trame et une marque ▲ sont critiques pour la securite.

Ne les remplacer que par une piece portant le numero specifie.

REF.NO. PART NO.	DESCRIPTION REMAR	REF.NO. PART NO.	DESCRIPTION	REMARK
1 *1-643-004-11 2 *1-642-997-11 3 *4-202-171-01 4 *A-1640-083-A 5 4-386-611-01 6 Δ.1-571-433-12 7 *A-1241-086-A 8 Δ.4-389-201-03 9 Δ.1-590-460-11 Δ.1-590-501-11 10 *4-202-140-01 11 *A-1624-012-A 2 *4-202-141-01 13 *A-1642-083-A	HI BOARD H2 BOARD BRACKET, H DI BOARD, COMPLETE COVER, SWITCH SWITCH, PUSH (AC POWER) FI BOARD, COMPLETE HOLDER, AC CORD CORD, POWER (WITH CONNECTOR) (KY-E3431 CORD, POWER (WITH NOISE FILTER) BRACKET, F F2 BUARD, COMPLETE BRACKET, MAIN D BOARD, COMPLETE	*A-1297-008-A 17	HOLDER, WIRE A BOARD, COMPLETE A BOARD, COMPLETE TUNER (UV916H) BI BOARD, COMPLETE W BOARD, COMPLETE P BOARD, COMPLETE K BOARD BRACKET, J J BOARD, COMPLETE COVER ASSY, REAR	(KV-E3431B) (KV-E3431D)



## **SECTION 7 ELECTRICAL PARTS LIST**

NOTE:

The components identified by shading and mark  $\triangle$  are critical for safety. Replace only with part number

specified.

Les composants identifies par une trame et une marque 🛕 sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

All variable and adjustable resistors have characteristic curve B, unless otherwise noted.

When indicating parts by reference number, please include the board name.

CAPACITORS MF:  $\mu F$ , PF:  $\mu \mu F$ 

COILS MMH: mH, UH: µH


RESISTORS

All resistors are in ohms F: nonflammable

REF.NO. PART NO.	DESCRIPTION		REMARK	REF.NO.	PART NO.	DESCRIPTION		REMARK
*A-1620-036-A	D. D			}				
*A-1131-037-A	B1 BUARD, CUMPLETE ***********************************	1D,E2931 E <b>343</b> 1B,E	B,E2931D) 3431D)	L1301 L1302 L1304 L1305	1-408-405-00 1-408-405-00 1-408-406-00 1-408-418-00	INDUCTOR INDUCTOR INDUCTOR INDUCTOR INDUCTOR	4.7UH 4.7UH 5.6UH 56UH	
<cap< td=""><td>ACITUR&gt;</td><td></td><td></td><td></td><td><tra< td=""><td>NSISTOR&gt;</td><td></td><td></td></tra<></td></cap<>	ACITUR>				<tra< td=""><td>NSISTOR&gt;</td><td></td><td></td></tra<>	NSISTOR>		
C1303 1-164-232-11 C1304 1-124-478-11 C1305 1-124-478-11	CERAMIC CHIP 0.01MF CERAMIC CHIP 0.01MF BLECT 100MF BLECT 100MF		25V 50V 50V 25V 25V	Q1305 Q1306	8-729-120-28 8-729-120-28 8-729-216-22 8-729-120-28 8-729-216-22	TRANSISTOR 2 TRANSISTOR 2 TRANSISTOR 2 TRANSISTOR 2	SA1162-G SC1623-L5L6	
C1306 1-164-232-11 C1307 1-164-232-11 C1308 1-124-478-11 C1309 1-124-910-11 C1310 1-124-917-11	CERAMIC CHIP 0.01MF CERAMIC CHIP 0.01MF ELECT 100MF ELECT 47MF ELECT 33MF	10% 10% 20% 20% 20%	50V 50V 25V 50V 50V	Q1308 Q1309 Q1310 Q1311	8-729-216-22 8-729-216-22 8-729-216-22 8-729-216-22 8-729-120-28	TRANSISTOR 2 TRANSISTOR 2 TRANSISTOR 2 TRANSISTOR 2	SA1162-G SA1162-G SA1162-G SA1162-G	
C1311 1-163-101-00 C1312 1-124-907-11	CERAMIC CHIP 22PF ELECT 10MF	5% 20%	50V 50V 50V 25V		<res< td=""><td>ISTOR&gt;</td><td></td><td></td></res<>	ISTOR>		
C1319 1-163-031-11 C1320 1-163-031-11 C1321 1-163-101-00 C1322 1-163-101-00 C1323 1-163-109-00	CERAMIC CHIP 0.1MF CERAMIC CHIP 0.01MF CERAMIC CHIP 0.01MF CERAMIC CHIP 22PF CERAMIC CHIP 22PF CERAMIC CHIP 47PF CERAMIC CHIP 470PF	5% 5%	50V 50V 50V 50V 50V	JR1 JR2 JR3 JR4 JR5	1-216-295-00 1-216-295-00 1-216-295-00 1-216-296-00 1-216-296-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 5% 0 5% 0 5% 0 5% 0 5%	1/10W 1/10W 1/10W 1/8W 1/8W
C1324 1-163-133-00 C1325 1-163-169-00	CERAMIC CHIP 470PF CERAMIC CHIP 33PF	5% 5%	50V 50V	JR6 JR7 R1301	1-216-295-00 1-216-295-00 1-216-071-00	METAL GLAZE METAL GLAZE METAL GLAZE	0 5% 0 5% 8.2K 5% 27K 5% 1.2K 5%	1/10W 1/10W 1/10W
C1327 1-163-038-00 C1333 1-164-232-11	CERAMIC CHIP 33PF CERAMIC CHIP 0.1MF CERAMIC CHIP 0.01MF	10%	25V 50V	R1302	1-216-083-00 1-216-051-00	METAL GLAZE METAL GLAZE	27K 5% 1.2K 5%	1/10W 1/10W
<cun< td=""><td>NECTOR&gt; CONNECTOR, BOARD TO BOAR</td><td></td><td></td><td>R1304 R1305 R1306</td><td>1-216-043-00 1-216-067-00 1-216-049-00 1-216-049-00 1-216-025-00</td><td>METAL GLAZE METAL GLAZE METAL GLAZE</td><td>560 5% 5.6K 5% 1K 5% 1K 5% 100 5%</td><td>1/10W 1/10W 1/10W</td></cun<>	NECTOR> CONNECTOR, BOARD TO BOAR			R1304 R1305 R1306	1-216-043-00 1-216-067-00 1-216-049-00 1-216-049-00 1-216-025-00	METAL GLAZE METAL GLAZE METAL GLAZE	560 5% 5.6K 5% 1K 5% 1K 5% 100 5%	1/10W 1/10W 1/10W
CN0302*1-573-299-11	CONNECTOR, BOARD TO BOAR	RD 10P	, 1 1	R1307 R1308	1-216-049-00 1-216-025-00	METAL GLAZE METAL GLAZE	1K 5% 100 5%	1/10W 1/10W
<010	DE>		! !	R1310	1-216-067-00 1-216-051-00 1-216-035-00	METAL GLAZE	5.6K 5%	1/10W 1/10W
D1302 8-719-400-18	DE> DIODE MAI52WK			R1313	1-216-035-00 1-216-059-00 1-216-216-00	METAL GLAZE	5.6K 5% 1.2K 5% 270 5% 2.7K 5% 5.6K 5%	1/10W 1/10W 1/10W 1/8W
				R1315	1-216-043-00	METAL GLAZE		1/10W
FL1301 1-236-620-11 FL1302 1-236-620-11 FL1303 1-236-620-11 FL1304 1-236-164-11	FILTER, LOW PASS FILTER, LOW PASS FILTER, LOW PASS ENCAPSULATED COMPONENT			R1316 R1319 R1320 R1321	1-216-049-00 1-216-055-00 1-216-043-00 1-216-204-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	560 5% 1K 5% 1.8K 5% 560 5% 1.8K 5%	1/10W 1/10W 1/10W 1/8W
(10)				R1322 R1324	1-216-067-00 1-216-049-00	METAL GLAZE METAL GLAZE		1/10W 1/10W
1C1301 8-741-692-01	1C SBX1692-01			R1326 R1327	1-216-202-00 1-216-059-00 1-216-043-00	METAL GLAZE METAL GLAZE	5.6K 5% 1K 5% 1.5K 5% 2.7K 5% 560 5%	1/8W 1/10W 1/10W

### 6-6. SPEAKER (KV-E3431D/E3431B)

■ : BVTP4x16 7-685-663-79
□ : BVTP4x10 7-685-660-79
△ : BVTP4x8 7-685-659-79

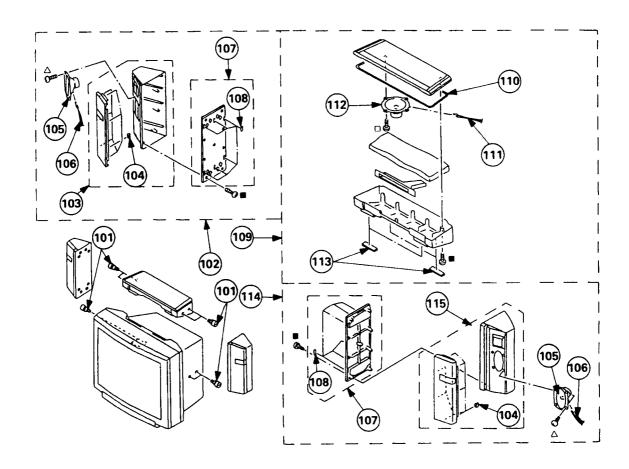

REF.NO. PART NO.	DESCRIPTION	REMARK   REF.	NO. PART NO.	DESCRIPTION	REMARK 
101 X-4374-104-1 102 A-1678-039-1 103 X-4200-115-1 104 4-202-030-0 105 1-504-151-2 106 1-696-408-1 107 X-4200-116-1 108 4-200-006-1	BOX COMPLETE ASSY (LEFT) BOX ASSY, SIDE (L) CLIP SPEAKER (7.5X13CM) CABLE, SPEAKER (WITH GROMMET) BOTTOM ASSY, SIDE	103~108 110 104 111 112 112 108 115	*4-200-471-01 1-696-410-11 1-544-767-11 4-200-473-01 A-1678-038-A	BOX ASSY, WOOFER GASKET CABLE, SPEAKER (WITH GROMMET SPEAKER (13CM) CUSHION, FOOT (B) BOX COMPLETE ASSY (RIGHT) BOX ASSY, SIDE (R)	110~113 14~108,115 104



REF.NO. PART NO.	DESCRIPTION		REMARK	REF.NO. PART NO. DESCRIPTION	REMARK
C324	ELECT 47MF CERAMIC CHIP 0.1MF CERAMIC CHIP 0.1MF CERAMIC CHIP 0.1MF CERAMIC CHIP 1MF	20% 10% 10% 10%	50V 25V 25V 25V 16V	CN0102 1-573-296-11 CONNECTOR, BOARD TO BOARD 10P CN0103*1-564-511-11 PLUG, CONNECTOR 8P CN0104*1-568-882-51 PIN, CONNECTOR 7P CN0105-1 568-882-51 PIN, CONNECTOR 7P CN0105-1 568-882-51 PIN, CONNECTOR 7P	
C345   1.164 346-11 C347   1.62-638-11 C348   1.164-346-11 C349   1.164-346-11	CERAMIC CHIP IMF	20%	16V 16V 16V 16V	CN0105*1-568-880-51 PIN, CONNECTOR 5P CN0107*1-568-879-51 PIN, CONNECTOR 4P CN0108*1-568-878-51 PIN, CONNECTOR 3P CN0109 1-695-299-11 CONNECTOR, BOARD TO BOARD 50P CN0110*1-568-882-51 PIN, CONNECTOR 7P	
C350 1-124-907-11 C351 1-126-233-11 C353 1-164-346-11 C354 1-164-346-11	ELECT 22MF CERAMIC CHIP IMF	20% 20%	50V 50V 16V	CN0113 1-568-882-51 PIN, CONNECTOR 7P CN0113 1-695-298-11 CONNECTOR, BOARD TO BOARD 40P CN0114*1-568-879-51 PIN, CUNNECTOR 4P CN0115*1-564-516-11 PLUG, CONNECTOR 13P	
C355 1-162-638-11 C356 1-164-489-11	CERAMIC CHIP IMF	10%	16V 16V 16V	CNOI16*1-568-879-51 PIN, CONNECTOR 4P CNOI19*1-568-879-81 PIN, CONNECTOR 4P CNOI37*1-564-511-11 PLUG, CONNECTOR 8P	
C357 1-164-299-11 C358 1-164-299-11 C359 1-124-907-11 C361 1-163-101-00 C362 1-137-134-91	CERAMIC CHIP 0.22MF ELECT 10MF	10% 10% 20% 5%	25V 25V 50V 50V 63V	CN5108*1-564-513-11 PLUG, CONNECTOR 10P	
C363 1-124-907-11 C365 1-124-120-11 C366 1-124-903-11 C401 1-164-005-11 C402 1-124-917-11	ELECT 10MF BLECT 220MF ELECT 1MF	20% 20% 20% 20%	50V 16V 50V 16V 50V	D068	
C403 1-164-005-11 C411 1-164-005-11 C412 1-164-005-11 C421 1-124-910-11 C422 1-124-910-11	CERAMIC CHIP 0.47MF CERAMIC CHIP 0.47MF CERAMIC CHIP 0.47MF ELECT 47MF ELECT 47MF	20% 20%	16V 25V 25V 50V 50V	D077	
C423 I-101-004-00 C424 I-163-129-00 C425 I-163-129-00 C426 I-124-910-11 C427 I-164-346-11	CERANIC CHIP 330PF	5% 5% 20%	50V 50V 50V 50V 16V	D206	
C428 I - 164 - 346 - 11 C429 I - 124 - 119 - 00 C574 I - 163 - 117 - 00 C581 I - 163 - 031 - 11 C582 I - 126 - 233 - 11		20% 5% 20%	16V 16V 50V 50V 50V	D211	
C583	CERAMIC CHIP 0.022MF ELECT 1MF CERAMIC CHIP 1MF	5% 10% 20%	50V 50V 50V 16V 50V	D303 8-719-104-34 D10DE 1S2836 D304 8-719-109-89 D10DE RD5.6ES-B2 D305 8-719-400-18 D10DE MA152WK D306 8-719-400-18 D10DE MA152WK D307 8-719-400-18 D10DE MA152WK	
C590   1   126 - 233 - 11   C591   1   124 - 925 - 11   C592   1   163 - 017 - 00   C593   1   164 - 182 - 11   C595   1   163 - 117 - 00	ELECT 22MF ELECT 2.2MF CERAMIC CHIP 0.0047MF CERAMIC CHIP 100PF	20% 20% 10% 10%	50V 50V 50V 50V 50V	D308 8-719-800-76 D10DE 1SS226 D311 8-719-800-76 D10DE 1SS226 D381 8-719-110-03 D10DE RD7.5ES-B2 D401 8-719-921-69 D10DE MTZJ-9.1 D403 8-719-921-69 D10DE MTZJ-9.1	
C681	ELECT 100MF ELECT 100MF ELECT 100MF ELECT 100MF ELECT 100MF	20% 20% 20% 20% 20%	25V 16V 25V 25V 25V	D405 8-719-921-69 D10DE MTZJ-9.1 D406 8-719-921-69 D10DE MTZJ-9.1 D407 8-719-921-69 D10DE MTZJ-9.1 D571 8-719-800-76 D10DE ISS226 D681 8-719-981-99 D10DE MTZJ-3.3	
<f11.< td=""><td>.TER&gt;</td><td></td><td></td><td>D682 8-719-109-89 DIODE RD5.6ES-B2</td><td></td></f11.<>	.TER>			D682 8-719-109-89 DIODE RD5.6ES-B2	
	OSCILALTOR, CERAMIC			<10>	
<00 <b>N</b>	INECTOR>			1CO72	
CN0001*1~568-880-71	PIN, CONNECTOR 5P CONNECTOR, BOARD TO BOA		D,E3431D)	1C251 8-759-072-99 IC TDA2052 1C261 8-759-072-99 IC TDA2052	

The components identified by shading and mark  $\Delta$  are critical for safety. Replace only with part number

specified.

Les composants identifies par une trame et une marque \( \text{\Lambda} \) sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.



ADD NO DART NO				DEMARK	PEE NO	PART NO.	DESCRIPTION		REMARK
REF.NO. PART NO.					!				
R1329 1-216-043-00 R1330 1-216-073-00 R1331 1-216-069-00 R1332 1-216-069-00 R1333 1-216-067-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	560 5% 10K 5% 6.8K 5% 6.8K 5% 5.6K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		C204 C205 C206 C207 C208	1-124-907-11	CERAMIC CHIP 0.0022	20% 4F 10%	25V 50V 50V 100V 25V
R1334 1-216-055-00 R1341 1-216-089-00 R1342 1-216-073-00 R1343 1-216-057-00 R1344 1-216-065-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1.8K 5% 47K 5% 10K 5% 2.2K 5% 4.7K 5%	1/10W 1/10W 1/10W 1/10W 1/10W		C209 C210 C211 C213 C214	1-164-005-11 1-164-005-11 1-164-004-11 1-163-023-00 1-163-023-00	CERAMIC CHIP 0.47MF CERAMIC CHIP 0.1MF CERAMIC CHIP 0.015MI	10 <b>%</b> 10 <b>%</b>	25V 25V 25V 50V 50V
******	******	*******			1	1-163-809-11	CERAMIC CHIP 0.047M CERAMIC CHIP 0.047M	10%	25V 25V
*A-1624-009-A	**************************************	***** 2531B,E253			C217 C218	1-124-925-11 1-124-925-11	ELECT 2.2MF	20% 20%	50V 50V 50V
*A-1241-086-A	F1 BOARD, CON *************  HOLDER, FUSE				C220 C221 C222	1-163-011-11 1-124-925-11 1-124-925-11 1-137-028-11	CERAMIC CHIP 0.0015 ELECT 2.2MF ELECT 2.2MF FILM 1MF	MF 10% 20% 20% 10%	50V 50V 50V 63V
*4-341-751-01 *4-341-752-01	EYELET (E169)	,61092)			C224	1-137-028-11	FILM 1MF	10%	63V
1-533-230-11 *4-341-751-01 *4-341-752-01 <con CNO003*1-580-844-11 CNO831*1-695-292-11</con 	NNECTOR> PIN, CONNECTO	OR (POWER) OR (POWER)			C225 C226 C227 C228 C229	1-164-182-11 1-163-007-11 1-124-907-11 1-124-907-11 1-124-478-11	ELECT 10MF	MF 10% 10% 20% 20% 20%	50V 50V 50V 50V 25V
CMO651+1 055 252 11	TIN, COMBOIN	,,, (1 ombit)			C230	1-124-478-11	RLECT 100MF	20%	25V
<fu: F651 ▲1-576-232-21</fu: 		) 5A/250V			C231 C232 C233 C234	1-164-346-11 1-163-009-11 1-163-009-11	CERAMIC CHIP 1MF CERAMIC CHIP 0.001M CERAMIC CHIP 0.001M CERAMIC CHIP 0.0047	F 10% F 10%	16V 50V 50V 50V
<sw< td=""><td>ITCH&gt;</td><td></td><td></td><td></td><td>C235</td><td>1-137-134-91</td><td>FILM 0.22MF</td><td>5%</td><td>63V</td></sw<>	ITCH>				C235	1-137-134-91	FILM 0.22MF	5%	63V
S651 <u>A</u> 1-571-433-12	SWITCH, PUSH			******	C236 C237 C238 C239	1-124-618-11 1-124-618-11 1-163-017-00 1-137-134-91	ELECT 2200MF ELECT 2200MF CERAMIC CHIP 0.0047 FILM 0.22MF	20% MF 10%	35V 35V 50V 63V
	A BOARD, COM				C240	1-126-233-11	ELECT 22MF		50V
*A-1632-090-A	************* A BOARD, COM	***** Plete (KV- *****	E2531D, E2	931D)	C241 C242 C243 C244	1-126-233-11 1-124-903-11 1-163-119-00 1-164-232-11	ELECT 1MF CERAMIC CHIP 120PF	20 <b>%</b> 5 <b>%</b>	50V 50V 50V 50V
	A BOARD, COM	****			1	1-126-320-11			167
4-200-001-01	A BOARD, COM ************************************	*****	C)4)10/		C302	1-163-038-00 1-163-038-00 1-164-346-11	CERAMIC CHIP 0.1MF		25V 25V 16V 25V
4-201-023-01 4-812-134-00					C305	1-163-097-00	CERAMIC CHIP 15PF		50V
<ca CO71 1-124-126-00</ca 	PACITOR>	47 <b>m</b> f	20 <b>%</b>	10 <b>V</b>	C306 C307 C308 C309	1-163-097-00 1-163-017-00 1-163-037-11 1-164-004-11	CERAMIC CHIP 15PF CERAMIC CHIP 0.0047 CERAMIC CHIP 0.022N		50V 50V 25V 25V
C072 1-124-120-11 C072 1-124-120-11 C074 1-163-001-11 C102 1-126-103-11 C103 1-163-031-11	ELECT CERAMIC CHIP ELECT	220MF 220PF 470MF	20% 10% 20%	16V 50V 16V 50V	C310 C311 C312 C313	1-163-038-00 1-163-038-00 1-124-910-11 1-163-077-00	CERAMIC CHIP 0.1MF CERAMIC CHIP 0.1MF BLECT 47MF CERAMIC CHIP 0.1MF	20%	25V 25V 50V 50V
C104 1-124-910-11 C105 1-126-233-11 C106 1-124-927-11 C110 1-124-478-11 C111 1-102-074-00	ELECT ELECT ELECT	47MF 22MF 4.7MF 100MF 0.001MF	20% 20% 20% 20% 10%	50V 50V 50V 25V 50V	C314 C315 C316 C317	1-163-038-00 1-124-910-11 1-163-077-00 1-163-103-00	ELECT 47MF CERAMIC CHIP 0.1MF CERAMIC CHIP 27PF	20 <b>%</b> 5 <b>%</b> 5%	25V 50V 50V 50V 50V
		(KV-E25	31B, E2931		C318 C319	1-163-103-00 1-163-038-00		26	25V
C120 1-163-031-11 C201 1-137-129-91 C202 1-137-129-91 C203 1-164-005-11	[ FILM [ FILM	0.033MF 0.033MF	5% 5%	50V 63V 63V 25V	C320 C321 C322 C323	1-124-910-11 1-163-038-00 1-126-233-11 1-163-135-00	CERAMIC CHIP 0.1MF ELECT 22MF	20% 20% 5%	50V 25V 50V 50V



REF.NO	D. PART NO.	DESCRIPTIO	N -			REMARK	REF.NO	. PART NO.	DESCRIPTION				REMARK
JR226 JR227 JR228 JR229 JR230	1-216-296-00 1-216-296-00 1-216-296-00	METAL GLAZE METAL GLAZE METAL GLAZE	0 0 0 0		1/8W 1/8W 1/8W 1/8W 1/8W		R229 R230 R231 R232 R233	1-216-039-00 1-216-246-00 1-216-097-00 1-216-081-00	METAL GLAZE METAL GLAZE METAL GLAZE	390 100k 100k 22k	5% 5% 5%	1/10W 1/8W 1/10W 1/10W	
JR235	1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 0 0 0		1/8W 1/8W 1/8W 1/8W 1/8W		R234 R235 R236 R237 R238	1-216-071-00 1-216-077-00 1-216-073-00 1-216-081-00 1-216-025-00 1-216-025-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	8.2K 15K 10K 22K 100 100	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W 1/10W	
JR236 JR237 JR238 JR239 JR240	1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 0 0	5% 5%	1/8W 1/8W 1/8W 1/8W 1/8W		R239 R240 R241 R242 R243	1-216-073-00 1-216-089-00 1-216-057-00 1-216-218-00 1-249-438-11	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 47K 2.2K 6.8K 56K	5% 5% 5%	1/10W 1/10W 1/10W 1/8W 1/4W	
JR244 JR245	1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 0 0 0	5% 5%	1/8W 1/8W 1/8W 1/8W 1/8W		R244 R245 R247 R248 R249	1-216-089-00 1-216-089-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	47K 47K 10K 10K 680	5% 5% 5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
JR247 JR248 JR250 JR251 JR252	1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 0 0 0	5% 5%	1/8W 1/8W 1/8W 1/8W 1/8W		R250 R251 R252 R253 R254	1-216-095-00 1-216-065-00 1-216-073-00 1-216-073-00 1-216-252-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	82K 4.7K 10K 10K 180K	5% 5% 5%	1/10W 1/10W 1/10W 1/10W	
JR253 R071 R072 R073 R074	1-216-296-00 1-216-041-00 1-216-033-00 1-216-033-00 1-216-198-00	METAL GLAZE	0 470 220 220 1 K	5% 5% 5% 5%	1/8W 1/10W 1/10W 1/10W 1/8W		R255 R256 R257 R259 R260	1-216-252-00 1-249-409-11 1-249-409-11 1-216-049-00	METAL GLAZE CARBON CARBON METAL GLAZE	180K 220 220 1K	5% 5%	1/8W 1/8W 1/4W 1/4W 1/10W	
R076 R077 R101 R102 R103	1-216-057-00 1-216-025-00 1-216-025-00 1-216-049-00 1-216-059-00		2.2K 100 100 1K 2.7K	5%	1/10W 1/10W 1/10W 1/10W 1/10W		R301 R302 R303 R304	1-216-198-00 1-216-029-00 1-216-029-00 1-216-174-00 1-216-174-00	METAL GLAZE METAL GLAZE METAL GLAZE	1K 150 150 100 100	577 577 577 577 577 577	1/8W 1/10W 1/10W 1/8W 1/8W	
R105 R108 R115 R201 R202	1-216-073-00 1-216-230-00 1-216-210-00 1-216-653-11 1-216-653-11	METAL GLAZE METAL GLAZE METAL GLAZE METAL CHIP METAL CHIP	10K 22K 3.3K 1.2K 1.2K	5% 5% 0.50%	1/10W 1/8W 1/8W 1/10W 1/10W		R305 R306 R307 R308 R309	1-216-035-00 1-216-035-00 1-216-075-00 1-216-121-00 1-216-001-00	METAL GLAZE METAL GLAZE	270 270 12K 1M 10	5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R203 R204 R205 R206 R207	1-216-067-00 1-216-091-00 1-216-071-00 1-216-071-00 1-216-057-00	METAL GLAZE METAL GLAZE	5.6K 56K 8.2K 8.2K 2.2K	5 <b>%</b>	1/10W 1/10W 1/10W 1/10W 1/10W		R311 R312 R313 R314	1-216-001-00 1-216-065-00 1-249-407-11 1-216-081-00 1-249-409-11	METAL GLAZE	10 4.7K 150 22K 220	5% 5% 5%	1/10W 1/10W 1/4W 1/10W 1/4W	
R208 R209 R210 R211 R212	1-216-057-00 1-249-377-91 1-247-734-11 1-247-734-11 1-216-049-00	METAL GLAZE CARBON CARBON CARBON METAL GLAZE	2.2K 0.47 39 39 1K	5% 5% 5% 5%	1/10W 1/4W F 1/2W 1/2W 1/10W		R315 R316 R317	1-249-409-11 1-216-097-00 1-216-073-00 1-216-029-00 1-249-407-11	CARBON METAL GLAZE METAL GLAZE METAL GLAZE CARBON	220 100K 10K 150	5% 5% 5%	1/4W 1/10W 1/10W 1/10W	
R213 R214 R215 R216 R217	1-216-073-00 1-216-049-00 1-216-073-00 1-216-049-00 1-216-047-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 1K 10K 1K 820	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R320 R321 R322 R324	1-216-174-00 1-216-039-00 1-216-029-00 1-216-049-00 1-216-041-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	150 100 390 150 1K	5%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%%	1/4W 1/8W 1/10W 1/10W	
R218 R221 R222 R223 R224	1-216-081-00 1-212-849-00 1-216-049-00 1-216-047-00 1-249-433-11	METAL GLAZE FUSIBLE METAL GLAZE METAL GLAZE CARBON	22K 4.7 1K 820 22K	5% 5% 5% 5%	1/10W 1/4W F 1/10W 1/10W		R326 R328 R329 R330	1-216-073-00 1-216-025-00 1-216-023-00 1-216-053-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	470 10K 100 82 1.5K	5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
R225 R226 R227 R228	1-212-849-00 1-249-412-11	FUSIBLE CARBON METAL GLAZE METAL GLAZE	4.7 390 22K 22K	5% 5% 5%	1/4W F 1/4W F 1/4W 1/10W 1/10W		R333 R334 R339	1-216-097-00 1-216-182-00 1-216-182-00 1-216-025-00 1-216-025-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	100K 220 220 100 100	5% 5% 5% 5%	1/10W 1/8W 1/8W 1/10W 1/10W	



REF.NO. PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION		REMARK
1C302 8-759-50 1C304 8-752-05	6-54 IC CXA1587S		JR103 JR104 JR105	1-216-295-00 1-216-295-00 1-216-295-00	METAL GLAZE METAL GLAZE METAL GLAZE	0 5% 0 5% 0 5%	1/10W 1/10W 1/10W
1C401 8-752-06 1C402 8-759-07 1C681 8-759-07 1C683 8-759-98	73-00 IC TEA2114 12-98 IC TDA8138A 12-10 IC RC7809FA		JR107 JR108 JR109 JR110 JR111	1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 5% 0 5% 0 5% 0 5% 0 5%	1/10W 1/10W 1/10W 1/10W 1/10W
10684 8-759-98	<pre><!--F BLOCK--> s5-!1</pre>		JR112 JR113 JR114 JR115	1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 5% 0 5% 0 5% 0 5%	1/10W 1/10W 1/10W 1/10W
	(KV-E2531B,E29 33-11 IF BLOCK (IFH-389) (KV-E2531D,E29		JR116 JR117 JR118 JR119	1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00	METAL GLAZE METAL GLAZE	0 5% 0 5% 0 5% 0 5% 0 5%	1/10W 1/10W 1/10W 1/10W
L101 1-412-54	<coll>       16-21 INDUCTOR     560UH</coll>		JR121	1-216-295-00 1-216-295-00	METAL GLAZE	0 5%	1/10W 1/10W 1/10W
L102 1-408-4 L201 1-407-50 L306 1-408-4 L308 1-408-4	00-00 INDUCTOR 4.7MMH 05-00 INDUCTOR 4.7UH 17-00 INDUCTOR 47UH		JR122 JR123 JR124 JR125 JR127	1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 5% 0 5% 0 5% 0 5% 0 5% 0 5%	1/10W 1/10W 1/10W 1/10W
L610 1-412-5 L611 1-412-5			JR128 JR129 JR131 JR132	1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00	METAL GLAZE METAL GLAZE METAL GLAZE	0 5% 0 5% 0 5% 0 5%	1/10W 1/10W 1/10W 1/10W
Q071 8-729-90 Q101 8-729-2 Q102 8-729-90 Q103 8-729-90 Q201 8-729-1	16-22 TRANSISTOR 2SA1162-G 01-00 TRANSISTOR DTC124EK 00-53 TRANSISTOR DTC114EK		JR133 JR134 JR136 JR137 JR138	1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00	METAL GLAZE	0 5% 0 5% 0 5% 0 5% 0 5% 0 5%	1/10W 1/10W 1/10W 1/10W 1/10W 1/10W
U202     8-729-1       U203     8-729-1       U204     8-729-2       U205     8-729-2       U206     8-729-2	20-28 TRANSISTOR 2SC1623-L5L6 16-22 TRANSISTOR 2SA1162-G 16-22 TRANSISTOR 2SA1162-G		JR140 JR141 JR142 JR143 JR144 JR150	1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00	METAL GLAZE METAL GLAZE	0 5% 0 5% 0 5% 0 5% 0 5%	1/10W 1/10W 1/10W 1/10W 1/10W
Q207 8-729-1 Q209 8-729-1 Q301 8-729-9 Q302 8-729-2 Q303 8-729-2	20-28 TRANSISTOR 2SC1623-L5L6 01-00 TRANSISTOR DTC124EK 16-22 TRANSISTOR 2SA1162-G		JR201 JR202 JR203 JR204 JR205	1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 5% 0 5% 0 5% 0 5% 0 5%	1/8W 1/8W 1/8W 1/8W 1/8W
Q304 8-729-9 Q305 8-729-9 Q306 8-729-2 Q308 8-729-2 Q309 8-729-9	101-01 TRANSISTOR DTC144EK 16-22 TRANSISTOR 2SA1162-G 16-22 TRANSISTOR 2SA1162-G		JR206 JR207 JR208 JR209 JR210	1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 5% 0 5% 0 5% 0 5% 0 5%	1/8W 1/8W 1/8W 1/8W 1/8W
Q311 8-729-9 Q312 8-729-9 Q401 8-729-1 Q402 8-729-1 Q403 8-729-1	000-53 TRANSISTOR DTC114EK  20-28 TRANSISTOR 2SC1623-L5L6  20-28 TRANSISTOR 2SC1623-L5L6		JR211 JR212 JR213 JR214 JR215	1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 5% 0 5% 0 5% 0 5% 0 5%	1/8W 1/8W 1/8W 1/8W 1/8W
Q404 8-729-1 Q581 8-729-1 Q582 8-729-1 Q610 8-729-1 Q611 8-729-1	120-28 TRANSISTOR 2SC1623-L5L6 216-22 TRANSISTOR 2SA1162-G 140-97 TRANSISTOR 2SB734-34 900-53 TRANSISTOR DTC114EK		JR216 JR217 JR218 JR219 JR220	1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 5% 0 5% 0 5% 0 5% 0 5%	1/8W 1/8W 1/8W 1/8W 1/8W
Q683 8-729-	140-96 TRANSISTOR 2SD774-34		JR221 JR222	1-216-296-00 1-216-296-00	) METAL GLAZE	0 5% 0 5% 0 5%	1/8W 1/8W 1/8W
JR101 1-216- JR102 1-216-		/10W /10W	JR223 JR224 JR225	1-216-296-00	) METAL GLAZE	0 5% 0 5% 0 5%	1/8W 1/8W



REF. N	O. PART NO.	DESCRIPTION			REMARK	REF.NO	. PART NO.	DESCRIPTIO	N -			REMARK
C161 C162 C163 C164 C165		CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	100PF 0.22MF 1MF 0.001MF 0.01MF	5% 5% 10%	50V 25V 16V 50V 50V	JR2 JR3 JR4 JR7 JR8		) METAL GLAZE ) METAL GLAZE ) METAL GLAZE ) METAL GLAZE	0 0 0 0	5% 5% 5% 5%	1/10W 1/8W 1/10W 1/10W 1/10W	
C166 C167 C168 C170 C171	1-124-477-11 1-163-213-00 1-164-346-11 1-124-477-11 1-124-477-11	CERAMIC CHIP	47MF 0.0022MF 1MF 47MF 47MF	20% 5% 20% 20%	16 <b>V</b> 50 <b>V</b> 16 <b>V</b> 16 <b>V</b>	IRQ	1-216-206-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	0 0 0 0	5% 5% 5% 5%	1/8W 1/8W 1/8W 1/8W 1/10W 1/10W	
C172 C173	1-124-477-11 1-124-477-11 <fil< td=""><td>ELECT ELECT LTER&gt;</td><td>47MF 47MF</td><td>20% 20%</td><td>16V 16V</td><td>JR19 JR20 JR21 JR23</td><td>1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00</td><td>METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE</td><td>-</td><td>5% 5% 5% 5%</td><td>1/8W 1/8W 1/8W 1/8W</td><td></td></fil<>	ELECT ELECT LTER>	47MF 47MF	20% 20%	16V 16V	JR19 JR20 JR21 JR23	1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	-	5% 5% 5% 5%	1/8W 1/8W 1/8W 1/8W	
CF2 CF3 CF4 SWF1	1-527-839-00 1-527-840-00 1-567-570-11 1-579-658-11	FILTER, CERAI FILTER, CERAI FILTER, CERAI FILTER, SAWT(	MIC MIC MIC DOTH WAVE			JR25 JR29 JR30 JR33	1-216-296-00 1-216-296-00 1-216-295-00 1-216-295-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE		5% 5% 5% 5%	1/8W 1/8W 1/8W 1/10W 1/10W	
CN1 CN2	I-164-346-11 I-124-477-11 I-124-477-11 I-124-477-11 I-124-477-11 I-527-839-00 I-527-840-00 I-567-570-11 I-579-658-11 <com *1-506-913-11="" <tri="" i-404-801-11<="" td=""><td>INECTOR&gt; PIN, CONNECTO PIN, CONNECTO</td><td>OR 10P OR 10P</td><td></td><td></td><td>JR39 JR40 R101 R102</td><td>1-216-296-00 1-216-296-00 1-216-075-00 1-216-073-00</td><td>METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE</td><td></td><td></td><td>1/8W 1/8W 1/8W 1/10W 1/10W</td><td></td></com>	INECTOR> PIN, CONNECTO PIN, CONNECTO	OR 10P OR 10P			JR39 JR40 R101 R102	1-216-296-00 1-216-296-00 1-216-075-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE			1/8W 1/8W 1/8W 1/10W 1/10W	
CT1			;			R107 R108	1-216-065-00 1-216-065-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	2.2K 1.2K 1K 4.7K 4.7K	5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
D161	<d10 8-719-400-18 <ic></ic></d10 	DIODE MA152WK				R110 R113 R114 R115	1-216-041-00 1-216-031-00 1-216-049-00 1-216-027-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	470 180 1K 120	5%	1/10W 1/10W 1/10W 1/10W	
101 102 103	8-759-070-76 8-759-070-71 8-759-514-54	IC M52308SP EC TDA9820				R116 R117 R118 R119 R120	1-216-101-00 1-216-097-00 1-216-117-00 1-216-240-00 1-216-075-00	METAL GLAZE METAL GLAZE METAL GLAZE	150K 100K 680K 56K 12K	5%	1/10W 1/10W 1/10W 1/8W 1/10W	
	<c01< td=""><td></td><td></td><td></td><td>   </td><td>R121 R122</td><td>1-216-053-00</td><td>METAL GLAZE METAL GLAZE</td><td>1.5K 3.3K</td><td>5% 5%</td><td>1/10W 1/10W 1/10W</td><td></td></c01<>				 	R121 R122	1-216-053-00	METAL GLAZE METAL GLAZE	1.5K 3.3K	5% 5%	1/10W 1/10W 1/10W	
L101 L102 L103 L104 L121	1-408-421-00 1-408-419-00 1-408-419-00 1-408-408-00 1-408-413-00	INDUCTOR INDUCTOR INDUCTOR INDUCTOR INDUCTOR INDUCTOR	100UH 68UH 68UH 8.2UH 22UH			R123 R124 R125 R127 R130	1-216-075-00 1-216-041-00 1-216-041-00 1-216-047-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	12K 470 470 820 1K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
L122 L142 L151 L161	1-410-790-41	I NDUCTOR I NDUCTOR I NDUCTOR I NDUCTOR	82UH 0.56UH 68UH 68UH			R132 R133 R134	1-216-025-00 1-216-069-00 1-216-061-00 1-216-049-00 1-216-198-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	100 6.8K 3.3K 1K 1K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
	<tran< td=""><td>ISISTOR&gt;</td><td></td><td></td><td></td><td>R150</td><td>1-216-043-00</td><td>METAL GLAZE</td><td>560</td><td>5%</td><td>1/10W</td><td></td></tran<>	ISISTOR>				R150	1-216-043-00	METAL GLAZE	560	5%	1/10W	
Q101 Q102 Q121 Q122 Q161	8-729-216-22 8-729-120-28 8-729-216-22	TRANSISTOR 2S/ TRANSISTOR 2S/ TRANSISTOR 2S/ TRANSISTOR 2S/ TRANSISTOR 2S/	11162-G 21623-L5L6 11162-G			R152 R153 R154	1-216-043-00 1-216-043-00 1-216-025-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	560 560 100 1K	5% 5% 5%	1/10W 1/10W 1/10W 1/10W	
Q170 Q171 Q172 Q173	8-729-120-28 8-729-120-28 8-729-120-28	TRANSISTOR 2SO TRANSISTOR 2SO TRANSISTOR 2SO TRANSISTOR 2SO TRANSISTOR 2SO	21623-L5L6 21623-L5L6 21623-L5L6			R156 R157 R159	1-216-051-00 1-216-083-00 1-216-051-00 1-216-107-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1.2K 27K 1.2K 270K 1K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
	<resi< td=""><td></td><td></td><td></td><td></td><td>R162</td><td>1-216-100-00 1-216-073-00 1-216-113-00</td><td>METAL CHIP METAL GLAZE METAL GLAZE</td><td>130K 10K 470K</td><td>0.50% 5% 5%</td><td>1/10W 1/10W 1/10W</td><td></td></resi<>					R162	1-216-100-00 1-216-073-00 1-216-113-00	METAL CHIP METAL GLAZE METAL GLAZE	130K 10K 470K	0.50% 5% 5%	1/10W 1/10W 1/10W	

The components identified by shading and mark  $\Delta$  are critical for safety. Replace only with part number specified.

Les composants identifies par une trame et une marque 🛆 sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.



			*********				I DEE NO	DADT NO	DESCRIPTION				REMARK
REF.NO.	PART NO.	DESCRIPTION				REMARK	REF.NU.	PART NO.	DESCRIPTION				
R341	1-216-025-00	METAL GLAZE	100 220	5% 5%	1/10W 1/10W		R586	1-216-053-00	METAL GLAZE	1.5K	5%	1/10W	
R342 R343	1-216-033-00 1-216-022-00	METAL GLAZE METAL GLAZE	75 75	5% 5%	1/10W 1/10W		R587 R588	1-216-045-00 1-216-101-00	METAL GLAZE METAL GLAZE	680 150K	5% 5%	1/10W 1/10W	
R344 R345	1-216-022-00 1-216-171-00	METAL GLAZE	75	5%	1/8W		R589 R590	1-216-073-00 1-216-049-00	METAL GLAZE METAL GLAZE	10K 1K	5% 5% 5%	1/10W 1/10W	
R346	1-216-022-00	METAL GLAZE METAL GLAZE	75 27K	5% 5%	1/10W 1/10W		R591	1-216-073-00	METAL GLAZE	10K		1/10W	
R347 R348	1-216-083-00 1-216-029-00	METAL GLAZE METAL GLAZE	150 150	5% 5%	1/10W 1/10W		R592 R593	1-216-232-00 1-216-063-00	METAL GLAZE METAL GLAZE	27K 3.9K	5% 5%	1/8W 1/10W	
R349 R350	1-216-029-00 1-216-178-00	METAL GLAZE	150	5%	1/8W		R594 R595	1-216-053-00	METAL GLAZE METAL CHIP	1.5K 470	5% 0.50%	1/10W 1/10W	
R351	1-216-073-00	METAL GLAZE METAL GLAZE	10K 220	5% 5% 5%	1/10W 1/10W		R596	1-216-670-11	METAL CHIP	6.2K	0.50%	1/10W	
R352 R354	1-216-033-00 1-216-033-00	METAL GLAZE	220 220	5% 5%	1/10W 1/10W		R597	1-216-230-00 1-216-190-00	METAL GLAZE METAL GLAZE	22K 470	5% 5% 5%	1/8W 1/8W	
R355 R356	1-216-033-00 1-216-033-00	METAL GLAZE	220	5% 5%	1/10W		R616 R628	1-216-035-00 1-249-411-11	METAL GLAZE Carbon	270 330	5% 5% 5%	1/10W 1/4W	
R357 R358	1-216-041-00 1-216-031-00		470 180	5% 5%	1/10W 1/10W		R681	1-216-397-11	METAL OXIDE	4.7			F
R359 R360	1-216-033-00 1-216-033-00	METAL GLAZE METAL GLAZE	220 220	5% 5% 5% 5%	1/10W 1/10W		R684 R685	1-216-047-00 1-216-049-00	METAL GLAZE METAL GLAZE	820 1K	5% 5%	1/10W 1/10W	
R361	1-216-033-00	METAL GLAZE	220	5%	1/10W								
R362 R365	1-216-077-00 1-216-073-00	METAL GLAZE METAL GLAZE	15K 10K	5% 5%	1/10W 1/10W			<tu< td=""><td></td><td></td><td></td><td></td><td></td></tu<>					
R366 R367	1-216-067-00 1-216-063-00	METAL GLAZE METAL GLAZE	5.6K 3.9K	5% 5% 5%	1/10W 1/8W		TU101	<u>A</u> 1-693-185-11	TUNER (UV916	H)			
R368	1-216-033-00	METAL GLAZE	220		1/10W			<cr\< td=""><td>/STAL&gt;</td><td></td><td></td><td></td><td></td></cr\<>	/STAL>				
R369 R370	1-216-033-00 1-216-033-00	METAL GLAZE	220 220	5% 5%	1/10₩ 1/10₩			1-567-504-11	OSCILLATOR,	CRYSTAL			
R371 R373	1-216-033-00 1-216-017-00	METAL GLAZE	220 47	5% 5% 5%	1/10W 1/10W		X302		OSCILLATOR,				
R376	1-216-065-00	METAL GLAZE	4.7K		1/10W			1-466-733-11					
R377 R378	1-216-057-00	METAL GLAZE	1.2K 2.2K	5%	1/10W 1/10W			1-400-133-11	*********	*****	-F2 <b>53</b> 1[	F2931 [	),E3431D)
R379 R380	1-216-206-00 1-216-057-00	METAL GLAZE	2.2K 2.2K 75	5% 5% 5%	1/8W 1/10W 1/8W					<b>\</b>		,	,
R401	1-216-171-00		22		1/8W				PACITOR>				
R402 R403 R404	1-216-158-00 1-216-025-00 1-216-158-00	METAL GLAZE	100 22	5% 5% 5%	1/10W 1/8W		C101 C102	1-163-121-00 1-164-222-11	CERAMIC CHIP CERAMIC CHIP	0.22M	ì	5%	50V 25V
R405 R406	1-216-025-00 1-216-158-00	METAL GLAZE	100 22	5% 5%	1/10W 1/8W		C103 C104	1-164-232-11 1-164-232-11	CERAMIC CHIP	0.01	7	10% 10%	50V 50V
R407		METAL GLAZE	100		1/10%	)	C105	1-164-004-11	CERAMIC CHIP			10%	25V
R408 R410	1-216-093-00 1-216-067-00	METAL GLAZE METAL GLAZE	68K 5.6K 5.6K	5% 5% 5%	1/10W 1/10W	1	C106 C107	1-124-477-11 1-164-004-11	CERAMIC CHIE	47MF 0.1MF		20% 10%	16V 25V 25V
R411 R412	1-216-067-00	METAL GLAZE METAL GLAZE	5.6K 75	5% 5%	1/10W 1/10W		C109	1-164-004-11 1-164-232-11	CERAMIC CHIE	0.01M	F	10%	50V 25V
R413	1-216-022-00		75	5% 5%	1/10		C112	1-164-004-11				10% 5%	50V
R414 R416	1-216-022-00 1-216-113-00	METAL GLAZE	75 <b>4</b> 70K	5%	1/10W 1/10W	)	C113	1-124-477-11		47MF	c	20% 10%	16V 50V
R417 R419	1-216-067-00 1-216-113-00		5.6K 470K		1/10W 1/10W		C115	1-164-232-11 1-164-346-11	CERAMIC CHIE	) 1 M F	ŗ	10%	16V 25V
R420	1-216-067-00		5.6K	5% 5%	1/10V		C118	1-164-004-11 1-163-369-11				5%	50V
R423 R424	1-216-015-00 1-216-025-00	METAL GLAZE	39 100	5% 5% 5% 5%	1/10V 1/10V	J	C121 C122	1-163-235-11 1-163-239-11	CERAMIC CHII	22PF		5% 5%	50V 50V
R425 R426	1-216-025-00 1-216-025-00		100 100	5%	1/10V 1/10V		C123 C124	1-163-235-11 1-164-004-11	CERAMIC CHIL	22PF		5% 10%	50V 25V
R427	1-216-025-00 1-249-393-11	METAL GLAZE CARBON	100 10	5% 5%	1/10V 1/4W	V F	C130	1-216-295-00	METAL GLAZE	0	5%	1/1(W	
R428 R572 R574	1-216-198-00 1-216-041-00	METAL GLAZE	1K 470	5% 5% 5% 5%	1/8W 1/10U		C131 C133	1-163-093-00 1-124-477-11	CERAMIC CHI ELECT	2 10PF 47MF		5% 20%	50V 16V
R575	1-216-037-00		330	-	1/10	Ą	C152 C153	1-164-337-11 1-164-337-11	CERAMIC CHI	2.2MF 2.2MF			16V 16V
R581 R582	1-216-033-00 1-216-037-00	) METAL GLAZE	220 330	5% 5%	1/100 1/100	a)	C154	1-164-337-11	CERAMIC CHI	2.2MF	re.	10*	167
R583 R584	1-216-053-00 1-216-039-00	) METAL GLAZE			1/10 1/10	W W	C155 C156	1-164-232-11 1-124-477-11	CERAMIC CHI ELECT	47MF	r	10 <b>%</b> 20 <b>%</b>	50V 16V



	PART NO.	DESCRIPTI	ON 		REMARK	REF.NO	. PART NO.	DESCRIPTION	Į			REMARK
L5 L7 L9 L71	1-408-419-00 1-408-406-00 1-408-419-00 1-408-419-00	INDUCTOR INDUCTOR				1		METAL GLAZE METAL GLAZE	1 K 27 K 560	5% 5% 5%	1/10W 1/10W 1/10W	
L101 L121	1-408-399-00 1-408-407-00	INDUCTOR	1.5UH 6.8UH			R55 R56 R57 R58	1-216-043-00 1-216-065-00 1-216-065-00 1-216-041-00	METAL GLAZE METAL GLAZE METAL GLAZE	560 4.7K 4.7K 470	5% 5%	1/10W 1/10W 1/10W 1/10W	
	<tr< td=""><td>ANSISTOR&gt;</td><td></td><td></td><td></td><td>1 R59</td><td>1-216-043-00</td><td></td><td>560</td><td>5%</td><td>1/10W</td><td></td></tr<>	ANSISTOR>				1 R59	1-216-043-00		560	5%	1/10W	
Q1 Q4 Q5 Q6 Q7	8-729-901-59 8-729-120-28 8-729-115-10 8-729-900-52 8-729-216-22	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	BF199 2SC1623-L5L 2SK105A-10 DTC114YK 2SA1162-G	6		R61 R63 R71 R72	1-216-043-00 1-216-295-00 1-216-043-00 1-216-079-00 1-216-079-00	METAL GLAZE METAL GLAZE METAL GLAZE	560 0 560 18K 18K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
98 910 911 912 913	8-729-120-28 8-729-120-28 8-729-120-28 8-729-120-28 8-729-120-28	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	2SC1623-L5L 2SC1623-L5L 2SC1623-L5L 2SC1623-L5L 2SC1623-L5L	6 6 6		R73 R74 R75 R76 R77	1-216-049-00 1-216-079-00 1-216-079-00 1-216-025-00 1-216-174-00	METAL GLAZE METAL GLAZE METAL GLAZE	1 K 1 8 K 1 8 K 1 0 O 1 0 O	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/8W	
Q14 Q15 Q16 Q101 Q121	8-729-120-28 8-729-120-28 8-729-216-22 8-729-104-80 8-729-120-28	TRANSISTOR TRANSISTOR TRANSISTOR	2SC1623-L5L 2SC1623-L5L 2SA1162-G 2SC3355 2SC1623-L5L			R81 R82 R83 R84 R85	1-216-095-00 1-216-121-00 1-216-025-00 1-216-085-00 1-216-085-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	82K 1 M 100 33K 33K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
JR2	1101	0101011				i Kaa	1-216-689-11 1-216-095-00 1-216-095-00 1-216-095-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	39K 82K 82K 82K	5% 5% 5%	1/10W 1/10W 1/10W 1/10W	
JR3 JR5 R1 R2	1-216-295-00 1-216-296-00 1-216-296-00 1-216-025-00 1-216-065-00	METAL GLAZE	100 5%	1/10W 1/8W 1/8W 1/10W 1/10W		R90 R91 R92 R93	1-216-075-00 1-216-295-00 1-216-075-00 1-216-075-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	12K 0 12K 12K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W	
R3 R4	1-216-065-00 1-216-041-00	METAL GLAZE	4.7K 5%	1/10W	į	R94 R95	1-216-059-00 1-216-059-00	METAL GLAZE METAL GLAZE	2.7K 2.7K	5% 5%	1/10W 1/10W 1/10W	
R5 R6 R8	1-216-021-00 1-216-055-00 1-216-051-00	METAL GLAZE METAL GLAZE METAL GLAZE	68 5% 1.8K 5% 1.2K 5%	1/10W 1/10W 1/10W 1/10W	   1   8   1   1   1	R96 R97 R98 R99	1-216-059-00 1-216-057-00 1-216-057-00 1-216-057-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	2.7K 2.2K 2.2K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W	
R9 R10 R11 R24 R25		METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	8.2K 5%	1/10W 1/10W 1/10W 1/8W		R100	1-216-065-00 1-216-065-00 1-216-063-00	METAL GLAZE METAL GLAZE METAL GLAZE	2.2K 4.7K 4.7K 3.9K	5% 5%	1/10W 1/10W 1/10W 1/10W	
R26	1-216-061-00	METAL GLAZE	3.3K 5%	1/10W 1/10W		R104 R105 R121	1-216-049-00 1-216-033-00 1-216-073-00	METAL GLAZE	1 K 220 10 K	5% 5% 5%	1/10₩ 1/10₩	
R27 R28 R29 R30	1-216-266-00 1-216-075-00 1-216-035-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	680K 5% 12K 5% 270 5% 1K 5%	1/8W 1/10W 1/10W 1/10W	! ! ! !	R122 R123 R124	1-216-065-00 1-216-041-00 1-216-041-00	METAL GLAZE METAL GLAZE METAL GLAZE	4.7K 470 470	5% 5%	1/10W 1/10W 1/10W 1/10W	
R31 R32	1-216-017-00 1-216-043-00	METAL GLAZE METAL GLAZE	47 5% 560 5%	1/10W 1/10W		R125 R301	1-216-041-00 1-216-049-00	NETAL GLAZE NETAL GLAZE	470 1K	5% 5% 5%	1/10W 1/10W	
R33 R34 R35	1-216-037-00 1-216-252-00 1-216-035-00	METAL GLAZE METAL GLAZE METAL GLAZE	330 5% 180K 5% 270 5%	1/10W 1/8W 1/10W		R303 R304	1-216-049-00 1-216-049-00 1-216-037-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1K 1K 330 1K	5% 5% 5% 5%	1/10W 1/10W 1/10W	
R36 R37 R38 R39	1-216-029-00 1-216-049-00 1-216-099-00 1-216-089-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	150 5% 1K 5% 120K 5% 47K 5% 1K 5%	1/10W 1/10W 1/10W 1/10W		R306 R307	1-216 <b>-</b> 025-00 1-216 <b>-</b> 037-00	METAL GLAZE METAL GLAZE METAL GLAZE	100 330 330	5% 5%	1/10W 1/10W 1/10W 1/10W	
R40 R42	1-216-049-00 1-216-061-00	METAL GLAZE		1/10W 1/10W	ļ					J.A	1/10#	
R43 R44 R45 R46	1-216-067-00 1-216-027-00 1-216-041-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	3.3K 5% 5.6K 5% 120 5% 470 5% 180 5%	1/10W 1/10W 1/10W 1/10W 1/10W		RV2		ABLE RESISTOR>		K .		
R47 R48		METAL GLAZE METAL GLAZE	12K 5% 22K 5%	1/10W 1/10W		<b>T</b> 1 1	<tran 1-404-806-21</tran 	SFORMER>				
		_		•"	,	- 4	1 104 000 21	COIL				



											L
REF.NO.	PART NO.	DESCRIPTION			REMARK	REF.NO.	PART NO.	DESCRIPTION			REMARK
R164	1-216-113-00	METAL GLAZE	470K 22K	5% 1/10W 5% 1/10W		C35	1-124-925-11	ELECT	2.2MF	20%	50 <b>V</b>
R165 R166 R167	1-216-081-00 1-216-049-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE	1K 10K	5% 1/10W 5% 1/10W 5% 1/10W		C36 C37	1-124-477-11 1-164-232-11	ELECT CERAMIC CHIP	47MF 0.01MF	20% 10%	16V 50V
R168	1-216-113-00	METAL GLAZE				C38 C40	1-163-017-00 1-164-232-11	CERAMIC CHIP CERAMIC CHIP	0.0047MF 0.01MF	10% 10%	50V 50V
R169 R170	1-216-049-00 1-216-083-00	METAL GLAZE METAL GLAZE	1 K 27 K	5% 1/10W 5% 1/10W 5% 1/10W		C71	1-124-477-11	ELECT	47MF	20%	16V 50V
R171 R172	1-216-075-00 1-216-095-00	METAL GLAZE METAL GLAZE	12K 82K	5% 1/10W		C72	1-164-232-11 1-124-477-11 1-124-477-11	CERAMIC CHIP ELECT ELECT	47MF 47MF	10% 20% 20%	16V 16V
R173	1-216-059-00	METAL GLAZE		5% 1/10W 5% 1/10W		C83 C84 C85	1-124-477-11 1-124-477-11 1-124-477-11	ELECT	47MF 47MF	20% 20%	16V 16V
R174 R175 R176	1-216-057-00 1-216-083-00 1-216-075-00	METAL GLAZE METAL GLAZE METAL GLAZE	27K	5% 1/10W 5% 1/10W		C86	1-124-477-11		47MF	20%	16V
R177 R178	1-216-095-00 1-216-059-00	METAL GLAZE METAL GLAZE	82K	5% 1/10W 5% 1/10W		C87	1-124-477-11 1-163-229-11	ELECT CERAMIC CHIP	47MF 12PF	20% 5%	16V 50V
R179	1-216-057-00	METAL GLAZE	2.2K	5% 1/10W		C95 C101	1-164-337-11 1-163-017-00	CERAMIC CHIP CERAMIC CHIP	2.2MF 0.0047MF	10%	16V 50V
R180 R181	1-216-037-00 1-216-037-00	METAL GLAZE METAL GLAZE		5% 1/10W 5% 1/10W		C102	1-163-017-00 1-163-017-00	CERAMIC CHIP	0.0047MF	10 <b>%</b> 10 <b>%</b>	50V 50V
	< VAR	NIABLE RESISTOR	15			C104 C105 C106	1-163-017-00 1-163-017-00	CERAMIC CHIP	0.0047MF	10% 10%	50V 50V
RV I		RES, ADJ, CAF		'K		C121	1-126-176-11	ELECT	220 <b>N</b> F	20%	107
						C122	1-163-119-00	CERAMIC CHIP	120PF	5 <b>%</b>	50 <b>V</b>
		ANSFORMER>					<fil< td=""><td>TER&gt;</td><td></td><td></td><td></td></fil<>	TER>			
T4 T5	1-416-017-11	COIL, IF				CF1 CF2	1-527-839-00 1-567-569-11	FILTER, CERA	MIC		
*****	**********	**********	******	********	******		1-527-840-00 1-567-570-11	FILTER, CERA FILTER, CERA	MIC MIC		
	1-466-735-11	IF BLOCK (IF	******			SWF1	1-579-662-11		ACE WAVE		
			(KV-E	2531B, E2931	B, E3431B	) SWF3 SWF4	1-404-711-11 1-579-660-11	FILTER, SAWT	OOTH WAVE		
	<cai< td=""><td>PACITOR&gt;</td><td></td><td></td><td></td><td></td><td><com< td=""><td>INECTOR&gt;</td><td></td><td></td><td></td></com<></td></cai<>	PACITOR>					<com< td=""><td>INECTOR&gt;</td><td></td><td></td><td></td></com<>	INECTOR>			
C1 C2	1-164-232-11		0.01MF	10%	50V 50V	CN1	*1-506-913-11				
C3 C4	1-124-903-11 1-164-232-11	CERANIC CHIP	1MF 0.01MF	20% 10%	50V 50V	CN2	*1-506-913-11	PIN, CUNNECT	OK TOP		
C5 C6		CERAMIC CHIP		10% MF 10%	50V 50V		<tri< td=""><td>MMER&gt;</td><td></td><td></td><td></td></tri<>	MMER>			
C7 C8	1-164-232-11	CERAMIC CHIP CERAMIC CHIP	0.01MF	10%	50V 50V	CT1 CT2	1-404-801-11 1-409-429-11 1-141-245-00	TRAP, CERAMI TRAP, CERAMI	C C		
č9 C10	1-126-233-11 1-16 <b>4-</b> 232-11	ELECT	22MF	20 <b>%</b> 10 <b>%</b>	25V 50V	; CV2	1-141-245-00	CAP. TRIMMEN			
C11	1-124-477-11	ELECT	47MF	20%	16V 50V	CV3	1-141-304-21	TRIMMER, CER	IAMI C		
C13 C14	1-163-059-00 1-124-477-11 1-124-903-11	ELECT	47MF 1MF	10% 20% 20%	16V 50V		<016	DDE>			
C15 C16	1-163-061-00				50V	D7 D8	8-719-421-57	DIODE NA73-1 DIODE NA73-1	`X		
C17 C18	1-162-638-11 1-162-638-11	CERAMIC CHIP	INF		16V 16V	D9	8-719-421-57	DIODE MA73-1	Ϋ́		
C19 C20	1-163-141-00 1-124-902-00	ELECT	0.47MF	20%	50V 50V		<10	>			
C21 C22	1-124-903-11 1-164-232-11		INF Oloime	20% 10%	50V 50V	IC1 IC2	8-759-070-75 8-759-070-71	IC TDA9820			
C23 C24	1-124-902-00	ELECT CERAMIC CHIP	0.47MF	20%	50V 16V	ičš	8-759-979-62	IC PCF8574			
C25 C26	1-124-477-11 1-164-232-11	ELECT	47MF	20% 10%	16 <b>V</b> 50 <b>V</b>		<c0< td=""><td>IL&gt;</td><td></td><td></td><td></td></c0<>	IL>			
C27	1-164-232-11 1-124-477-11	CERAMIC CHIP	0.01MF 47MF	10% 20%	50V 16V	L1 L2	1-408-419-00 1-408-419-00	INDUCTOR	68UH 68UH		
C28 C33 C34	1-124-477-11 1-124-907-11 1-124-907-11	ELECT	10MF 10MF	20% 20% 20%	50V 50V	L3   L4	1-408-407-00 1-408-419-00	INDUCTOR	6.8UH 68UH		
~J4	1 124 701 11				-						



REF.NO	D. PART NO.	DESCRIPTION		REMARK	REF. NO.	PART NO.	DESCRIPTION	<b>\</b> -		REMARK
C11 C12 C13 C14 C15	1-163-037-11 1-163-127-00 1-163-117-00 1-163-097-00 1-163-103-00	CERAMIC CHIP 0.022M CERAMIC CHIP 270PF CERAMIC CHIP 100PF CERAMIC CHIP 15PF CERAMIC CHIP 27PF	F 10% 5% 5% 5% 5%	25V 50V 50V 50V 50V	901 903 904	8-729-120-28 8-729-120-28 8-729-120-28	TRANSISTOR 2	2SC1623-L5L6 2SC1623-L5L6		
C16 C17 C18 C19 C20	1-164-232-11 1-163-809-11 1-163-093-00 1-163-089-00 1-163-125-00	CERAMIC CHIP 0.01MF CERAMIC CHIP 0.047M CERAMIC CHIP 10PF	10%	50V 25V 50V 50V 50V	Q06 Q07 Q08 Q09 Q10	8-729-120-28 8-729-216-22 8-729-120-28 8-729-120-28	TRANSISTOR 2 TRANSISTOR 2 TRANSISTOR 2	2SC1623-L5L6 2SA1162-G 2SC1623-L5L6 2SC1623-L5L6		
C21 C22 C23 C24 C25	1-163-833-00 1-163-117-00 1-163-210-00 1-164-505-11 1-164-505-11	CERAMIC CHIP 0.068M CERAMIC CHIP 100PF CERAMIC CHIP 0.0016 CERAMIC CHIP 2.2MF CERAMIC CHIP 2.2MF	5% 4F 5%	25V 50V 50V 16V 16V	Q11 Q12		TRANSISTOR D	TC124EK		
C26 C28 C30 C32 C33	1-163-809-11 1-163-137-00 1-137-033-11 1-163-038-00 1-124-910-11	CERAMIC CHIP 680PF FILM 0.33MF CERAMIC CHIP 0.1MF ELECT 47MF	5% 10% 20%	25V 50V 100V 25V 50V	JR02 R01 R02 R03 R04	1-216-295-00 1-216-025-00 1-216-025-00 1-216-055-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	100 5% 100 5% 1.8K 5% 1K 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
C34 C35 C36 C37 C39	1-124-907-11 1-163-243-11 1-163-239-11 1-216-295-00 1-163-135-00	ELECT 10MF CERAMIC CHIP 47PF CERAMIC CHIP 33PF METAL GLAZE 0 CERAMIC CHIP 560PF	20% 5% 5% 5% 1/10%	50V 50V 50V 50V	R05 R06 R07 R08 R09	1-216-041-00 1-216-029-00 1-216-041-00 1-216-071-00 1-216-091-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	470 5% 150 5% 470 5% 8.2K 5% 56K 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
C40 C53 C54		CERAMIC CHIP 330PF CERAMIC CHIP 0.1MF CERAMIC CHIP 0.1MF	5 <b>%</b>	50V 25V 25V	R10 R11 R12 R13 R15	1-216-057-00 1-216-057-00 1-216-057-00 1-216-065-00 1-216-061-00	METAL GLAZE METAL GLAZE METAL GLAZE	2.2K 5% 2.2K 5% 2.2K 5% 4.7K 5% 3.3K 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
CN173 CN174	7*1-564-511-11	NECTOR> PLUG, CONNECTOR 8P PLUG, CONNECTOR 8P			R16 R17 R20 R21 R22	1-216-033-00 1-216-033-00 1-216-049-00 1-216-049-00 1-216-057-00	METAL GLAZE	220 5% 220 5% 1K 5% 1K 5% 2.2K 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
CT01	<tri 1-141-418-11="" <d10<="" td=""><td>·</td><td></td><td></td><td>R23 R24 R25 R26 R27</td><td>1-216-065-00 1-216-089-00</td><td>METAL GLAZE METAL GLAZE</td><td>4.7K 5% 56K 5% 4.7K 5% 47K 5% 560 5%</td><td>1/10W 1/10W 1/10W 1/10W 1/10W</td><td></td></tri>	·			R23 R24 R25 R26 R27	1-216-065-00 1-216-089-00	METAL GLAZE METAL GLAZE	4.7K 5% 56K 5% 4.7K 5% 47K 5% 560 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
D01 D03 D04 D09 D10	8-719-400-18 8-719-104-34 8-719-104-34 8-719-400-18	DIODE MA152WK DIODE 182836			R28 R29 R30 R31 R32	1-216-043-00 1-216-043-00 1-216-037-00 1-216-061-00 1-216-073-00	METAL GLAZE METAL GLAZE	560 5% 560 5% 330 5% 3.3K 5% 10K 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
D11 D12	8-719-400-18	DIODE MAI52WK DIODE MAI52WK			R33 R34 R35 R36 R37	1-216-081-00 1-216-081-00 1-216-057-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	47 5% 22K 5% 22K 5% 2.2K 5% 2.2K 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
1001 1002 1003 1004 1005	8-759-073-28 8-759-037-64 8-759-146-48	1C SDA5231-2 1C UPD424256C-80 1C CXD1050A-15P			R39 R40 R41	1-216-103-00 1-216-043-00 1-216-033-00	METAL CHIP METAL CHIP METAL GLAZE METAL GLAZE METAL GLAZE	750K 0.50% 180K 0.50% 560 5% 220 5% 220 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
L01 L02	<011 1-408-411-00 1-408-414-00	.> INDUCTOR 15UH INDUCTOR 27UH			R44 R46 R47	1-216-033-00 1-216-073-00 1-216-057-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	220 5% 220 5% 10K 5% 2.2K 5% 8.2K 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
L03 L04 L05	1-408-417-00 1-408-413-00 1-408-409-00	INDUCTOR 47UH INDUCTOR 22UH			R50 R54	1-216-071-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	8.2K 5% 8.2K 5% 10K 5% 6.8K 5%	1/10W 1/10W 1/10W 1/10W	



REF.NO. PART NO.	DESCRIPTION	REM	ARK	REF.NO.	PART NO.	DESCRIPTION			REMARK
T3 1-416-012-11 T4 1-416-012-11	COIL			Q1707 Q1708	8-729-119-78 8-729-140-96 8-729-907-06 8-729-255-12	TRANSISTOR 2S TRANSISTOR BF	D774-34 `199-AMMO		
<cry!< td=""><td>STAL&gt;</td><td></td><td></td><td></td><td>, npa</td><td>I CTODS</td><td></td><td></td><td></td></cry!<>	STAL>				, npa	I CTODS			
	VIBRATOR, CERAMIC					ISTOR>			
*************	********	********	****	K1702	1-249-420-11	CAKBUN	100 5% 1.8K 5%	1/4W 1/4W	
*A-1644-028-A	VM BOARD, COMPLETE (KV-E29)	31B,E2931D	))	R1703	1-249-405-11 1-249-420-11	CARBON	100 5% 1.8K 5%	1/4W 1/4W	
*A-1342-189-A	VM BOARD, COMPLETE (KV-E34)	31B,E3431D	))		1-247-736-11	CARBON	56 5%	1/2W	F
*4-368-683-01 4-382-854-11	SPRING (KV-E2931B,E2931D) SCREW (M3X10). P. SW (+)	E3431B,E34	131D)	R1707 R1709 R1710	1-249-414-11 1-249-412-11 1-249-416-11 1-249-385-11 1-249-432-11		560 5% 390 5% 820 5% 2.2 5% 18K 5%	1/4W 1/4W 1/4W 1/4W 1/4W	
<cap< td=""><td>ACITOR&gt;</td><td></td><td></td><td>R1712</td><td>1-249-435-11</td><td>CARBON</td><td>33K 5% 56K 5%</td><td>1/4W</td><td></td></cap<>	ACITOR>			R1712	1-249-435-11	CARBON	33K 5% 56K 5%	1/4W	
C1701 1-124-119-00		16V		R1714	1-249-438-11 1-249-429-11	CARBON	10K 5%	1/4W 1/4W	_
C1702 1-101-880-00 C1703 1-102-115-00	CERAMIC 560PF 1	% 50V 0% 50V			1-216-476-11 1-249-417-11	METAL OXIDE CARBON	180 5% 1K 5%	3W 1/4W	F F
C1704 1-161-830-00 C1705 1-124-120-11	CERAMIC 0.0047MF ELECT 220MF 2	500V 16V	i	R1717	1-249-432-11	CARBON	18K 5%	1/4W	
C1706 1-123-935-00	ELECT 33MF 2	:0% 160V	ı		1-249-410-11 1-249-419-11	CARBON CARBON	270 5% 1.5K 5%	1/4W 1/4W	
C1707 1-124-907-11 C1708 1-101-006-00	ELECT 10MF 2 CERANIC 0.047MF	50V 50V		R1720	1-249-441-11 1-249-414-11	CARBON CARBON	1.5K 5% 100K 5% 560 5%	1/4W 1/4W	
C1709 1-108-704-11	MYLAR 0.1MF 1	0% 200\ 0% 400\		•	1-249-385-11	CARBON		1/4W	F
C1710 1-137-052-91		10% 500		R1723	1-249-429-11	CARBON	2.2 5% 10K 5% 39K 5%	1/4W 1/4W	•
C1711 1-162-318-11 C1712 1-124-799-11	ELECT 2.2MF 2	20% 160	٧	R1725	1-249-436-11 1-249-417-11	CARBON	1K 5%	1/4W 1/4W	
C1713 1-162-318-11 C1714 1-137-052-91	FILM 0.047MF 1	10% 500°	٧	R1726	1-249-411-11	CARBON		1/4W	n
C1716 1-124-907-11	2000	20% 50V		R1729	1-249-402-11 1-216-451-11	METAL OXIDE	56 5% 120 5%	2W	
C1718 1-124-120-11 C1719 1-124-907-11		20% 16V 20% 50V		R1732	1-249-420-11 1-249-426-11	CARBON	1.8K 5% 5.6K 5%	1/4W 1/4W	
			D)	R1734	1-249-419-11	CARBON	1.5K 5%	1/4W	
	INECTOR>			*****	:*::*:	********	*******	*****	:: <b>:</b> ******
CN1819*1-568-882-81 CN1830*1-568-878-51	PIN, CONNECTOR 7P PIN, CONNECTOR 3P (KV-E343	31B,E3431D	)		*A-1645-024-A	V BOARD, COM	PLETE		
						****************************	***** E2531B.E2531	D, E293	11, E2931D)
<010					*A-1347-069-A	V BOARD, COM	PLETE (KV-E3 *****	431B, E	3(3 10)
D1701 8-719-911-19 D1702 8-719-911-19	DIODE 1SS119 DIODE 1SS119								
D1703 8-719-911-19 D1704 8-719-982-37	DIODE 155119 DIODE MTZJ-39C				<caf< td=""><td>ACITOR&gt;</td><td></td><td></td><td></td></caf<>	ACITOR>			
D1705 8-719-982-37	DIODE MTZJ-39C			C01	1-126-233-11		22MF	20%	504
D1706 8-719-911-19 D1707 8-719-911-19	DIODE ISSII9			C02 C03	1-163-038-00 1-163-038-00	CERAMIC CHIP	0.1MF		25V 25V
D1707 6 717 711 17	Diole 133117			C04	1-126-233-11	ELECT	22MF	20%	5 OV
<00	IL>			C05	1-163-037-11 1-124-120-11	CERAMIC CHIP	0.022MF 220MF	10%	25V 16V
L1702 1-408-418-00	INDUCTOR 56UH			C06 C07	1-124-903-11	ELECT CERAMIC CHIP	IMF	20% 5%	5 0V 5 0V
<b>-</b> ₩D	ANC I CTOD			C08	1-163-097-00	CERAMIC CHIP		5%	5.07
	ANSISTOR>			C09	1-163-141-00	CERAMIC CHIP	470PF	5%	5 0V
Q1702 8-729-173-38	TRANSISTOR 2SC2785-HFE TRANSISTOR 2SA733-K								
Q1703 8-729-208-39 Q1704 8-729-119-78	TRANSISTOR 2SC2785-HFE								
Q1705 8-729-208-72	TRANSISTOR 2SC3298B-Y			;					



_									
	. PART NO.				REF.NO.	PART NO.	DESCRIPTION	<del>\</del> -	REMAR
C1462 C1463 C1464 C1465	1-164-005-11 1-126-101-11 1-126-101-11 1-126-101-11	CERAMIC CHIP 0.4 ELECT 1000 ELECT 1000 ELECT 1000 ELECT 1000	7MF MF 20% MF 20% MF 20%	25V 16V 16V 16V	Q1417 Q1418	8-729-900-53 8-729-900-53	TRANSISTOR 2 TRANSISTOR E TRANSISTOR E	TC114EK TC114EK	
C1467 C1471 C1472	1-126-101-11 1-164-004-11 1-164-004-11	BLECT 1001 CERAMIC CHIP 0.11 CERAMIC CHIP 0.11 CERAMIC CHIP 0.11 CERAMIC CHIP 0.4	MF 20% MF 10% MF 10% MF 10%	16V 25V 25V	01421	8-729-120-28 8-729-120-28	TRANSISTOR I TRANSISTOR 2 TRANSISTOR I	2SC1623-L5L6 2SC1623-L5L6	
C1473	1-164-005-11	CERANIC CHIP 0.4	7MF	25V 25V		<re< td=""><td>SISTOR&gt;</td><td></td><td></td></re<>	SISTOR>		
C1482 C1491	1-163-001-11 1-124-907-11	CERAMIC CHIP 220 ELECT 10M	PF 10% F 20%	50V 50V	JR1401 JR1402 JR1403	1-216-295-00 1-216-295-00 1-216-295-00	METAL GLAZE METAL GLAZE METAL GLAZE	0 5% 0 5% 0 5%	1/10W 1/10W 1/10W
					1 01401	1-210-091-00	HEIAL GLAZE	100K 5%	1/10W 1/10W
CN1514 CN1515 CN1516 CN1538	4*1-568-879-51 5*1-564-516-11 6*1-568-879-51 8*1-573-299-11	NECTOR> PIN, CONNECTOR 41 PLUG, CONNECTOR 41 PIN, CONNECTOR 41 CONNECTOR, BOARD	TO BOARD 10P		R1403 R1404 R1405 R1406 R1407	1-216-025-00 1-216-025-00 1-216-049-00 1-216-051-00 1-216-057-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	100 5% 100 5% 1K 5% 1.2K 5% 2.2K 5%	1/10W 1/10W 1/10W 1/10W 1/10W
	<010	DE>			R1408	1-216-041-00	METAL GLAZE	470 5%	1/10W
D1401	8-719-105-91	DE> DIODE RD5.6M-B2			R1411 R1412 R1413	1-216-041-00 1-216-041-00 1-216-041-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	470 5% 150 5% 470 5% 470 5% 470 5%	1/10W 1/10W 1/10W 1/10W
DI 4400	<fil< td=""><td>TER&gt;</td><td></td><td></td><td>R1414</td><td>1-216-041-00</td><td>METAL GLAZE</td><td>470 5%</td><td>1/10W</td></fil<>	TER>			R1414	1-216-041-00	METAL GLAZE	470 5%	1/10W
FL1404 FL1404 FL1406 FL1406	3 1-236-071-11 4 1-236-071-11 5 1-236-071-11 6 1-236-071-11 7 1-236-071-11	TER>  ENCAPSULATED COME ENCAPSULATED COME ENCAPSULATED COME ENCAPSULATED COME ENCAPSULATED COME ENCAPSULATED COME	PONENT PONENT PONENT PONENT		R1415 R1417 R1418 R1419	1-216-041-00 1-216-033-00 1-216-121-00 1-216-027-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	470 5% 470 5% 220 5% 1M 5% 120 5%	1/10W 1/10W 1/10W 1/10W
FL1408	3 1-236-071-11	ENCAPSULATED COMP	PONENT		R1421 R1422 R1424	1-216-033-00 1-216-023-00 1-216-041-00	METAL GLAZE METAL GLAZE METAL GLAZE	220 5% 82 5% 470 5%	1/10W 1/10W 1/10W
	<1C>				R1425 R1426	1-216-041-00 1-216-041-00	METAL GLAZE METAL GLAZE	470 5% 470 5%	1/10W 1/10W
101403 10140 <b>4</b>	8-759-055-51	IC SDA9087XGEG IC SDA9089XGEG IC SDA9086-3			R1427 R1429 R1431 R1432 R1433	1-216-041-00 1-216-091-00 1-216-029-00 1-216-031-00 1-216-113-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	470 5% 56K 5% 150 5% 180 5% 470K 5%	1/10W 1/10W 1/10W 1/10W 1/10W
101410	8-759-037-45	IC TDA8443A/C4 IC MC78L08ACPRP IC MC78L05ACPRP			R1434 R1435 R1436 R1437	1-216-023-00 1-216-075-00 1-216-045-00 1-216-033-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	680 5% 220 5%	1/10W 1/10W 1/10W 1/10W
	<c01< td=""><td>L&gt;</td><td></td><td></td><td>1</td><td>1-216-047-00 1-216-057-00</td><td>METAL GLAZE</td><td></td><td>1/10W 1/10W</td></c01<>	L>			1	1-216-047-00 1-216-057-00	METAL GLAZE		1/10W 1/10W
L1401 L1405 L1406	1-408-418-00 1-408-407-00 1-408-407-00	INDUCTOR 6.	NH 8UH 8UH		R1441 R1442 R1443	1-216-053-00 1-216-053-00 1-216-053-00 1-216-041-00	METAL GLAZE METAL GLAZE METAL GLAZE	2.2K 5% 1.5K 5% 1.5K 5% 1.5K 5% 470 5%	1/10W 1/10W 1/10W 1/10W 1/10W
	<tra< td=""><td>NSISTOR&gt;</td><td></td><td></td><td>R1446</td><td>1-216-083-00 1-216-079-00</td><td>METAL GLAZE METAL GLAZE</td><td>27K 5% 18K 5%</td><td>1/10W 1/10W</td></tra<>	NSISTOR>			R1446	1-216-083-00 1-216-079-00	METAL GLAZE METAL GLAZE	27K 5% 18K 5%	1/10W 1/10W
Q1401 Q1402 Q1403 Q1404 Q1405	8-729-120-28 8-729-120-28 8-729-120-28 8-729-120-28	TRANSISTOR 2SC162 TRANSISTOR 2SC162 TRANSISTOR 2SC162 TRANSISTOR 2SC162 TRANSISTOR 2SC162	3-L5L6 3-L5L6 2-G		R1449 R1450 R1451	1-216-033-00 1-216-033-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE	220 5% 220 5% 10K 5%	1/10W 1/10W 1/10W
Q1406 Q1407 Q1408	8-729-120-28 8-729-120-28 8-729-216-22 8-729-216-22 8-729-216-22	TRANSISTOR 2SC162 TRANSISTOR 2SC162 TRANSISTOR 2SA116 TRANSISTOR 2SA116 TRANSISTOR 2SA116	3-L5L6 2-G 2-G		R1453 R1454 R1455	1-216-689-11 1-216-025-00 1-216-025-00 1-216-081-00 1-216-089-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	39K 5% 100 5% 100 5% 22K 5% 47K 5%	1/10W 1/10W 1/10W 1/10W 1/10W
Q1409 Q1413 Q1414 Q1415	8-729-216-22 8-729-900-53	TRANSISTOR 254116 TRANSISTOR DTC114 TRANSISTOR 25C162	Ž-G Ek	i	R1461 R1462 R1463 R1471	1-216-041-00 1-216-059-00 1-216-059-00 1-249-417-11 1-216-037-00 1-216-097-00	METAL GLAZE CARBON METAL GLAZE	470 5% 2.7K 5% 2.7K 5% 1K 5% 330 5%	1/10W 1/10W 1/10W 1/4W 1/10W
					11401	1-210-09/-00	METAL GLAZE	100K 5%	1/10W

V H1 H2 P

REF.NO. PA	ART NO.	DESCRIPTION			REMARK	REF.NO.	PART NO	DESCRIPTION			REMARK
	۲ <b>۵۵</b> ۷۶	STAL>				10091	8-741-101-75	IC SBX1610-11			
X02 1-		OSCILLATOR, C	RYSTAL		,		<res< td=""><td>ISTOR&gt;</td><td></td><td></td><td></td></res<>	ISTOR>			
		*******		******	******	R091	1-249-413-11	CARBON	470 5%	1/4W	
*1-	-643-004-11					*****	*********	********	*******	******	*******
		******					*A-1622-005-A	P BOARD, COMP			
	<cap< td=""><td>ACITOR&gt;</td><td></td><td></td><td></td><td>   </td><td></td><td></td><td></td><td></td><td></td></cap<>	ACITOR>				 					
C083 1: C087 1:	-163-037-11 -163-037-11	CERAMIC CHIP	0.022MF 0.022MF	10% 10%	25 <b>V</b> 25 <b>V</b>			ACITOR>	0 140		257
						! (1402	1-163-038-00 1-163-038-00 1-163-017-00	CERAMIC CHIP	0.1MF	10%	25V 25V 50V
CH1000+1		NECTOR> Plug, connect	00 13D			C1404 C1405	1-163-037-11 1-163-097-00	CERAMIC CHIP CERAMIC CHIP	0.022MF	10 <b>%</b> 5%	25V 50V
CM1000+1	-504-510-11	read, connect	ok 15i			C1406	1-163-097-00	CERAMIC CHIP	15PF	5%	50 <b>V</b>
	<jac< td=""><td></td><td></td><td></td><td></td><td>C1407 C1408</td><td>1-163-017-00</td><td>CERAMIC CHIP</td><td>0.0047MF</td><td>10%</td><td>25V 50V</td></jac<>					C1407 C1408	1-163-017-00	CERAMIC CHIP	0.0047MF	10%	25V 50V
J81 1 J82 1	-568-678-11 -562-837-11	TERMINAL BLOC JACK	K, S 3P			C1409 C1410	1-124-903-11 1-163-038-00	ELECT CERAMIC CHIP	1MF 0.1MF	20%	50V 25V
	< <b>C</b> 01	I.S.				C1411 C1412	1-163-038-00 1-163-038-00	CERAMIC CHIP	0.1MF		25V 25V
L081 1	-408-409-00		10UH			C1414	1-163-121-00 1-163-129-00	CERAMIC CHIP	150PF 330PF	5% 5%	50V 50V
L082 1	-408-409-00		10UH			C1417	1-163-129-00	CERAMIC CHIP		5%	50V
	<res< td=""><td>ISTOR&gt;</td><td></td><td></td><td></td><td>C1420</td><td>1-164-005-11 1-163-038-00</td><td>CERAMIC CHIP</td><td>0.1MF</td><td></td><td>25V 25V 25V</td></res<>	ISTOR>				C1420	1-164-005-11 1-163-038-00	CERAMIC CHIP	0.1MF		25V 25V 25V
JR020 1	-216-295-00	METAL GLAZE	0 5% 0 5%	1/10W		C1422	1-163-038-00 1-163-038-00 1-163-038-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	0.1MF		25V 25V
R081 1	-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE	0 5% 10K 5% 4.7K 5%	1/10W 1/10W 1/10W		1	1-163-038-00			10%	50V
R082 1 R083 1	-216-065-00 -216-057-00	METAL GLAZE	2.2K 5%	1/10W		C1425	1-163-009-11 1-164-232-11	CERAMIC CHIP	0.001MF 0.01MF	10% 10%	50V 50V
RO84 1 RO85 1	-249-419-11 -249-419-11	CARBON CARBON	1.5K 5% 1.5K 5%	1/4W 1/4W		C1427 C1428	1-126-233-11 1-163-038-00	ELECT CERAMIC CHIP	22MF 0.1MF	20%	50V 25V
						C1430	1-163-038-00 1-163-031-11	CERAMIC CHIP	0.1MF		25V 50V
6084		TCH>	1			1 (1432	1-163-031-11 1-163-031-11 1-163-031-11	CERAMIC CHIP	0.01MF		50V 50V
S082 1	1-571-532-21	SWITCH, TACTI SWITCH, TACTI SWITCH, TACTI	L			C1434	1-163-038-00	CERAMIC CHIP	0.1MF		25V
		:******		*******	:******	: C1436	1-163-038-00 1-163-038-00	CERAMIC CHIP	0.1MF		25V 25V
	1-642-997-11	H2 BOARD				C1437	1-164-343-11 1-163-005-11	CERAMIC CHIP	0.056NF 470PF	10% 10%	25V 50V
		******					1-164-005-11	CERAMIC CHIP			25V 25V
*4	4-374-987-01	HOLDER, LED GUIDE, LIGHT	LICUT CUIN	C C		C1443	1-164-005-11 1-163-251-11 1-164-005-11	CERAMIC CHIP	100PF	5%	50V 25V
*4	4-381-686-01	BRACKÉT (B),	LIGHT GOLD.	C		C1445	1-164-005-11 1-164-005-11	CERAMIC CHIP	0.47MF		25V 25V
		NNECTOR>				C1447	1-163-038-00	CERAMIC CHIP	0.1MF		25V
CN1132*1	1-568-882-51	PIN, CONNECTO	OR 7P			C1449	1-164-222-11 1-163-257-11	CERAMIC CHIP	180PF	5%	25V 50V
	<010	ODE>				C1450 C1452	1-164-005-11 1-163-038-00	CERAMIC CHIP CERAMIC CHIP			25V 25V
D092 8	8-719-948-31	DIODE LD-2019 DIODE LD-2019	VR VR			C1453	1-163-038-00 1-163-038-00	CERAMIC CHIP	0.1MF 0.1MF		25V 25V
DO93 8 DO94 8	8-719-948-31	DIODE LD-201	VR.			C1455	1-163-133-00	CERAMIC CHIP	470PF 470PF	5% 5%	50V 50V
	<10	>				C1457	1-164-005-11	CERAMIC CHIP	0.47MF		25V
						C1461	1-164-005-11	CERAMIC CHIP	U.47MF		25V

The components identified by shading and mark  $\Delta$  are critical for safety.
Replace only with part number specified.

Les composants identifies par une trame et une marque 🛆 sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

» spестео.	S POILLINE	Ellio Capacina					L		
REF.NO. PART NO.	DESCRIPTION		REMARK	REF.NO.	PART NO.	DESCRIPTION			REMARK
R1482 1-216-081-00	METAL GLAZE 22K	5% 1/10W		LF662 ΛΛ	1-424-391-11	TRANSFORMER,	LINE FILTER		
R1483 1-216-097-00 R1484 1-216-083-00	METAL GLAZE 100K METAL GLAZE 27K METAL GLAZE 470	5% 1/10W 5% 1/10W 5% 1/10W		A	1-424-436-11	(KV-E TRANSFORMER,	2531B,E2531E LINE FILTER		
R1485 1-216-041-00 R1486 1-216-033-00	METAL GLAZE 470 METAL GLAZE 220	5% 1/10W		i	1-421-862-11		(K)	/-E3431B	,E3431D)
R1487 1-216-065-00 R1492 1-216-033-00	METAL GLAZE 4.7K METAL GLAZE 220	5% 1/10W 5% 1/10W		í ! !	∠ <b>T</b> Ū A1	UC I CTOD \			
R1493 1-216-073-00 R1494 1-216-174-00	METAL GLAZE 10K METAL GLAZE 100	5% 1/10W 5% 1/8W		Q661	8-729-120-28	NSISTOR> TRANSISTOR 2S	C1623-L5L6		
R1495 1-216-053-00	METAL GLAZE 1.5K			4001	0-129-120-20	TICHISTSTON 25	01023 0320		
R1496 1-216-065-00 R1497 1-216-041-00 R1498 1-216-069-00	METAL GLAZE 4.7K METAL GLAZE 470 METAL GLAZE 6.8K	5% 1/10₩				ISTOR>		1 (20	
	METAL GLAZE 1K	5% 1/10W		R663 A R664 A	. 1-244-945-91 . 1-205-949-11	WIRFWOUND	IM 5% 1.8 5% 2531B,E2531	1/2W 10W	1 50310)
<cry:< td=""><td>STAL&gt;</td><td></td><td></td><td>Δ</td><td>. 1-202-968-11</td><td>WI REWOUND</td><td>1.2 5%</td><td>10W</td><td>3, E3431D)</td></cry:<>	STAL>			Δ	. 1-202-968-11	WI REWOUND	1.2 5%	10W	3, E3431D)
X1401 1-567-505-11 X1402 1-567-504-11	OSCILLATOR, CRYSTA	l l		R665 ⚠	1-218-265-91	METAL GLAZE	8.2M 5%	1W 1/4W	c
**********			******	R667	1-249-405-11	CARBON	8.2M 5% 100 5% 12K 5% 27K 5%	1/4W 1/4W 1/4W	r
*A-1624-010-A	F2 BOARD, COMPLETE			R668 R669 <u>A</u>	1-249-434-11 ,1-205-949-11	WIREWOUND	1.8 5%	ĨÓŴ	
. 1624 012.4	**************************************	.E2531D.E2931	B,E2931D)	<b>A</b>	1-202-968-11	(KV-E Wirewound	2531B, E2531 1.2 5%	10W	
*A-1624-012-A	***********	טייסוכדכט און.	747107	i i	1-202-968-11		1.2 5%	10W	B, E3431D)
*4-341-751-01 *4-341-752-01	EYELET Eyelet			D. 71	1 240 415 11	CADDON	680 5%	1/4W	B,E3431D)
				R671	1-249-415-11	CARDUN	000 74	1/ 4**	•
	ACITOR>	m 00W	2001		<rel< td=""><td>AY&gt;</td><td></td><td></td><td></td></rel<>	AY>			
	FILM 0.47N FILM 0.33N CERAMIC 0.002	F 20%	300V 300V 400V	RY661 2	1-515-720-31	RELAY			
C664 A 1-164-246-51 C666 1-124-120-11 C667 1-126-233-11	ELECT 220NF	20% 20%	25V 50V		<the< td=""><td>ERMISTOR&gt;</td><td></td><td></td><td></td></the<>	ERMISTOR>			
C672 ▲ 1-161-964-61	CERAMIC 0.004		250V 250V	İ	<u>1-809-827-11</u>				
C673 A 1-161-964-61 C674 A 1-125-318-11	FIRCT (BINCK) 220M	20% 3,E2531D_E2931	400V	١!	**********			******	*******
<b>1-125-555-11</b>	ELECT 330MI	20%	400V		*A-1635-001-A	M BOARD, COM	PLETE *****		
		(KV-E3431	B, E3431D	)	∠CA1	PACITOR>			
<c01< td=""><td>NNECTOR&gt;</td><td></td><td></td><td>0001</td><td></td><td></td><td>10096</td><td>5<b>%</b></td><td>500</td></c01<>	NNECTOR>			0001			10096	5 <b>%</b>	500
CN0005*1-508-765-00	PIN, CONNECTOR (5)	MM PITCH) 3P		C001 C003 C007	1-163-117-00 1-163-117-00 1-163-117-00	CERAMIC CHIP	100PF	5%	50V 50V
CN0007*1-508-786-00 CN0924*1-568-878-51 CN0925*1-695-294-11	PIN, CONNECTOR 3P			C008 C010	1-163-117-00 1-163-117-00	CERAMIC CHIP	100PF	5% 5% 5%	50 <b>V</b> 50V
CN0929*1-508-766-00		NM PITCH) 4P	•	C011	1-163-117-00		100PF	5%	50V
CN0931*1-691-291-11	PIN, CONNECTOR (P	C BOARD) 5P		C012 C014	1-163-117-00 1-163-117-00	CERAMIC CHIP	100PF	5% 5% 5%	50V 50V 50V
I <b>U</b> >	ODE>			C016 C018	1-163-141-00 1-164-505-11		2.2MF		164
	DIODE ISS119 DIODE MA152WK			C019 C032	1-126-233-11 1-163-117-00	- CERAMIC CHIF		20 <b>%</b> 5%	50V 50V
D662 8-719-400-18 D663 A 8-719-510-63 D664 8-719-921-69	DIODE D4SB6OL-F			C035 C036	1-163-037-11 1-164-005-11	CERAMIC CHIE	0.47MF	10%	25V 25V 50V
				C501	1-163-117-00			5 <b>%</b> 10 <b>%</b>	507
	ANSFORMER>	CIITCD		C501 C502 C503	1-163-020-00 1-164-232-11 1-137-123-91	CERAMIC CHIE	0.0032HF 0.0033MF	10% 5%	50V 63V
LF661 <u>A</u> 1-424-391-11	TRANSFORMER, LINE (KV-E2531 TRANSFORMER, LINE	B.E25310.E293	1B,E29310		1-137-025-91		0.56MF	10%	63¥
/ <u>N</u> 1 - 424 - 430 - 11	THUMOLOGRAPH OTHE	(KV-E343	1B, E34311	D)					



REF.NO	J. PART NO.	DESCRIPTION		REMARK	REF.NO	. PART NO.	DESCRIPTI	ON 		REMARK
C505 C506 C507 C508 C509	1-124-925-11 1-162-568-11 1-164-489-11 1-164-232-11 1-164-004-11	ELECT 2.2MF CERAMIC CHIP 0.33MF CERAMIC CHIP 0.22MF CERAMIC CHIP 0.01MF CERAMIC CHIP 0.1MF	20% 10% 10% 10% 10%	50V 16V 16V 50V 25V	1C562 1C563	8-759-998-98 8-759-081-30	IC MC78L05	ACPRP		
C510 C511 C512 C513 C514	1-124-925-11 1-137-102-11 1-126-103-11 1-163-209-00 1-163-105-00	FILM 0.022MF ELECT 470MF CERAMIC CHIP 0.0015MF	20% 10% 20% 5%	50V 250V 16V 50V 50V	L001 L501 L561 L562 L563	1-408-421-00 1-410-119-11 1-408-409-00 1-408-409-00 1-408-947-00	INDUCTOR INDUCTOR INDUCTOR	100UH 1MMH 10UH 10UH 2.2MMH		
C515 C519 C522 C523 C531	1-163-009-11 1-164-161-11 1-163-141-00 1-163-141-00 1-164-493-11	CERAMIC CHIP 0.0022MF CERAMIC CHIP 0.001MF CERAMIC CHIP 0.001MF	10% 10% 5%	50V 50V 50V 50V	9002	8-729-216-22	ANSISTOR>	25A1162-G		
C532 C538 C541	1-164-489-11 1-164-489-11 1-164-232-11	CERAMIC CHIP 0.22MF CERAMIC CHIP 0.22MF CERAMIC CHIP 0.01MF	10% 10% 10% 10%	50V 16V 16V 50V	Q003 Q501 Q502 Q503	8-729-120-28 8-729-901-01 8-729-120-28 8-729-901-01	TRANSISTOR TRANSISTOR TRANSISTOR TRANSISTOR	2SC1623-L5L6 DTC144EK 2SC1623-L5L6		
C542 C543 C544 C546	1-164-161-11 1-164-161-11 1-164-004-11	CERAMIC CHIP 0.022MF CERAMIC CHIP 0.0022MF CERAMIC CHIP 0.0022MF CERAMIC CHIP 0.1MF	10% 10% 10%	25V 50V 50V 25V	Q508 Q509 Q564 Q565 Q566	8-729-901-01 8-729-120-28 8-729-216-22 8-729-120-28 8-729-120-28	TRANSISTOR TRANSISTOR TRANSISTOR	2SC1623-L5L6 2SA1162-G 2SC1623-L5L6		
C547 C549 C550	1-163-989-11	CERAMIC CHIP 0.0082MF CERAMIC CHIP 0.033MF CERAMIC CHIP 0.001MF	10% 10% 5%	50V 25V 50V	Q567	8-729-901-01				
C552 C559	1-163-037-11 1-164-004-11	CERAMIC CHIP 0.022MF CERAMIC CHIP 0.1MF	10%	25V 25V		<res< td=""><td>SISTOR&gt;</td><td></td><td></td><td></td></res<>	SISTOR>			
C560 C563 C564	1-164-161-11 1-163-031-11 1-163-031-11	CERAMIC CHIP 0.0022MF CERAMIC CHIP 0.01MF CERAMIC CHIP 0.01MF	10%	50V 50V 50V	KUUI	1-216-295-00 1-216-296-00 1-216-025-00 1-216-025-00	METAL GLAZE	100 5¥	1/10W 1/8W 1/10W	
C565 C566 C567	1-163-031-11 1-163-009-11	CERAMIC CHIP 0.01MF CERAMIC CHIP 0.01MF CERAMIC CHIP 0.001MF	10%	50V 50V 50V	R003 R006	1-216-049-00	METAL GLAZE		1/10W 1/10W 1/10W	
C568 C569 C570	1-164-161-11	CERAMIC CHIP 0.001MF CERAMIC CHIP 0.0022MF CERAMIC CHIP 0.33MF	10% 10%	50V 50V 16V	RO08 RO10	1-216-073-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE	10K 5% 1K 5% 1K 5%	1/10W 1/10W 1/10W	
			10%	10,	R012	1-216-049-00	METAL GLAZE	1K 5% 1K 5%	1/10W 1/10W	
CD001		TER> VIBRATOR, CERAMIC			KO15 RO16	1-216-049-00 1-216-296-00 1-216-045-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE	1K 5% 0 5% 680 5%	1/10W 1/8W 1/10W	
	<con< td=""><td>NECTOR&gt;</td><td></td><td></td><td>R018</td><td>1-216-041-00</td><td></td><td>1K 5% 470 5%</td><td>1/10W 1/10W</td><td></td></con<>	NECTOR>			R018	1-216-041-00		1K 5% 470 5%	1/10W 1/10W	
CN1413 CN1426 CN1432	1-695-301-11   *1-568-881-51   *1-568-882-51	PIN, CONNECTOR 5P CONNECTOR, BOARD TO BOAR PIN, CONNECTOR 6P PIN, CONNECTOR 7P	D 40P		R021 R025	1-216-049-00 1-216-065-00 1-216-049-00 1-216-049-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1K 5% 4.7K 5% 1K 5% 1K 5%	1/10W 1/10W 1/10W 1/10W	
CN1441	*1-564-511-11	PLUG, CONNECTOR 8P			R030	1-216-075-00 1-216-049-00	METAL GLAZE METAL GLAZE	12K 5% 1K 5%	1/10W 1/10W	
	<010				R033	1-216-049-00 1-216-049-00 1-216-057-00	METAL GLAZE METAL GLAZE METAL GLAZE	1K 5% 1K 5% 2.2K 5%	1/10W 1/10W	
DOUI D501 D503 D504 D510	8-719-800-76 8-719-401-31 8-719-400-18	DIODE MA3039H-TX DIODE 1SS226 DIODE MA3047L-TX DIODE MA152WK DIODE RD5.6M-B2			R035 R038 R049 R050	1-216-057-00 1-216-073-00 1-216-049-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	2.2K 5% 2.2K 5% 10K 5% 1K 5% 10K 5% 22K 5%	1/10W 1/10W 1/10W 1/10W 1/10W 1/10W	
IC003 IC501	8-759-097-29	1C SDA30C162 SOCKET, 1C 68P; 1C001 IC M27C512-20B1-AE-24 IC TDA2595/V9			RO53 RO54 RO55	l-216-065-00 l-216-081-00 l-216-081-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	10K 5% 4.7K 5% 22K 5% 22K 5% 330 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
I C561		IC CXD2018Q			R068 1 R069 1	-216-037-00 -216-037-00	METAL GLAZE METAL GLAZE	330 5% 330 5%	1/10W 1/10W	



REF.NO.	PART NO.	DESCRIPTION				REMARK	REF.NO.	. PART NO.	DESCRIPTION	<u>N</u>		REMARK
U712 U713 U714	8-729-216-22	TRANSISTOR 2: TRANSISTOR 2: TRANSISTOR 2:	SA1162-	-L5L6 -G -0			R758 R759 R760	1-249-419-11 1-249-419-11 1-249-419-11	CARBON	1.5K 5% 1.5K 5% 1.5K 5%	1/4W 1/4W 1/4W	
	<res< td=""><td>SISTOR&gt;</td><td></td><td></td><td></td><td></td><td></td><td>ZVAS</td><td>NIABLE RESISTO</td><td>. מר</td><td></td><td></td></res<>	SISTOR>						ZVAS	NIABLE RESISTO	. מר		
JR701 JR703 R701 R702 R703	1-216-296-00 1-216-296-00 1-202-848-00 1-202-838-00 1-202-838-00	METAL GLAZE METAL GLAZE SOLID SOLID SOLID	0 0 680K 100K 100K	10%	1/8W 1/8W 1/2W 1/2W 1/2W		J	1-230-641-11 1-241-656-11	RES, ADJ, ME RES, ADJ, ME	ETAL GLAZE 2 ETAL FILM 11	.OM	******
R704 R705	1-202-842-11 1-216-398-11	SOLID METAL OXIDE	220K 5.6	10% 5%	1/2W 3W	F	! ! !	*A-1640-083-A			E3431B, E	3431D)
R706 R710 R711	1-216-398-11 1-215-899-11 1-202-820-11	METAL OXIDE METAL OXIDE SOLID	5.6 15K 1.5K	5% 5%	361	Đ	t + t  -  -  -  -  -  -	*4-341-751-01 *4-341-752-01 4-382-854-11	EYELET (EYI) EYELET (EY3) SCREW (M3XI)	EY2) EY4)	-)	
R712 R713 R714	1-215-899-11 1-202-820-11	METAL OXIDE SOLID	15K 1.5K	5% 20%	2W 1/2W	F	<u> </u> 			,,, ,, ,, ,,, ,,,	,	
R715 R716	I-215-899-11 I-202-820-11 I-247-700-11	METAL OXIDE SOLID CARBON	15K 1.5K 100	5% 20% 5%	2W 1/2W 1/4W		C1610	1-137-052-91	ACITOR>	0.047MF	10%	400V
R717	1-249-405-11	CARBON	100	5%	1/4W	F	C1614	1-137-104-11	FILM	0.033MF 1MF	10 <b>%</b> 20 <b>%</b>	250V 50V
R718 R720 R722	1-247-700-11 1-249-417-11 1-247-713-11	CARBON CARBON CARBON	100 1 <b>K</b> 1 <b>K</b>	5% 5% 5%	1/4W 1/4W 1/4W	F .	C1616 C1617	1-124-903-11 1-137-038-91 1-137-124-91	FILM FILM	0.C01MF 0.0047MF	10% 5%	400V 63V
R724	1-249-417-11	CARBON	1 K	5%	1/4W	F	C1620 C1622	1-137-051-91 1-124-557-11	FILM Elect	0.033MF 1000MF	10% 20%	400V 25V
R725 R726 R727	1-216-063-00 1-216-063-00 1-216-063-00	METAL GLAZE METAL GLAZE METAL GLAZE	3.9K 3.9K 3.9K	5% 5% 5%	1/10W 1/10W 1/10W		C1801	1-137-052-91 1-124-910-11	ELECT	0.047MF 47MF	10% 20%	400V 50V
R728 R729	1-216-039-00 1-216-039-00	METAL GLAZE METAL GLAZE	390 390	5% 5%	1/10W 1/10W		C1804	1-124-910-11 1-137-126-91	FILM	47MF 0.01MF	20% 5%	50V 63V
R730 R731	1-216-039-00 1-216-017-00	METAL GLAZE METAL GLAZE	390 47	5% 5%	1/10W 1/10W		C1805 C1806	1-137-132-91 1-137-132-91	FILM FILM	0.1MF 0.1MF	5% 5%	63V 63V
R732 R733	1-216-017-00 1-216-017-00	METAL GLAZE METAL GLAZE	47 47	5% 5%	1/10W 1/10W		C1809	1-124-360-00 1-136-104-00	FILM	1000MF 0.16MF	20% 5%	16V 200V
R734 R735	1-202-549-00	SOLID	100	20%	1/2W		C1810 C1811	1-137-028-11 1-162-318-11	FILM CERAMIC	1MF 0.001MF	10% 10%	63V 500V
R738 R739	1-216-049-00 1-216-025-00 1-216-025-00	METAL GLAZE METAL GLAZE METAL GLAZE	1K 100 100	5% 5% 5% 5%	1/10W 1/10W 1/10W		C1812 C1813 C1814	1-124-927-11 1-137-130-91 1-124-907-11	BLBUT Film Blbct	4.7MF 0.047MF 10MF	20% 5% 20%	50V 63V 50V
R740 R741	1-216-025-00 1-216-089-00	METAL GLAZE METAL GLAZE	100 <b>47</b> K	5% 5%	1/10W 1/10W		C1815	1-124-907-11	ELECT	10MF 22MF	20%	50 <b>V</b>
R742 R743	1-216-295-00 1-249-434-11		0 27K	5% 5%	1/10W 1/4W		C1816 C1817 C1818	1-126-233-11 1-124-927-11 1-124-910-11	ELECT ELECT FLECT	22MF 4.7MF 47MF	20% 20% 20%	50V 50V 50V
R747 R749	1-216-488-11 1-215-926-00	METAL OXIDE METAL OXIDE	18K 33K	5% 5%	3W 3W	F F	C1819	1-137-132-91	FILM	0.1MF	5%	63V
R751 R753	1-216-489-11 1-216-073-00	METAL OXIDE	27K 10K	5% 5%	3W 1/10W	F	C1820 C1822	1-162-318-11 1-124-927-11 1-137-130-91 1-124-907-11 1-126-233-11 1-124-927-11 1-124-910-11 1-137-132-91 1-126-103-11 1-137-043-11	ELECT Film	470MF 0.0047MF	20% 10%	16V 400V
R755	1-216-069-00	METAL GLAZE	6.8K	5% (KV	1/10W -E2531B	,E2531D)			NECTOR>			
	1-216-057-00	METAL GLAZE	2.2K	5% (KV	1/10W -E2931B	,E2931D)		*1-568-879-51 *1-564-512-11				
	1-216-065-00	METAL GLAZE	4.7K		1/10W -E3431B	, E3431D)	CN0630	*1-568-878-51 *1-508-765-00	PIN. CONNECT	OR 3P	CH) 3P	
R756	1-216-069-00	METAL GLAZE	6.8K	5% (KV	1/10W	,E2531D)				J. (3 711	o, j.	
	1-216-057-00	METAL GLAZE	2.2K	5%	1/10W		01603	<010				
	1-216-065-00	METAL GLAZE	4.7K	5 <b>%</b>	1/10W	,E2931D) ,E3431D)	D1604	8-719-979-85 8-719-947-06 8-719-981-01	DIODE RGP10J	PKG23		
R757	1-216-069-00	METAL GLAZE	6.8K	5%	1/10W	, E2531D)	D1802 D1803	8-719-911-19 8-719-911-19	DIODE ERA81- DIODE ISS119 DIODE ISS119	VU4		
	1-216-057-00	METAL GLAZE	2.2K		1/10W -E2931B	,E2931D)	D1804	8-719-911-19 8-719-801-35	DIODE 188119	0R3042		
	1-216-065-00	METAL GLAZE	4.7K	5%	1/10W	E3431D)	V1003	0 (17 0V1"33	THE BUILDING	UNJU44		



REF.NO.	PART NO.	DESCRIPTION				REMARK	REF.NO	. PART NO.	DESCRIPTION	i -		REMARK
R501 R502	1-216-047-00 1-216-097-00	METAL GLAZE METAL GLAZE METAL GLAZE	330 820 100K	52	1/10W 1/10W 1/10W		1 6	*A-1638-026-A	********	*****	3431B,E3	431D)
R503	1-216-067-00 1-216-053-00	METAL GLAZE METAL GLAZE	5.6K 1.5K		1/10W 1/10W			<b>*4-341-752-01</b>	FIELEI (EII:	~E14)		
	1-216-049-00	METAL GLAZE METAL GLAZE	12K 1K	5 <b>%</b>	1/10W 1/10W		G=0.1		PACITOR>	0.004796		2KV
R507	1-216-099-00 1-216-039-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE	120K 390 10K	5% 5%	1/10W 1/10W 1/10W		C701 C703 C704 C705	1-162-114-00 1-123-946-00 1-130-202-00 1-162-116-00	ELECT FILM CERAMIC	0.0047NF 4.7MF 0.022NF 680PF	20% 5% 10%	250V 400V 2KV
R513 R514	1-216-097-00 1-216-049-00 1-216-230-00 1-216-061-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	1K 22K 3.3K	5% 5% 5%	1/10W 1/10W 1/8W 1/10W		C708 C709 C710	1-163-197-00 1-163-005-11 1-163-005-11	CERAMIC CHI CERAMIC CHI	P 470PF	10% 10% 10%	50V 50V 50V 50V
R515 R516	1-216-049-00	METAL GLAZE METAL GLAZE	1K 390	5% 5%	1/10W 1/10W		C711 C712 C713	1-101-880-00 1-163-121-00 1-163-121-00	CERAMIC CHI	P 150PF	5% 5% 5%	50V 50V
R517 R518 R519 R520	1-216-039-00 1-216-075-00 1-216-033-00 1-216-093-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	390 12K 220 68K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W		C714 C716	1-163-121-00 1-124-122-1	CERAMIC CHI ELECT	P 150PF 100MF	5% 20%	50V 50V
R521 R522	1-216-053-00 1-216-085-00	METAL GLAZE METAL GLAZE	1.5K 33K	5% 5%	1/10W 1/10W			•	INNECTOR>			
R523 R524 R525	1-216-065-00 1-216-063-00 1-216-093-00	METAL GLAZE METAL GLAZE METAL GLAZE	4.7K 3.9K 68K	5% 5% 5% 5%	1/10W 1/10W 1/10W		: CNOAO	2*1-508-786-00 3*1-564-511-1 1*1-508-768-00	PLUG. CONNE	CTUK 8P		
R526 R527	1-216-053-00 1-216-071-00	METAL GLAZE METAL GLAZE	1.5K 8.2K	5% 5%	1/10W 1/10W			<d< td=""><td>ODE&gt;</td><td></td><td></td><td></td></d<>	ODE>			
R528 R529 R531	1-216-049-00 1-216-696-11 1-216-085-00	METAL GLAZE METAL CHIP METAL GLAZE	1 K 75 K 33 K	5 <b>%</b>	1/10W 1/10W 1/10W		D701 D702 D703	8-719-911-1 8-719-911-1	DIODE ISSII DIODE ISSII DIODE ISSII	9 9		
R532 R533 R535	1-249-427-11 1-216-105-00 1-216-057-00	METAL METAL GLAZE METAL GLAZE	6.8K 220K 2.2K	5% 5% 5%	1/4W 1/10W 1/10W		D704 D705	8-719-911-1 8-719-911-1	DIODE 18811 DIODE 18811	9		
R536 R538	1-216-057-00 1-216-025-00	METAL GLAZE METAL GLAZE	2.2K 100	5% 5%	1/10W 1/10W		D706 D707 D708	8-719-911-1 8-719-911-1 8-719-911-1	9 DIODE ISSII	9		
R539 R540	1-216-657-11 1-216-295-00	METAL CHIP METAL GLAZE	0	0.50% 5% 5%	1/10W		D709 D710	8-719-911-1 8-719-911-1	DIODE 18811	9		
R541 R542 R544	1-216-049-00 1-216-025-00 1-216-085-00	METAL GLAZE METAL GLAZE METAL GLAZE	1 K 100 33 K	5% 5% 5%	1/10W 1/10W 1/10W		D713	8-719-911-5	5 DIODE UOSG			
R545 R546	1-216-033-00 1-216-061-00	METAL GLAZE METAL GLAZE	220 3.3K	5% 5%	1/10W 1/10W		1201		ACK>	ממווי מסוויי		
R547 R551 R552	1-216-049-00 1-216-049-00 1-216-097-00	METAL GLAZE	1 K 1 K 100 K	5 <b>%</b>	1/10W 1/10W 1/10W		J701	1-526-990-1 <0	OIL>	JUNE JUDE		
R553 R559 R560 R564 R565	1-216-085-00 1-216-049-00 1-216-073-00 1-216-091-00 1-216-065-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	33K 1K 10K 56K 4.7K	5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W		L701 L703 L705 L707	1-408-609-4 1-408-609-4	I INDUCTOR	22UH 33UH 33UH 33UH		
R566 R567	1-216-073-00 1-216-085-00	METAL GLAZE METAL GLAZE	10K 33K	5% 5% 5% 5%	1/10W 1/10W			<7	RANSISTOR>			
R568 R570	1-216-109-00 1-216-0 <b>4</b> 9-00		330K 1K	5% 5%	1/10W 1/10W		9701 9702					
		RIABLE RESISTO					0703 0704 0705	8-729-906-7 8-729-906-7	O TRANSISTOR O TRANSISTOR	BF871 BF871		
	1-241-766-21						4706 4 9707					
****	************* *A-1638-027-A	**************************************					Q708 Q709	8-729-200-1 8-729-200-1	7 TRANSISTOR 7 TRANSISTOR	2SA1091-0 2SA1091-0		
		C BOARD, COM	***** PLETE				Q710 Q711			2SC1623-L5L6		



REF.NO	D. PART NO.	DESCRIPTION			REMARK	REF.NO.	PART NO.	DESCRIPTION			REMARK
	<d10< td=""><td>DDE&gt;</td><td></td><td></td><td></td><td>C918 C919 C920</td><td>1-163-133-00</td><td>CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP</td><td>470PF</td><td>5% 5% 10%</td><td>50V 50V 50V</td></d10<>	DDE>				C918 C919 C920	1-163-133-00	CERAMIC CHIP CERAMIC CHIP CERAMIC CHIP	470PF	5% 5% 10%	50V 50V 50V
D261 D262 D270	8-719-911-19 8-719-921-69	DIODE ISS119 DIODE ISS119 DIODE MTZJ-9.1				C921 C922 C923 C924 C925	1-163-017-00 1-124-477-11 1-164-346-11 1-124-477-11 1-124-477-11	ELECT CERAMIC CHIP ELECT	47MF	10% 20% 20% 20%	50V 16V 16V 16V 16V
I C2 <b>7</b> 0	<1C> 8-759-072-99 4-201-023-01 4-812-134-00		; I C27 I C270	0		C926 C927 C928 C929 C930	1-164-346-11 1-124-477-11 1-124-477-11 1-124-477-11 1-124-477-11	ELECT ELECT ELECT	1MF 47MF 47MF 47MF 47MF	20% 20% 20% 20%	16V 16V 16V 16V 16V
	<tra< td=""><td>INSISTOR&gt;</td><td></td><td></td><td></td><td>C931</td><td>1-164-346-11</td><td>CERAMIC CHIP</td><td>1MF</td><td></td><td>167</td></tra<>	INSISTOR>				C931	1-164-346-11	CERAMIC CHIP	1MF		167
<b>Q27</b> 0	8-729-120-28	TRANSISTOR 2SC1623	-L5L6			C932 C933 C934 C935	1-164-346-11 1-124-477-11 1-124-477-11 1-124-477-11	CERAMIC CHIP ELECT ELECT		20% 20% 20%	16V 16V 16V 16V
	<res< td=""><td>ISTOR&gt;</td><td></td><td></td><td></td><td>C936</td><td></td><td>CERAMIC CHIP</td><td></td><td>204</td><td></td></res<>	ISTOR>				C936		CERAMIC CHIP		204	
R269 R270 R271 R272	1-216-041-00 1-216-085-00 1-216-085-00 1-216-077-00		5% 5% 5% 5%	1/10W 1/10W 1/10W		C937		CERAMIC CHIP		20%	16V 16V 16V
R273	1-216-073-00	METAL GLAZE 10K	5%	1/10W 1/10W			<com< td=""><td>INECTOR&gt;</td><td></td><td></td><td></td></com<>	INECTOR>			
R274 R275 R276 R277 R278	1-216-081-00 1-216-047-00 1-216-081-00 1-217-477-00 1-216-093-00		5% 5% 5% 5%	1/10W 1/10W 1/10W 1W 1/10W		CN1210	<b>*</b> 1-564-522-11	CONNECTOR, BO PLUG, CONNECT PLUG, CONNECT	COR 7P	ID 50P	
R279	1-216-065-00						<010	DE>			
R280 R281	1-216-073-00 1-247-752-11	METAL GLAZE 10K CARBON 1K	5% 5%	1/10W 1/10W 1/2W		D902 D903	8-719-921-69	DIODE MTZJ-9. DIODE MTZJ-9. DIODE MTZJ-9.	1		
****		**************	*****	******	*******	D904 D905	8-719-921-69 8-719-921-69	DIODE MTZJ-9.	1		
	*A-1651-033-A	J BOARD, COMPLETE				D906		DIODE MTZJ-9.			
	*A-1651-039-A	(KV-E2531B, J BOARD, COMPLETE	E25310 (KV-E34	),E2931E 131B,E34	3,E2931D) 131D)	D907 D908		DIODE MTZJ-9.	1 1 1		
	<cap< td=""><td>ACITOR&gt;</td><td></td><td></td><td></td><td>D911</td><td></td><td>DIODE MTZJ-9.</td><td></td><td></td><td></td></cap<>	ACITOR>				D911		DIODE MTZJ-9.			
C292 C295		ELECT 330MF CERAMIC 0.022M CERAMIC 0.022M CERAMIC CHIP 0.001M	if If		6.3V 50V 50V 50V	D913	8-719-921-69	DIODE MTZJ-9. DIODE MTZJ-9. DIODE MTZJ-9. DIODE MTZJ-9.	1		
C296	1-163-009-11	CERAMIC CHIP 0.001	F	10%	50 V	D916 D917	8-719-921-69 8-719-921-69	DIODE MTZJ-9. DIODE MTZJ-9.			
C298 C901 C902 C904	1-163-017-00 1-163-017-00 1-163-133-00	CERAMIC 0.022P CERAMIC CHIP 0.0047 CERAMIC CHIP 0.0047 CERAMIC CHIP 470PF	MF MF	10% 10% 5%	50V 50V 50V 50V	D918 D919 D920	8-719-921-69 8-719-921-69 8-719-921-69	DIODE MTZJ-9. DIODE MTZJ-9. DIODE MTZJ-9.	1		
C905		CERAMIC CHIP 470PF			50V	D922	8-719-921-69 8-719-921-69	DIODE MTZJ-9. DIODE MTZJ-9.			
C906 C907 C908 C909	1-163-133-00 1-163-133-00 1-101-004-00	CERAMIC O.01MF CERAMIC CHIP 470PF CERAMIC CHIP 470PF CERAMIC 0.01MF		5% 5%	50V 50V 50V 50V	D923 D924	8-719-921-69 8-719-921-69 8-719-921-69	DIODE MTZJ-9. DIODE MTZJ-9. DIODE MTZJ-9.	1 1		
C910		CERAMIC CHIP 0.0047		10%	50V		8-719-921-69 8-719-921-69	DIODE MTZJ-9. DIODE MTZJ-9.			
C911 C912 C913 C914 C915	1-163-133-00 1-163-133-00 1-163-121-00	CERAMIC CHIP 0.0047 CERAMIC CHIP 470PF CERAMIC CHIP 470PF CERAMIC CHIP 150PF CERAMIC CHIP 150PF		5% 5% 5%	50V 50V 50V 50V 50V	D928	8-719-921-69 <jac< td=""><td>DIODE MTZJ-9.</td><td>Ī</td><td></td><td></td></jac<>	DIODE MTZJ-9.	Ī		
C916 C917	1-163-017-00	CERAMIC CHIP 0.0047 CERAMIC CHIP 0.0047	MF	10%	50V 50V	J903	1-561-534-41	TERMINAL BLOCK SOCKET 21P TERMINAL BLOCK	·		



REF.NO. PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION			REMARK
D1807 8-719-981-01 D1808 8-719-911-19	DIODE ERA81-004 DIODE ERA81-004 DIODE 1SS119 DIODE 1SS119 DIODE 1SS119		R1811	1-215-461-00 1-249-423-11 1-249-413-11 1-216-083-00 1-216-091-00	METAL CARBON CARBON METAL GLAZE METAL GLAZE	47K 1% 3.3K 5% 470 5% 27K 5% 56K 5%	1/4W 1/4W 1/4W 1/10W 1/10W	
D1811 8-719-300-33 D1812 8-719-911-19	DIUDE KU-JAM		R1813 R1815	1-249-417-11 1-216-069-00 1-216-065-00	CARBON METAL GLAZE METAL GLAZE	1K 5% 6.8K 5% 4.7K 5%	1/4W 1/10W 1/10W	
<1C>			R1817	1-216-061-00 1-216-049-00	METAL GLAZE METAL GLAZE	3.3K 5% 1K 5%	1/10W 1/10W	J
*4-341-752-01 IC1802 8-752-052-88 IC1803 8-759-135-80	IC SI-3090CA EYELET: IC1801 IC CXA1526P IC UPC358C		R1821 R1822 R1824 R1825	1-249-417-11 1-216-379-11 1-249-423-11 1-247-713-11 1-215-857-71	CARBON METAL OXIDE CARBON CARBON METAL OXIDE	1K 5% 6.8 5% 3.3K 5% 1K 5% 10 5%	1/4W 2W 1/4W 1/4W 1W	F
<001	L>		R1826 R1827	1-249-404-00 1-215-875-71	CARBON METAL OXIDE	82 5% 10K 5% 100K 5%	1/4W 1W	F
L1601 1-410-093-11 L1603 1-459-087-00 L1604 1-459-104-00 L1607 1-459-148-00	INDUCTOR 33MMH COIL, HCC DUST CORE 3.9MMH COIL, DUST CORE COIL EYELET; L1607 COIL (WITH CORE) (PMC) COIL, HCC DUST CORE 3.9MMH		R1828 R1829 R1830	1-249-441-11 1-249-414-11 1-249-411-11	CARBON CARBON CARBON	100K 5% 560 5% 330 5%	1/4W 1/4W 1/4W	
*4-341-751-01	EYELET; L1607		R1831 R1832	1-249-426-11 1-215-885-00	CARBON METAL OXIDE	5.6K 5% 68 5% 22K 5%	1/4W 2W 1/10V	
L1801 1-459-592-11 L1802 1-459-087-00	COIL, HCC DUST CORE 3.9MMH		R1834 R1835 R1836	1-249-393-11 1-249-435-11	CARBON CARBON	22K 5% 10 5% 33K 5%	1/4W 1/4W	
<tra< td=""><td>NSISTOR&gt;</td><td></td><td>R1837 R1838</td><td>1-249-435-11 1-216-379-11</td><td>CARBON METAL OXIDE</td><td>33K 5% 6.8 5% 270 5%</td><td>1/4W 2W</td><td>F</td></tra<>	NSISTOR>		R1837 R1838	1-249-435-11 1-216-379-11	CARBON METAL OXIDE	33K 5% 6.8 5% 270 5%	1/4W 2W	F
Q1610 8-729-119-78 Q1613 8-729-011-02 Q1802 8-729-173-38 Q1803 8-729-119-78	COIL (WITH CORE) (PMC) COIL, HCC DUST CORE 3.9MMH  NSISTOR>  TRANSISTOR 2SC2785-HFE TRANSISTOR 2SK1917 TRANSISTOR 2SC2785-HFE TRANSISTOR 2SC2785-HFE TRANSISTOR 2SC2785-HFE TRANSISTOR 2SC2785-HFE TRANSISTOR 2SC2785-HFE TRANSISTOR 2SC2785-HFE TRANSISTOR 2SD734-34 TRANSISTOR 2SD733-K TRANSISTOR 2SD774-34 TRANSISTOR 2SC2785-HFE TRANSISTOR 2SC2785-HFE TRANSISTOR 2SC2785-HFE TRANSISTOR 2SC2785-HFE TRANSISTOR 2SC2785-HFE		R1839 R1840 R1841	1-249-410-11 1-249-429-11 1-249-437-11	CARBON CARBON	270 57 10K 57 47K 57	1/4W 1/4W 1/4W	
Q1804 8-729-119-78 Q1805 8-729-140-97	TRANSISTOR 2SC2785-HFE		R1842 R1843	1-249-429-11 1-249-421-11 1-249-429-11	CARBON CARBON CARRON	10K 5% 2.2K 5% 10K 5%	1/4W 1/4W 1/4W	
Q1806 8-729-119-78 Q1806 8-729-140-97 Q1808 8-729-140-97 Q1808 8-729-173-38	TRANSISTOR 2SC2785-HFE TRANSISTOR 2SB734-34 TRANSISTOR 2SB733-K TRANSISTOR 2SB730-K		R1847 R1848	1-216-065-00 1-249-429-11 1-216-065-00	METAL GLAZE CARBON	4.7K 5% 10K 5%	1/100 1/4W	
Q1809 8-729-209-15 Q1810 8-729-140-96	TRANSISTOR 2SD774-34		*****	*******	*********	*****		
Q1811 8-729-119-78 Q1812 8-729-119-78 Q1813 8-729-119-78	TRANSISTOR 2SC2785-HFB TRANSISTOR 2SC2785-HFB TRANSISTOR 2SC2785-HFB			*1-643-003-11	K BOARD			
<res< td=""><td>SISTOR&gt;</td><td></td><td></td><td>4-200-001-01</td><td>HOLDER, IC</td><td></td><td></td><td></td></res<>	SISTOR>			4-200-001-01	HOLDER, IC			
JR1 1-216-295-00 JR2 1-216-295-00		I/10W I/10W			ACITOR>			
R1625 1-249-415-11 R1628 1-216-057-00	CARBON 680 5% 1 METAL GLAZE 2.2K 5% 1	1/4W 1/10W	C268 C269	1-163-005-11 1-101-006-00 1-163-024-00	CERAMIC CHIP CERAMIC CERAMIC CHIP	0.047MF	10% 10%	50V 50V 50V
R1629 1-249-429-11 R1630 1-249-435-11		[/4W [/4W	C270 C271 C272	1-164-492-11 1-126-233-11	CERAMIC CHIP ELECT	0.15MF 22MF	10% 20%	16V 50V
R1631 1-216-057-00 R1632 1-249-436-11	METAL GLAZE 2.2K 5% 1 CARBON 39K 5% 1	1/10W 1/4W	C273	1-124-618-11	ELECT	2200MF 2200MF	20%	35V 35V
R1633 1-249-421-11 R1634 1-216-097-00		1/4W 1/10W	C274 C275 C276	1-124-618-11 1-164-505-11 1-164-505-11	ELECT CERAMIC CHIP CERAMIC CHIP	2.2MF 2.2MF	20%	16V 16V
R1635 1-216-073-00 R1636 1-216-073-00	METAL GLAZE 10K 5%	1/10₩ 1/10₩ 1/10₩	C277	1-137-134-91 1-124-925-11	FILM	0.22MF 2.2MF	5 <b>%</b> 20 <b>%</b>	63V 50V
R1637 1-216-057-00 R1641 1-249-411-11 R1666 1-212-865-00	METAL GLAZE 2.2K 5% CARBON 330 5% FUSIBLE 22 5%	1/10W 1/4W 1/4W F	C279	1-124-122-11		100MF	20%	3šý
R1801 1-249-409-11 R1802 1-249-409-11		1/4W 1/4W	}		NECTOR>			
R1804 1-247-891-00 R1806 1-216-103-00 R1807 1-247-891-00	METAL GLAZE 180K 5%	1/4W 1/10W 1/4W	CN131:	1 1-568-882-51 2*1-508-784-00 3*1-568-878-51	PIN, CONNECT	OR (5MM PIT	CH) IP	




The components identified by shading and mark  $\Lambda$  are critical for safety.
Replace only with part number specified.

Les composants identifies par une trame et une marque 🛆 sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

REF. NO	. PART NO.	DESCRIPTIO	N -		REMARK	REF. NO	. PART NO.				REMARK
C601		PACITOR>	0.00040	104		<b>1 6854</b>	/N. 1-162-115 <b>-</b> 91	CERAMIC CHIP ELECT CERAMIC	330PF	10% 20% 10%	25V 50V 2KV
C603 C605 C608 C612	1-130-202-00 1-161-742-00 1-124-910-11 1-124-903-11 1-130-480-00	CERAMIC ELECT ELECT MYLAR	0.022MF 0.0022MF 47MF 1MF 0.0056MF	20% 20% 20% 20% 5%	400V 400V 50V 50V 50V	C857 C861 C863 C866	1-124-902-00 1-137-132-91 1-137-094-11 1-137-038-91	FILM FILM	0.47MF 0.1MF 0.047MF 0.001MF	20% 5% 10% 10%	50V 63V 100V 400V
C613 C614 C615	1-129-722-00 1-102-030-00 1-126-943-11	FILM CERAMIC	0.047MF 330PF 2200MF	10% 10%	630V 500V	C868 C869	1-137-127-91 1-137-098-11	FILM FILM	0.015MF 0.1MF	5 <b>%</b> 10 <b>%</b>	63V 100V
C616 C617	1-102-030-00 1-162-116-00	CERAMIC CERAMIC	330PF 680PF	20% 10% 10%	25V 500V 2KV	C870 C871 C872 C873	1-137-120-91 1-130-651-00 1-124-907-11 1-137-120-91	FILM FILM ELECT FILM	0.001MF 0.001MF 10MF 0.001MF	5% 2% 20% 5%	63V 100V 50V 63V
C618 C619 C620 C621 C622	1-162-134-11 1-102-030-00 1-164-299-11 1-124-347-00 1-128-320-11	CERAMIC CERAMIC CHIE ELECT FLECT	100MF	10% 10% 10% 20% 20%	2KV 500V 25V 160V 16V	C875 C877 C878 C1501	1-102-038-00 1-124-902-00 1-164-232-11 1-163-141-00	ELECT CERAMIC CHIP CERAMIC CHIP	0.001MF 0.001MF 0.47MF 0.01MF	20% 10% 5%	500V 50V 50V 50V
C623 C624	1-102-030-00 1-126-800-51	CERAMIC ELECT	330PF 2200MF	10% 20%	500V 35V	C1502 C1503	1-124-903-11 1-163-133-00	ELECT CERAMIC CHIP	IMF	20% 5%	50V 50V
C625 C627 C628	1-126-800-51 1-137-124-91 1-124-910-11	ELECT FILM ELECT	330PF 2200MF 2200MF 0.0047MF 47MF	20% 5% 20%	35V 63V 50V	C1505	1-124-480-11 1-124-911-11 1-137-135-91 1-137-031-11	ELECT Film	470MF 220MF 0.33MF	20% 20% 5%	25V 50V 63V
C629 C631 C632	1-124-907-11 1-163-075-00 1-137-128-91	CERAMIC CHIE		20% 10% 5%	50V 25V 63V	C1508	1-124-480-11	ELECT	0.22MF 470MF	10% 20%	100V 25V
C633 C635	1-163-078-11 1-102-212-00	CERAMIC CHIP	0.033 <b>M</b> F 820PF	10% 10%	25V 500V	C1511	1-124-767-00 1-124-907-11 1-124-006-11	ELECT	2.2MF 10MF 10MF	20% 20% 20%	50V 50V 25V
C636 C640 C801 C803 C804	1-137-132-91 1-126-233-11 1-137-116-11 1-164-695-11 1-137-130-91	CERAMIC CHIP	0.1MF 22MF 1MF 0.0022MF 0.047MF	5% 20% 5% 5% 5%	63V 50V 200V 50V 63V	C1515		ELECT CERAMIC CHIP CERAMIC CHIP INECTOR>	O. 1MF	10% 10%	25V 25V
C805 C806 C808 C809 C810	1-124-902-00 1-124-907-11 1-162-114-00 1-124-808-51 1-163-001-11	ELECT	0.47MF 10MF 0.0047MF 10MF	20% 20% 20%	50V 50V 2KV 200V 50V	CN0009 CN0010 CN0504	0*1-568-878-51 0*1-568-877-51 1*1-568-882-51	PIN, CONNECTO PIN, CONNECTO PIN, CONNECTO PIN, CONNECTO PIN, CONNECTO	IR 3P IR 2P IR 7P	CH) 2P	
C812 C813 C815 C819	1-162-318-11 1-108-704-11 1-162-117-00 1-126-103-11 1-137-514-11	CERAMIC	0.001MF 0.1MF 100PF 470MF 0.021MF	10%	500V 200V 500V 16V 1. 2KV	CN0519 CN0521 CN0524	*1-568-878-51 *1-508-765-00 *1-568-878-51	PIN, CONNECTO PIN, CONNECTO PIN, CONNECTO PIN, CONNECTO PIN, CONNECTO	R 3P R (5MM PITC R 3P		
C822 <u>A</u> C823 C824 C825 A	1-162-116-91 1-124-902-00 1-137-124-91 1-162-116-91 1-136-895-51			10% 20% 5% 10% 5%	2KV 50V 63V 2KV 630V	CN0529 CN5521	*1-508-784-00 *1-568-878-51	PIN, CONNECTO PIN, CONNECTO PIN, CONNECTO CONNECTOR PIN	R (5MM PITC R 3P	H) 1P	
C827 C828	1-137-094-11 1-137-041-91	FILM FILM	0.047MF 0.0033MF	10%	100 <b>V</b>	200	O10>				
C831 C832 C833	1-123-932-00 1-124-910-11 1-137-118-11	ELECT ELECT FILM	4.7MF 47MF 1.8MF	10% 20% 20% 5%	400V 160V 50V 200V	D602 D606 D608 D610	8-719-300-33 8-719-300-33 8-719-300-33 1-806-660-11	DIODE RU-3AM DIODE RU-3AM DIODE ESAB85-	009		
C834 C835 C836 C837 C838	1-137-513-11 1-124-480-11 1-102-228-00 1-137-038-91 1-137-146-11	FILM ELECT CERAMIC FILM FILM	0.62MF 470MF 470PF 0.001MF 0.15MF	5% 20% 10% 10% 10%	200V 25V 500V 400V 250V	D611 D612 D613 D614 D616	8-719-029-04 8-719-510-09 8-719-920-68 8-719-920-68 8-719-110-31	DIODE D10SC6M DIODE ESAB92- DIODE ESAB92- DIODE RD12ES-	)2		
C839 C840 C841 C842 C846	1-102-228-00 1-137-053-91	ELECT ELECT CERAMIC FILM ELECT	47MF 470MF 470PF 0.068MF 33MF	20% 20% 10% 10%	250V 25V 500V 400V 160V	D619 D620 D624 D801 D802	8-719-400-18 8-719-911-19 8-719-312-40 8-719-018-82 8-719-300-33	DIODE MA152WK DIODE 1SS119 DIODE R2K DIODE RGP02-20 DIODE RU-3AM	DEL-6394		
C851	1-137-043-11	FILM	0.00 <b>47M</b> F	10%	400V	D804	8-719-400-18	DIODE MA152WK			



REF.NO.	PART NO.	DESCRIPTION		REMARK	REF.NO.	PART NO.	DESCRIPTION			REMARK
.1905 1906 1907	1-695-293-11 1-695-296-11 1-695-293-11	TERMINAL BLOCK, S			R909 R910 R911 R913	1-216-113-00 1-216-113-00 1-216-022-00 1-216-067-00	METAL GLAZE	470K 470K 75 5.6K	5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W	
L291	<011	L> INDUCTOR, WIDEBAND			R914 R915 R916	1-216-067-00 1-216-113-00 1-216-113-00	METAL GLAZE METAL GLAZE METAL GLAZE	470K 5	5% 1/10W 5% 1/10W 5% 1/10W	
L291 L292 L293	1-402-711-11	INDUCTOR, WIDEBAND INDUCTOR, WIDEBAND			i	1-216-022-00 1-216-067-00	METAL GLAZE METAL GLAZE	75 5.6K	5% 1/10W 5% 1/10W	
		NSISTOR>	1517		R920 R921 R922	1-216-067-00 1-216-022-00 1-216-222-00	METAL GLAZE METAL GLAZE METAL GLAZE	75 ' 10K '	5% 1/10W 5% 1/10W 5% 1/8W 5% 1/10W	
Q281 Q282 Q283	8-729-120-28	TRANSISTOR 2SC1623- TRANSISTOR 2SC1623- TRANSISTOR 2SA1162-	-L5L6 -L5L6 -G		R924 R925	1-216-039-00 1-216-039-00 1-216-089-00	METAL GLAZE METAL GLAZE METAL GLAZE	390	5% 1/10W	
		ISTOR>			R926 R927 R928	1-216-039-00 1-216-039-00 1-216-089-00	METAL GLAZE METAL GLAZE METAL GLAZE	390 ' 47K '	5% 1/10W 5% 1/10W 5% 1/10W 5% 1/10W	
JR905	1-216-296-00 1-216-295-00 1-216-296-00	METAL GLAZE O METAL GLAZE O	5% 1/8W 5% 1/10W 5% 1/8W 5% 1/10W		R929 R930 R931	1-216-067-00 1-216-113-00 1-216-216-00	METAL GLAZE METAL GLAZE METAL GLAZE		5% 1/10W 5% 1/10W 5% 1/8W	
	1-216-295-00 1-216-296-00 1-216-296-00	METAL GLAZE O METAL GLAZE O METAL GLAZE O	5% 1/8W 5% 1/8W		R932 R933 R934	1-216-113-00	METAL GLAZE METAL GLAZE METAL GLAZE	470K 10K 5.6K	5% 1/10W 5% 1/8W 5% 1/10W 5% 1/10W 5% 1/10W	
JR911 JR915	1-216-296-00 1-216-295-00 1-216-296-00	METAL GLAZE O	5% 1/8W 5% 1/10W 5% 1/8W		R935 R936 R937	1-216 <b>-</b> 022-00 1-216 <b>-</b> 022-00	METAL GLAZE METAL GLAZE	75 75	5% 1/10W 5% 1/10W 5% 1/10W	
JR919	1-216-295-00	METAL GLAZE 0	5% 1/10W 5% 1/8W 5% 1/10W		R937 R938 R939	1-216-113-00 1-216-039-00 1-216-188-00	METAL GLAZE METAL GLAZE METAL GLAZE	470K 390 390	5% 1/10W 5% 1/10W 5% 1/8W	
JR923	1-216-295-00 1-216-295-00 1-216-296-00 1-216-296-00	METAL GLAZE 0	5% 1/10W 5% 1/10W 5% 1/8W 5% 1/8W		R940 R941 R942	1-216-067-00 1-216-113-00 1-216-188-00	METAL GLAZE METAL GLAZE METAL GLAZE	5.6K 470K 390	5% 1/10W 5% 1/10W 5% 1/8W 5% 1/10W 5% 1/8W	
JR926 JR927	1-216-296-00 1-216-296-00				R943 R944	1-216-089-00 1-216-188-00	METAL GLAZE			
JR928 JR935 JR939	1-216-296-00	METAL GLAZE O		ı	R945 R946 R947 R948	1-216-089-00 1-216-022-00 1-216-022-00 1-216-073-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	47K 75 75 10K	5% 1/10W 5% 1/10W	
JR940 JR942 JR944		METAL GLAZE O	5% 1/10W 5% 1/8W 5% 1/10W	1	R949 R950	1-216-113-00 1-216-067-00	METAL GLAZE METAL GLAZE		5% 1/10W 5% 1/10W 5% 1/10W	
JR946 JR947	1-216-296-00 1-216-295-00				R951 R952 R953	1-216-188-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	5.6K 470K 390 390	5% 1/10W 5% 1/10W 5% 1/10W 5% 1/8W 5% 1/10W	
JR952 JR954 JR955 R282	1-216-296-00 1-216-295-00 1-216-296-00 1-216-073-00	METAL GLAZE O METAL GLAZE O METAL GLAZE O METAL GLAZE 10K	5% 1/8W 5% 1/10W 5% 1/8W 5% 1/10W 5% 1/10W		R954 R955 R956	1-216-039-00 1-216-039-00 1-216-089-00	METAL GLAZE METAL GLAZE			
R283 R284	1-216-073-00 1-216-073-00	METAL GLAZE 10K METAL GLAZE 10K	5% 1/10W	) )	R957 R958 R959	1-216-039-00 1-216-089-00 1-216-071-00	METAL GLAZE METAL GLAZE METAL GLAZE	390 47K 8.2K	5% 1/10V 5% 1/10V 5% 1/10V 5% 1/10V 5% 1/10V	
R286 R287 R288	1-216-097-00 1-216-216-00 1-216-216-00 1-216-055-00	METAL GLAZE 100K METAL GLAZE 5.6K METAL GLAZE 5.6K METAL GLAZE 1.8K	5% 1/8W		R960 R961	1-216-071-00 1-216-071-00	METAL GLAZE METAL GLAZE	8.2K 8.2K	5% 1/100 5% 1/100	
R289 R290 R291	1-216-216-00 1-249-413-11	METAL GLAZE 5.6K CARBON 470	5% 1/8W 5% 1/4W	•	****	************* *A-1642-075-A	D BOARD, COM	PLETE (K		
R292 R901 R902	1-249-413-11 1-216-039-00 1-216-039-00	CARBON 470 METAL GLAZE 390 METAL GLAZE 390	5% 1/4W 5% 1/10V 5% 1/10V			4-200-001-01	*********	****		
R903 R904	1-216-113-00 1-216-113-00 1-216-188-00	METAL GLAZE 470K METAL GLAZE 470K METAL GLAZE 390		į.		4-201-023-01 *4-341-751-01 *4-341-752-01 *4-368-683-01	EYELET EYELET SPRING	LAI ING		
R905 R906 R907	1-216-188-00 1-216-039-00 1-216-171-00	METAL GLAZE 390	5% 1/10V 5% 1/8W	i		<b>*4-389-343-01</b>	SPRING RIVET NYLON,	3.5		
R908	1-216-171-00	METAL GLAZE 75	5% 1/8W		;					

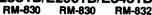



Les composants identifies par une trame et une marque 🛆 sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

The components identified by shading and mark  $\triangle$  are critical for safety.

Replace only with part number specified.

REF.NO	PART NO.	DESCRIPTION				REMARK	REF.NO.	. PART NO.	DESCRIPTION	V -			REMARK
R628 R629 R630	1-215-464-00 1-215-464-00 1-249-421-11	METAL	62K 62K 2.2K	1%	1/4W 1/4W 1/4W		R876	1-249-421-11		2.2K		1/4W	
R631 R633	1-216-397-11 1-249-415-11	METAL OXIDE CARBON	4.7 680	5 <b>%</b> 5 <b>%</b>	3W 1/4W	F	R878 R884 R889	1-215-880-00 1-215-883-11 1-216-693-11 1-216-089-00	METAL OXIDE	10 33 56K 47K	5% 5% 0.50% 5%	2W 2W 1/10W 1/10W	F
R634 R635 R636 R637	1-215-477-00 1-216-073-00 1-216-452-11 1-216-113-00	METAL GLAZE METAL OXIDE	220K 10K 180 470K	5% 5%	1/4W 1/10W 2W 1/10W	F	R893 R894 R895	1-215-878-00 1-216-264-00 1-216-079-00	METAL OXIDE	33K 560K	5% 5% 5%	1W 1/8W	F
R638 R639	1-216-073-00 1-216-089-00	METAL GLAZE METAL GLAZE	10K 47K	5% 5%	1/10W 1/10W		R897 R898 R1501	1-216-079-00 1-216-089-00 1-216-262-00 1-216-673-11	METAL GLAZE	18K 47K 470K 8.2K	5% 5%	1/10W 1/10W 1/8W 1/10W	
R640 R651 R801 R802	1-207-905-00 1-216-069-00 1-216-069-00 1-216-295-00	METAL GLAZE METAL GLAZE	0.27 6.8K 6.8K 0	5%	2W 1/10W 1/10W 1/10W	F	R1503	1-216-665-11 1-216-065-00 1-216-081-00	METAL CHIP METAL GLAZE	3.9K 4.7K 22K	0.50% 5%		
R804 R805 R806	1-217-778-11 1-216-677-11	METAL CHIP	1 K 1 2 K	5% 0.50%	1/10W	F	R1505 R1506	1-216-081-00 1-216-057-00	METAL GLAZE METAL GLAZE	22K 2.2K	5% 5% 5%	1/10W 1/10W	
R807 R808	1-216-061-00 1-216-037-00 1-216-085-00	METAL GLAZE METAL GLAZE METAL GLAZE	3.3K 330 33K	5% 5% 5%	1/10W 1/10W 1/10W		R1509	1-216-684-11 1-216-091-00 1-249-382-11 1-215-887-00	METAL CHIP METAL GLAZE CARBON METAL OXIDE	24K 56K 1.2	0.50% 5% 5%	1/10W 1/10W 1/4W	F
R809 R811 R812	1-216-097-00 1-216-033-00 1-216-061-00	METAL GLAZE	100K 220 3.3K	5% 5% 5%	1/10W 1/10W 1/10W		R1512	1-216-371-00	METAL OXIDE	150 1.5	5%	2W 2W	F F
R813 R814	1-216-065-00 1-216-091-00	METAL GLAZE	4.7K 56K	5% 5%	1/10W 1/10W		R1514	1-216-049-00	METAL GLAZE METAL GLAZE	4.7K 1K 4.7K	5% 5%	1/10W 1/10W 1/10W	
R815 R819 R820	1-216-081-00 1-247-755-11 1-216-097-00		22K 1.8K 100K	5%	1/10W 1/2W 1/10W	F		<var< td=""><td>IABLE RESISTO</td><td>R&gt;</td><td></td><td></td><td></td></var<>	IABLE RESISTO	R>			
R821 R822	1-215-918-00 1-215-918-00		1.5K 1.5K	5% 5%	3W	F F	RV601	1-241-628-11	RES, ADJ, CA	RBON 2.2	2K		
R823 R824 R825	1-216-065-00 1-216-675-11 1-216-345-11	METAL GLAZE METAL CHIP METAL OXIDE	4.7K 10K 0.47	0.50% 5%	1/10W 1/10W 1W	F	<u>T</u> 601 <b>∆</b>	1-450-997-11	NSFORMER> S.R.T (SMT7)				
R826 R828 R829	1-216-166-00 1-216-121-00 1-249-429-11	METAL GLAZE METAL GLAZE CARBON	47 1M	5% 5%	1/8W 1/10W		T803	1-453-118-11 1-437-090-00	HDT				
R830 R832 R833 R834	1-216-687-11 1-216-089-00 1-216-105-00 1-216-109-00	METAL CHIP METAL GLAZE	10K 33K 47K 220K 330K	5% 0.50% 5% 5%	1/4W 1 1/10W 1/10W 1/10W 1/10W	<b>,</b>	}	************* *A-1642-074-A		PLETE (K			
R835 R836 R837	1-216-057-00 1-216-242-00 1-216-695-11	METAL GLAZE METAL GLAZE METAL CHIP	2.2K 68K 68K	5% 5%	1/10W 1/8W 1/10W		1		HOLDER, IC SPACER, INSUI EYELET	LATING			
R838 R839	1-216-091-00 1-216-055-00	METAL GLAZE METAL GLAZE	56K 1.8K	5%	1/10W 1/10W 1/10W		,	*4-341-752-01 *4-368-683-01 *4-389-343-01					
R841 R842 R846	1-249-397-11 1-215-890-11 1-216-671-11	CARBON METAL OXIDE METAL CHIP	22 470 6.8K	5% 5% 0.50%	1/4W F 2W F 1/10W	? ?		4-812-134-00	RIVET NYLON,	3.5			
R847 R849	1-216-699-11 1-215-908 <b>-</b> 00	METAL CHIP	100K 33	0.50% 5%	1/10W 3W F	7	C601	<cap< td=""><td>ACITOR&gt; FILM</td><td>0.022MF</td><td>1</td><td>0%</td><td>400V</td></cap<>	ACITOR> FILM	0.022MF	1	0%	400V
R851 R852 R853 R854 R855	1-247-743-11 1-249-389-11 1-249-443-11 1-249-443-11 1-202-818-00	CARBON CARBON CARBON CARBON SOLID	220 4.7 0.47 0.47 1K	5% 5% 5% 10%	1/2W F 1/4W F 1/4W F 1/4W F	ì	C603 C605 C608 C612	1-161-742-00 1-124-910-11 1-124-903-11	CERAMIC ELECT ELECT	0.0022M 47MF 1MF 0.0068M	F 2 2 2	0% 0% 0%	400V 400V 50V 50V 63V
R858 R864	1-249-425-11 1-216-685-11	CARBON METAL CHIP	4.7K 27K	5% 0.50%	1/2W 1/4W 1/10W	ļ	C613 C614 C615	1-129-722-00 1-102-030-00 1-126-943-11	FILM CERAMIC ELECT	0.047MF 330PF	10	ΟŽ	630V 500V
R865 R866 R867	1-247-901-11 1-216-103-00 1-216-113-00	CARBON METAL GLAZE METAL GLAZE	820K 180K 470K	5% 5% 5%	1/4W 1/10W 1/10W	 	C616 C617	1-102-030-00 1-162-116-00	CERAMIC CERAMIC	2200MF 330PF 680PF	10	)X	25V 500V 2KV
R868 R871 R872	1-249-435-11 1-249-493-11 1-249-393-11	CARBON CARBON CARBON	33K 56K 10		1/4W 1/2W 1/4W F	         	C619 C620	1-162-134-11 1-102-030-00 1-164-299-11	CERAMIC CHIP	470PF 330PF 0.22MF	10 10 10	)% )%	2KV 500V 25V
R873	1-249-393-11	CARBON	10	5%	1/4W F		C621 C622			100MF 2200MF	20 20		160 <b>V</b> 16 <b>V</b>

The components identified by shading and mark  $\triangle$  are critical for safety. Replace only with part number specified.

Les composants identifies par une trame et une marque \( \Delta \) sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.



REF.NO. PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION		REMARK
	-88 DIODE RD5.6ES-BI -03 DIODE RD7.5ES-B2 -55 DIODE 1105G		Q601 Q602 Q603	8-729-016-14 8-729-177-22 8-729-900-53 8-729-216-22	TRANSISTOR BUZ9 TRANSISTOR 2SB7 TRANSISTOR DTC1 TRANSISTOR 2SA1 TRANSISTOR 2SC2	72-4 14EK 162-G	
D815 8-719-300	-33 DIODE RU-3AM -85 DIODE EGP2OG -93 DIODE RD6.2ES-B2 -18 DIODE MA152WK		Q801 Q802 Q804 Q805	8-729-016-32 8-729-140-97 8-729-216-22 8-729-216-22	TRANSISTOR 2SC4 TRANSISTOR 2SB7 TRANSISTOR 2SA1 TRANSISTOR 2SA1	927-01 34-34 162-G 162-G	
D824 8-719-976 D825 8-719-400 D826 8-719-400	-64 DIODE RGPO2-17 -18 DIODE MA152WK -18 DIODE MA152WK -50 DIODE MT7.J-T-72-2.2A		Q812 Q813 Q818	8-729-119-80 8-729-120-28 8-729-140-96 8-729-216-22	TRANSISTOR 25K1 TRANSISTOR 25C2 TRANSISTOR 25C1 TRANSISTOR 25D7 TRANSISTOR 25A1	688-LK 623-L5L6 74-34 .162-G	
D830 8-719-400 D831 8-719-400 D832 8-719-400 D833 8-719-400	1_10 DIODE MUITAWN		Q1501 Q1502 Q1503 Q1504	8-729-120-28 8-729-901-01 8-729-216-22 8-729-901-01	TRANSISTOR 2SCI TRANSISTOR DTC1 TRANSISTOR 2SAI TRANSISTOR DTC1	1623-L5L6 144EK 1162-G 144EK	
D1501 8-719-400					ISTOR>		
D1503 8-719-91 D1504 8-719-982	2-03 DIODE MTZJ-3.6A		JR001 JR002 JR003 JR004 JR005	1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00 1-216-295-00	METAL GLAZE ( METAL GLAZE ( METAL GLAZE ( METAL GLAZE ( METAL GLAZE (	5% 5% 5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W
1 C602 8-759-908 1 C603 8-749-92	3-29 IC TDA4605-3 8-15 IC TL431CLP 3-44 IC SPH617G-1 7-16 IC LM393P 7-16 IC LM393P		JR500 JR501 JR502 JR503	1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00	METAL GLAZE (	5% 5% 5% 5%	1/8W 1/8W 1/8W 1/8W 1/8W
1C803 8-759-08 1C1501 8-759-50	1-31 IC MC78L12ACPRP 6-46 IC TDA8179S <coil></coil>		JR506 JR507 JR508	1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00		0 5% 0 5% 0 5% 0 5%	1/8W 1/8W 1/8W 1/8W 1/8W
L603 1-410-39 L604 1-410-39 L605 1-459-44 L606 1-459-44	6-41 FERRITE BEAD INDUCTOR 6-41 FERRITE BEAD INDUCTOR 6-41 FERRITE BEAD INDUCTOR 2-00 COIL (WITH CORE) 2-00 COIL (WITH CORE) 6-41 FERRITE BEAD INDUCTOR		JR510 JR511 JW208 R601 R602	1-216-296-00 1-216-296-00 1-216-296-00 1-217-587-00 1-216-360-11 1-216-065-00	METAL GLAZE METAL GLAZE RES, SHORT 0.0 METAL OXIDE	0 5% 0 5% 1 8.2 5%	1/8W 1/8W 1/4W 1W F 1/10W
L609 1-410-39 L622 1-412-53 L623 1-412-53 L803 1-420-87 L808 1-412-54	3-21 INDUCTOR 47UH 3-21 INDUCTOR 47UH 2-00 COIL, AIR CORE 9-11 INDUCTOR 1MMH		R603	1-215-901-00 1-247-883-00	CARBON METAL GLAZE METAL GLAZE	33K 5% 150K 5% 8.2 5% 220 5% 3.3K 5%	2W F 1/4W 1/10W 1/10W 1/10W
L809 1-459-11 L810 1-460-19 L811 1-412-51 L812 1-412-51 L813 1-412-53			R608 R609 R610 R611 R612	1-215-928-11 1-216-005-00 1-247-885-00 1-249-405-11 1-247-894-11	METAL GLAZE Carbon Carbon	68K 5% 15 5% 180K 5% 100 5% 430K 5%	3W F 1/10W 1/4W 1/4W 1/4W
L817 1-460-19 L1501 1-412-5 L1502 1-412-5 L1503 1-412-5	N1-31 INDUCTOR 33UH N5-21 INDUCTOR 10UH N1-31 INDUCTOR 33UH		R613 R614 R615 R617 R618	1-216-260-00 1-216-487-11 1-216-487-11 1-216-033-00 1-216-449-11	METAL OXIDE METAL OXIDE METAL GLAZE	390K 5% 12K 5% 12K 5% 220 5% 56 5%	1/8W 3W F 3W F 1/10W 2W F
	<1C LINK>		R620	1-216-045-00	METAL GLAZE	680 5% 2.2K 0.50%	1/10/ <b>4</b> 1/10/ <b>4</b>
PS602 A 1-532-68 PS603 A 1-532-68	36-91 LINK, IC 2.7A 36-91 LINK, IC 2.7A 36-91 LINK, IC 2.7A 86-91 LINK, IC 2.7A		R621 R622 R623 R625	1-216-659-11 1-216-041-00 1-216-073-00 1-216-449-11	METAL GLAZE METAL GLAZE METAL OXIDE	470 5% 10K 5% 56 5%	1/10W 1/10W 2W F
	<transistor></transistor>		R626 R627	1-216-635-11 1-249-398-11		220 0.50% 27 5%	1/10W 1/4W F



Les composants identifies par une Les composants identinies par une trame et une marque \( \Delta \) sont critiques pour la secunte. Ne les remplacer que par une piece portant le numero specifie. The components identified by shading and mark  $\Delta$  are critical for safety.

Replace only with part number specified.

REF.NO. PART NO. DESCRIPTION	REMARK	REF.NO	. PART NO.			************	***************************************	REMARK
D1503 8-719-911-55 DIODE U05G D1504 8-719-982-03 DIODE MTZJ-3.6A				SISTOR>				
<10>		JR003	1-216-295-00 1-216-295-00	METAL GLAZE METAL GLAZE	0 0 0	5% 5% 5% 5%	1/10W 1/10W 1/10W	
		JR004 JR005 JR500	1-216-295-00	METAL GLAZE	0 0 0	5%	1/10W 1/10W 1/8W	
IC801 8-759-987-16 IC LM393P IC802 8-759-987-16 IC LM393P		JR501 JR502 JR503	1-216-296-00 1-216-296-00	METAL GLAZE METAL GLAZE	0 0 0	5% 5% 5% 5%	1/8W 1/8W 1/8W 1/8W	
IC803 8-759-081-31 IC MC78L12ACPRP IC1501 8-759-506-46 IC TDA8179S		JR504 JR505	1-216-296-00 1-216-296-00	METAL GLAZE METAL GLAZE	0	5 <b>%</b>	1/8W 1/8W	
<pre><coil> L602 1-410-396-41 FERRITE BEAD INDUCTOR</coil></pre>		JR506 JR507 JR508	1-216-296-00 1-216-296-00 1-216-296-00	METAL GLAZE METAL GLAZE	0 0 0	5% 5% 5%	1/8W 1/8W 1/8W	
L602 1-410-396-41 FERRITE BEAD INDUCTOR L603 1-410-396-41 FERRITE BEAD INDUCTOR L604 1-410-396-41 FERRITE BEAD INDUCTOR L605 1-459-442-00 COLL (WITH CORE)		JR509 JR510 JR511	1-216-296-00 1-216-296-00 1-216-296-00	METAL GLAZE	0 0 0	5% 5% 5%	1/8W 1/8W 1/8W	
L606 1-459-442-00 COIL (WITH CORE)  L609 1-410-396-41 FERRITE BEAD INDUCTOR L622 1-412-533-21 INDUCTOR 470H		R601 R602	1-217-587-00 1-216-353-00 1-216-065-00	RES, SHORT O METAL OXIDE METAL GLAZE	.01 2.2 4.7K	5% 5%	1/4W 1W   1/10W	F
L603 1-410-396-41 FERRITE BEAD INDUCTOR L604 1-410-396-41 FERRITE BEAD INDUCTOR L605 1-459-442-00 COIL (WITH CORE) L606 1-459-442-00 COIL (WITH CORE)  L609 1-410-396-41 FERRITE BEAD INDUCTOR L622 1-412-533-21 INDUCTOR 47UH L623 1-412-533-21 INDUCTOR 47UH L803 1-420-872-00 COIL, AIR CORE L808 1-412-549-11 INDUCTOR IMMH  L809 1-459-111-00 COIL, DRAM CORE (CDI) L810 1-460-197-11 COIL, FERRITE (PMC) L811 1-412-519-11 INDUCTOR 3 AUM		R603 R604 R605	1-215-901-00 1-247-883-00 1-216-313-00 1-216-033-00		33K 150K 8.2	5% 5%	1/4W 1/10W	F
L809 1-459-111-00 COIL, DRAM CORE (CDI) L810 1-460-197-11 COIL, FERRITE (PMC) L811 1-412-519-11 INDUCTOR 3.3UH		R606 R607 R608	1-216-033-00 1-216-061-00 1-215-928-11	METAL GLAZE METAL GLAZE METAL OXIDE	220 3.3K	5% 5% 5%	1/10W 1/10W	<b>.</b>
L813 1-412-519-11 INDUCTOR 3.3UH		R609 R610 R611 R612	1-215-928-11 1-216-005-00 1-247-885-00 1-249-405-11	METAL GLAZE	68K 15 180K 100	5% 5% 5% 5%	3W 1 1/10W 1/4W 1/4W	F
L817 1-460-196-11 COIL, HORIZONTAL LINEARITY L1501 1-412-531-31 INDUCTOR 33UH L1502 1-412-525-21 INDUCTOR 10UH L1503 1-412-531-31 INDUCTOR 33UH		R613	1-247-894-11 1-216-260-00	CARBON Metal Glaze	430K 390K	5% 5%	1/4W 1/8W	
L1503 1-412-531-31 INDUCTOR 33UH <ic link=""></ic>		R614 R615 R617 R618	1-216-487-11 1-216-487-11 1-216-033-00 1-216-449-11	METAL OXIDE METAL OXIDE METAL GLAZE METAL OXIDE	12K 12K 220 56	5% 5% 5% 5% 5%	3W F 3W F 1/10W 2W F	F
PS601 A1-532-686-91 LINK, IC 2.7A PS602 A1-532-686-91 LINK, IC 2.7A		R620 R621	1-216-045-00 1-216-659-11	METAL GLAZE METAL CHIP	680 2.2K	5% 0.50%	1/10W 1/10W	
PS603 1-532-686-91 LINK, 1C 2.7A PS604 1-532-686-91 LINK, 1C 2.7A		R622 R623 R625	1-216-041-00 1-216-073-00 1-216-449-11	METAL GLAZE METAL GLAZE METAL OXIDE	<b>47</b> 0 10K <b>5</b> 6	5% 5% 5%	1/10W 1/10W 2W F	7
<pre><transistor> Q601 8-729-016-14 TRANSISTOR BUZ91A-E3155</transistor></pre>		R626 R627	1-216-635-11 1-249-398-11	CARBON	220 27	5%	1/10W 1/4W F	7
Q602 8-729-177-22 TRANSISTOR 258772-Q Q603 8-729-900-53 TRANSISTOR DTC114EK Q610 8-729-216-22 TRANSISTOR 25A1162-G		R628 R629 R630	1-215-464-00 1-215-464-00 1-249-421-11	METAL METAL Carbon	62K 62K 2.2K	1% 1% 5%	1/4W 1/4W 1/4W	
Q611 8-729-119-78 TRANSISTOR 2SC2785-HFE Q801 8-729-016-32 TRANSISTOR 2SC4927-01		R631 R633 R634	1-216-397-11 1-249-415-11 1-215-477-00	METAL OXIDE CARBON METAL	4.7 680 220K	5% 5% 1%	3W F 1/4W 1/4W	ì
Q802 8-729-140-97 TRANSISTOR 2SB734-34 Q804 8-729-216-22 TRANSISTOR 2SA1162-G Q805 8-729-216-22 TRANSISTOR 2SA1162-G	į	R635 R636	1-216-073-00 1-216-452-11	METAL GLAZE METAL OXIDE	10K 180	5% 5%	1/10W 2W F	ì
Q806 8-729-011-00 TRANSISTOR 2SK1916-02F87 Q807 8-729-119-80 TRANSISTOR 2SC2688-LK Q812 8-729-120-28 TRANSISTOR 2SC1623-L5L6	į	R637 R638 R639 R640	1-216-113-00 1-216-073-00 1-216-089-00 1-207-905-00	METAL GLAZE METAL GLAZE METAL GLAZE WIREWOUND	470K 10K 47K 0.27	5% 5% 5% 10%	1/10W 1/10W 1/10W 2W F	;
U813 8-729-140-96 TRANSISTOR 2SD774-34 U818 8-729-216-22 TRANSISTOR 2SA1162-G		R651 R801	1-216-069-00 1-216-053-00	METAL GLAZE METAL GLAZE	6.8K	5% 5%	1/10W	
Q1501 8-729-120-28 TRANSISTOR 2SC1623-L5L6 Q1502 8-729-901-01 TRANSISTOR DTC144EK Q1503 8-729-216-22 TRANSISTOR 2SA1162-G Q1504 8-729-901-01 TRANSISTOR DTC144EK		R802 R804 R805 R806	1-216-295-00 1-217-778-11 1-216-677-11 1-216-061-00	METAL GLAZE FUSIBLE METAL CHIP METAL GLAZE	0 1K 12K 3.3K	5% 5% 0.50% 5%	1/10W 1W F	•
		R807 R808	1-216-037-00 1-216-085-00	METAL GLAZE METAL GLAZE	330 33K	5%	1/10W 1/10W	


The components identified by shading and mark  $\Delta$  are critical for safety.

Replace only with part number specified.

Les composants identifies par une trame et une marque 🛕 sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.



8					waxaa							
REF.NO.	PART NO.	DESCRIPTION			REMARK	REF.NO.	PART NO	). 	DESCRIPTION			REMARK
C624 C625 C627	1-102-030-00 1-126-800-51 1-126-800-51 1-137-124-91 1-124-910-11	ELECT ELECT	330PF 2200MF 2200MF 0.0047MF 47MF	10% 20% 20% 5% 20%	500V 35V 35V 63V 50V	C1506 C1507 C1508	1-137-1 1-137-0 1-124-0	135-91 132-91 180-11	FILM ELECT	220MF 0.33MF 0.27MF 470MF 2.2MF	20% 5% 10% 20% 20%	50V 63V 100V 25V 50V
C631 C632 C633	1-124-907-11 1-163-075-00 1-137-128-91 1-163-078-11 1-137-132-91	ELECT CERAMIC CHIP FILM CERAMIC CHIP FILM	0.022MF	20% 10% 5% 10% 5%	50V 25V 63V 25V 63V	C1511 C1512 C1514	1-124-0 1-124-0 1-124-0 1-164-0	907-11 006-11 004-11	ELECT	IOMF IOMF O.IMF	20% 20% 20% 10% 10%	25 V 25 V 25 V 25 V
C801 C803 C804	1-137-116-11 1-164-695-11	ELECT FILM CERAMIC CHIP FILM ELECT	22MF 1MF 0.0022MF 0.047MF 0.47MF	20% 5% 5% 5% 20%	50V 200V 50V 63V 50V	! CN0009	*1-568-8	786-00 878-51	NECTOR> PIN, CONNECT PIN, CONNECT PIN, CONNECT PIN, CONNECT	OR 3P	CH) 2P	
C808 C809	1-124-808-51	ELECT CERAMIC ELECT CERAMIC CHIP	10MF 0.0047MF 10MF 220PF	20% 20% 10%	50V 2KV 200V 50V	CN0504 CN0505	*1-568-8 *1-568-8	882-51 880-51	PIN, CONNECT PIN, CONNECT PIN, CONNECT	OR 7P OR 5P		
C812 C813	1-162-318-11 1-108-704-11		0.001MF 0.1MF 100PF	10% 10% 10%	500v 200v 500v	CN0519 CN0521 CN0524	*1-568-8 *1-508-1 *1-568-8	878-51 765-00 878-51	PIN, CONNECT PIN, CONNECT PIN, CONNECT PIN, CONNECT	OR 3P OR (5MM PIT OR 3P		
C819 C821 A C822 A	1-126-103-11 1-137-514-11 1-162-116-91	ELECT FILM CERANIC	470MF 0.021MF 680PF	20% 2% 10%	16V 1.2KV 2KV	CN0526 CN0529 CN5521	*1-568-1  *1-508-  *1-568-1	881-51 784-00 878-51	PIN, CONNECT PIN, CONNECT PIN, CONNECT	OR 6P OR (5MM PIT OR 3P		
C824 C825 <u>A</u> C826 A	1-124-902-00 1-137-122-91 1-162-116-91 1-136-895-51 1-137-098-11	FILM CERANIC FILM	0.47MF 0.0022MF 680PF 0.068MF 0.1MF	20% 5% 10% 5% 10%	50V 63V 2KV 630V 100V	(   		<d10< td=""><td></td><td></td><td></td><td></td></d10<>				
C831 C832		ELECT Elect Film	0.0033MF 4.7MF 47MF 2MF 0.82MF	10% 20% 20% 5%	400V 160V 50V 200V 200V	D602 D606 D608 D610 D611	8-719- 8-719- 1-806- 8-719-	300-33 300-33 660-11 029-04	DIODE D5L60	-009		
C837 C838	1-137-038-91	CERANIC FILM FILM	470MF 470PF 0.001MF 0.15MF 47MF	20% 10% 10% 10% 20%	25V 500V 400V 250V 250V	D612 D613 D614 D616 D619	8-719- 8-719- 8-719-	920-68 920-68 110-31 400-18	DIODE DIOSC6 DIODE ESAB92 DIODE ESAB92 DIODE RD12ES DIODE MA152W	1-02 1-02 1-82 K		
	1-124-480-11 1-102-228-00 1-137-053-91 1-123-024-21	ELECT CERANIC	470MF 470PF 0.068MF 33MF 0.001MF	20% 10% 10%	25V 500V 400V 160V 63V	D620 D624 D801 D802 D804	8-719- 8-719-	312-40 018-82 300-33	DIODE 1SS119 DIODE R2K DIODE RGPO2- DIODE RU-3AM DIODE MA152W	20EL-6394		
C852 C853	1-164-299-11 1-124-910-11 1-162-135-91 1-124-902-00 1-137-132-91	CERAMIC CHIP ELECT CERAMIC ELECT FILM		10% 20% 10% 20% 5%	25V 50V 2KV 50V 63V	D808 D809 D812 D813 D814	8-719- 8-719- 8-719- 8-719-	911-55 911-55 028-29	DIODE RD7.5E DIODE UO5G DIODE UO5G DIODE RU30AL	:S-B2 :FS1		
C863 C868 C869 C870 C871	1-137-094-11 1-137-127-91 1-137-098-11 1-137-120-91 1-130-651-00	FILM FILM FILM FILM FILM	0.047MF 0.015MF 0.1MF 0.001MF 0.001MF	10% 5% 10% 5% 2%	100V 63V 100V 63V 100V	D815 D816 D818 D821 D822	8-719- 8-719- 8-719- 8-719-	109-93 400-18 982-20	DIODE RU-3AM DIODE EGP20G DIODE RD6.2E DIODE MA152W DIODE MTZJ-3	S-B2 JK 90B		
C872 C873 C875 C877 C878	1-124-907-11 1-137-120-91 1-102-038-00 1-124-902-00 1-164-232-11	ELECT FILM CERAMIC ELECT CERAMIC CHIP	10MF 0.001MF 0.001MF 0.47MF 0.01MF	20% 5% 20% 10%	50V 63V 500V 50V 50V	D824 D825 D826 D827 D828	8-719- 8-719- 8-719- 8-719-	400-18 983-50 911-19	DIODE RGPO2- DIODE MA152W DIODE MA152W DIODE MTZJ-T DIODE ISS119	)K )K '-72-2.2A )		
C1501 C1502 C1503	1-163-141-00 1-124-903-11 1-163-133-00 1-124-480-11	CERAMIC CHIP	0.001MF 1MF	5% 20% 5% 20%	50 V 50 V 50 V 25 V	D830 D831 D832 D833 D1501	8-719- 8-719- 8-719-	400-18 400-18 400-18 400-18 400-18	DIODE MA152W DIODE MA152W DIODE MA152W DIODE MA152W DIODE MA152W	JK JK		

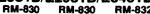



Les composants identifies par une trame et une marque 🛆 sont critiques pour la securite.
Ne les remplacer que par une piece portant le numero specifie.

The components identified by shading and mark  $\Delta$  are critical for safety.

Replace only with part number specified.

REF.NO. PART NO.	DESCRIPTION			REMARK	REF.NO.	. PART NO.	DESCRIPTION	REMARK
C819 1-126-103-11 C821 1-137-065-11 C822 1-162-116-91 C823 1-124-903-11 C824 1-137-122-91	ELECT I	3.024MF 3 580PF 1	10% 20%	16V 1 <b>.2KV</b> 2KV 50V 63V	CN0525 CN0526	5*1-695-294-11 5*1-568-881-51	PIN, CONNECTOR 3P  PIN, CONNECTOR (PC BOARD) 6P  PIN, CONNECTOR 6P  PIN, CONNECTOR (5MM PITCH) 1P  PIN, CONNECTOR 3P	
C825 A 1-162-116-91 C826 A 1-136-316-51 C827 1-137-132-91 C828 1-137-041-91 C831 1-123-932-00	FILM 0 FILM 0 FILM 0	0.1MF 5 0.0033MF 1	0% (	2KV 630V 63V 400V 160V	DY1	*1-580-798-11 <dio< td=""><td>CONNECTOR PIN (DY) 6P DE&gt;</td><td></td></dio<>	CONNECTOR PIN (DY) 6P DE>	
C832 1-124-910-11 C833 1-137-118-11 C834 1-136-569-11 C835 1-124-480-11 C836 1-102-228-00	FILM 1 FILM 1 ELECT 4	.8MF 5 .2MF 5	5% 5% 20%	50V 200V 200V 25V 500V	D602 D606 D608 D610		DIODE RU-3AM DIODE RU-3AM DIODE ESAB85-009 SCREW (M3X10), P, SW (+); D610	
C837 1-137-038-91 C838 1-137-146-11 C839 1-123-950-00 C840 1-124-480-11 C841 1-102-228-00	FILM 0 ELECT 4' ELECT 4'	1.15MF 1 17MF 2 170MF 2	07 207 207	400V 250V 250V 250V 25V	D611 D612 D613	8-719-029-04 4-382-854-11 8-719-510-09 4-382-854-11 8-719-920-68	SCREW (M3X10), P, SW (+); D611 D10DE D10SC6M SCREW (M3X10), P, SW (+); D612 D10DE ESAB92-02	
C842 1-137-053-91 C846 1-123-024-21 C851 1-137-120-91 C852 1-164-299-11 C853 1-124-910-11	ELECT 33 FILM 0. CERAMIC CHIP 0.	3NF .001NF 5 .22NF 1	5% 6 0% 2	400V 160V 53V 25V 50V	D614 D616 D619	4-382-854-11 8-719-110-31	DIODE ESAB92-02 SCREW (M3X10), P, SW (+); D614 DIODE RD12ES-B2	
C854 & 1-162-115-91 C857	ELECT 0. FILM 0. FILM 0.	30PF 1 .47MF 2 .1MF 5	0% 5 0% 5 % 6	2KV 50V 53V 53V	D620 D624 D801 D802 D804	8-719-300-33	DIODE R2K DIODE RGP02-20EL-6394	
C870 1-137-120-91 C871 1-130-651-00 C872 1-124-907-11 C873 1-137-120-91 C875 1-102-038-00	FILM 0. FILM 0. ELECT 10 FILM 0.	.001MF 5 .001MF 2 0MF 2	7 1 2 1 3 2 5 7 6	53V 100V 50V 53V 500V	D808 D809 D811 A D812 D813	8-719-110-03 8-719-906-40 8-719-911-55	DIODE RD5.6ES-B1 DIODE RD7.5ES-B2 DIODE ERB44-06 DIODE UO5G DIODE UO5G	
C877 1-124-902-00 C878 1-164-232-11 C0603 1-161-742-00 C1501 1-163-141-00 C1502 1-124-903-11	ELECT 0. CERAMIC CHIP 0. CERAMIC 0. CERAMIC CHIP 0.	.47MF 2 .01MF 1 .0022MF 2	0% 5 0% 5 0% 4	50V 50V 100V 50V	D814 D815 D816 D818 D821	8-719-028-29 8-719-300-33 8-719-979-85 8-719-109-93 8-719-400-18	DIODE RU3OALFS1 DIODE RU-3AM DIODE EGP2OG DIODE RD6.2ES-B2 DIODE MA152WK	
C1504 1-124-480-11 C1505 1-124-911-11	ELECT 22 FILM 0.	70PF 5: 70MF 2: 20MF 2: .33MF 5:	X 5 0X 2 0X 5 X 6	50V 25V 50V 53V 00V	D822 D824 D825 D826 D827	8-719-976-64 8-719-400-18 8-719-400-18	DIODE MTZJ-30B DIODE RGP02-17 DIODE MA152WK DIODE MA152WK DIODE MTZJ-T-72-2.2A	
C1508 1-124-480-11 C1509 1-124-767-00 C1511 1-124-907-11 C1512 1-124-006-11 C1513 1-163-113-00	ELECT 2.	70MF 20 .2MF 20 0MF 20	0% 2 0% 5 0% 5 0% 2	25V 00V 00V 25V	D828 D830 D831 D832 D833	8-719-911-19 8-719-400-18 8-719-400-18 8-719-400-18 8-719-400-18	DIODE 1SS119 DIODE MA152WK DIODE MA152WK DIODE MA152WK DIODE MA152WK DIODE MA152WK	
C1514 1-164-004-11 C1515 1-164-004-11	CERAMIC CHIP O. CERAMIC CHIP O.			5V 5V	D1501 D1503 D1504	8-719-911-55	DIODE MA152WK DIODE UO5G DIODE MTZJ-3.6A	
<con< td=""><td>INECTOR&gt;</td><td></td><td></td><td></td><td></td><td>&lt;1C&gt;</td><td></td><td></td></con<>	INECTOR>					<1C>		
CN0004*1-508-786-00 CN0009*1-568-878-51 CN0010*1-568-877-51 CN0504*1-568-882-51 CN0505*1-568-880-51	PIN, CONNECTOR PIN, CONNECTOR PIN, CONNECTOR	3P 2P 7P	2P		1C602 1C603 1C801	8-749-923-44 8-759-987-16	IC TDA4605-3 IC TL431CLP IC SFH617G-1 IC LM393P IC LM393P	
CN0506*1-568-880-61 CN0519*1-568-878-51 CN0521*1-508-765-00 CN0522*1-564-512-11	PIN, CONNECTOR PIN. CONNECTOR	3P (5MM PITCH)	3P				IC MC78L12ACPRP IC TDA8179S	

The components identified by shading and mark  $\Delta$  are critical for safety. Replace only with part number specified.

Les composants identifies par une trame et une marque 🛦 sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.



REF.NO.	PART NO.					REMARK	REF.NO.	PART NO.	DESCRIPTION			REMARK
R809 R811 R812 R813 R814	1-216-097-00 1-216-033-00 1-216-061-00 1-216-065-00 1-216-091-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	100K 220 3.3K 4.7K 56K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W		R1512 R1513 R1514	1-215-887-00 1-216-371-00 1-216-065-00 1-216-049-00 1-216-065-00	METAL GLAZE	150 5% 1.5 5% 4.7K 5% 1K 5% 4.7K 5%	2W 2W 1/10 1/10 1/10	F W W
R815 R819 R820 R821 R822	1-216-081-00 1-247-755-11 1-216-097-00 1-216-481-11 1-216-481-11	METAL GLAZE CARBON METAL GLAZE METAL OXIDE METAL OXIDE	22K 1.8K 100K 1.2K 1.2K	5% 5% 5% 5%	1/10W 1/2W 1/10W 3W 3W		RV601	<var 1-241-628-11</var 	IABLE RESISTO			
R823 R824 R825 R826 R828	1-216-065-00 1-216-675-11 1-216-345-11 1-216-166-00 1-216-121-00	METAL GLAZE METAL CHIP METAL OXIDE METAL GLAZE METAL GLAZE	4.7K 10K 0.47 47 1M	0.50%	1/10W 1/10W 1W 1/8W 1/10W	F	¦ T801 ⊿	<pre><trai 1-437-090-00<="" 1-453-118-11="" 1-697-001-11="" pre=""></trai></pre>	TRANSFORMER	) ASSY, FLYBAC	K (UX-	2600 <b>A</b> 2)
R829 R830 R832 R833 R834	1-249-429-11 1-216-687-11 1-216-089-00 1-216-105-00 1-216-101-00	CARBON METAL CHIP METAL GLAZE METAL GLAZE METAL GLAZE	10K 33K 47K 220K 150K	5% 5%	1/10W 1/10W 1/10W			*A-1642-083-A 4-200-001-01	D BOARD, COM	PLETE (KV-E3		
R835 R836 R837 R838 R839	1-216-057-00 1-216-242-00 1-216-695-11 1-216-093-00 1-216-062-00	METAL GLAZE METAL GLAZE METAL CHIP METAL GLAZE METAL GLAZE	2.2K 68K 68K 68K 3.6K	5% 5% 0.50% 5% 5%	1/10W 1/8W 1/10W 1/10W 1/10W			4-200-001-01 4-201-023-01 *4-341-751-01 *4-341-752-01 4-812-134-00	SPACER, INSUI EYELET EYELET RIVET NYLON,			
R841 R842 R845 R846 R847	1-249-397-11 1-215-890-11 1-218-772-11 1-216-671-11 1-216-699-11	CARBON METAL OXIDE METAL CHIP METAL CHIP METAL CHIP	6.8K		1/10W 1/10W	F	C601 C605 C608 C612	<cap 1-124-903-11="" 1-124-910-11="" 1-130-202-00="" 1-137-046-11<="" td=""><td>ELECT Elect</td><td>0.022MF 47MF 1MF 0.0082MF</td><td>10% 20% 20% 10%</td><td>400V 50V 50V 400V</td></cap>	ELECT Elect	0.022MF 47MF 1MF 0.0082MF	10% 20% 20% 10%	400V 50V 50V 400V
R849 R851 R852 R853 R854	1-215-881-11 1-247-743-11 1-249-389-11 1-249-443-11 1-249-443-11	METAL OXIDE CARBON CARBON CARBON CARBON	15 220 4.7 0.47 0.47	5% 5% 5%	2W 1/2W 1/4W 1/4W 1/4W	ያ ዋ ዋ	C613 C614 C615 C616 C617	1-129-722-00 1-102-030-00 1-126-943-11 1-102-030-00 1-162-116-00	FILM CERAMIC ELECT	0.047MF 330PF 2200MF 330PF 680PF	10% 10% 20% 10% 10%	630V 500V 25V 500V 2KV
R855 R858 R864 R865 R866	1-202-818-00 1-249-425-11 1-216-685-11 1-247-901-11 1-216-103-00	SOLID CARBON METAL CHIP CARBON METAL GLAZE	1 K 4.7 K 27 K 820 K 180 K	5% 0.50% 5%	1/2W 1/4W 1/10W 1/4W 1/10W		C618 C619 C620 C621 C622 C623	1-162-134-11 1-102-030-00 1-164-299-11 1-124-347-00 1-128-320-11	CERAMIC CERAMIC CHIP ELECT ELECT	470PF 330PF 0.22MF 100MF 2200MF	10% 10% 10% 20% 20%	2KV 500V 25V 160V 16V
R867 R868 R871 R872 R873	1-216-113-00 1-249-431-11 1-249-493-11 1-249-393-11 1-249-393-11	METAL GLAZE CARBON CARBON CARBON CARBON	470K 15K 56K 10	5% 5% 5% 5%	1/10W 1/4W 1/2W 1/4W 1/4W	F	C623 C624 C625 C627 C628	1-102-030-00 1-126-800-51 1-126-800-51 1-137-124-91 1-124-910-11	CERAMIC	330PF 2200MF 2200MF 0.0047MF 47MF	10% 20% 20% 5%	500V 35V 35V 63V 50V
R876 R877 R878 R884 R889	1-249-421-11 1-215-880-00 1-215-883-11 1-216-693-11 1-216-089-00	CARBON METAL OXIDE METAL OXIDE METAL CHIP METAL GLAZE	2.2K 10 33 56K 47K	5% 5% 5% 0.50% 5%	1/4W 2W 2W 1/10W 1/10W	F F	C629 C631 C632 C633 C636	1-124-907-11 1-163-075-00 1-137-128-91 1-163-078-11 1-137-132-91	CERAMIC CHIP FILM CERAMIC CHIP FILM	0.022MF	20% 20% 10% 5% 10% 5%	50V 25V 63V 25V 63V
R893 R894 R895 R897 R898	1-215-878-00 1-216-264-00 1-216-079-00 1-216-089-00 1-216-262-00	METAL OXIDE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	33K 560K 18K 47K 470K	5% 5% 5% 5%	1W 1/8W 1/10W 1/10W 1/8W	F	C801 C803 C804 C805	1-126-233-11 1-137-116-11 1-164-695-11 1-137-130-91 1-124-902-00	FILM CERAMIC CHIP FILM ELECT	22MF 1MF	20% 5% 5% 5% 20%	50V 200V 50V 63V 50V
R1501 R1502 R1503 R1504 R1505	1-216-673-11 1-216-664-11 1-216-065-00 1-216-081-00 1-216-081-00	METAL CHIP METAL CHIP METAL GLAZE METAL GLAZE METAL GLAZE	8.2K 3.6K 4.7K 22K 22K	0.50%	1/10W 1/10W 1/10W 1/10W 1/10W		C806 C808 C809 C810 C812	1-124-907-11 1-162-114-00 1-124-808-51 1-163-001-11 1-162-318-11	CERAMIC ELECT CERAMIC CHIP CERAMIC	10MF 0.0047MF 10MF	20% 20% 10% 10%	50V 2KV 200V 50V 500V
R1506 R1508 R1509 R1510	1-216-057-00 1-216-684-11 1-216-089-00 1-249-382-11	METAL GLAZE METAL CHIP METAL GLAZE CARBON	2.2K 24K 47K 1.2	5% 0.50% 5% 5%	1/10W 1/10W 1/10W 1/4W		C813	1-108-704-11	MYLAR CERAMIC	0.1 <b>M</b> F	10 <b>%</b> 10 <b>%</b>	200V 500V



REF.NO. PART NO. DESCRIPTION REMARK | REF. NO. PART NO. DESCRIPTION REMARK 0.50% 1/10W 5% 1W 5% 1/8W 5% 1/10W I-216-675-11 I-216-342-11 METAL CHIP METAL OXIDE METAL GLAZE R824 10K <TRANSFORMER> 1W F 0.27 47 R825 T601 <u>A</u> 1-697-001-11 S.R.T (SMT89) T801 <u>A</u> 1-453-123-11 TRANSFORMER ASSY, FLYBACK (UX-2602A3) T803 1-437-090-00 HDT 1-216-166-00 R828 1-216-121-00 METAL GLAZE 1-249-429-11 R829 CARBON 1-413-059-00 TRANSFORMER, FERRITE (DFT) T895 R830 1-216-687-11 METAL CHIP 0.50% 1/10W 1-216-089-00 1-216-105-00 1-216-103-00 5% 5% 5% 5% R832 METAL GLAZE 47K 1/10W METAL GLAZE METAL GLAZE R833 1/10W 1/10W 220K 180K MISCELLANEOUS R835 1-216-057-00 METAL GLAZE 1/10W ********** R836 1-216-242-00 METAL GLAZE 1/8W 1-216-695-11 1-216-097-00 R837 METAL CHIP 68K 0.50% 1/10W <KV-E2531B, E2531D> 5% 5% 5% METAL GLAZE R838 100K 1/10W 1-216-062-00 1-249-397-11 R839 METAL GLAZE 3.6K 1/10W ⚠ 1-402-746-21 ⚠ 1-451-311-21 COIL, DEGAUSSING DEFLECTION YOKE (Y25FXA) R841 1/4W F 1-452-032-00 MAGNET, DISK: 10MM Ø MAGNET, ROTATABLE DISK: 15MM Ø SPEAKER (7.5X13CM) 5% 5% R842 1-215-890-11 METAL OXIDE 470 1-452-094-00 R845 1-216-107-00 METAL GLAZE 1/10W 270K 1-504-151-11 R846 1-216-671-11 METAL CHIP 0.50% 1/10W 6.8K 5% 5% 1-544-767-11 SPEAKER (13CM) 1-590-460-11 CORD, POWER (WITH CONNECTOR) (KV-E2531B) 1-590-501-11 CORD, POWER (WITH NOISE FILTER) R847 1-216-101-00 METAL GLAZE 150K 1/10W R849 1-215-881-11 METAL OXIDE 5% 5% 5% 5% R851 1/2W 1-247-743-11 1-249-389-11 CARBON F 220 R852 4.7 0.47 0.47 F CARBON 1/4W 1-696-406-11 CABLE, SPEAKER (WITH GROMMET) 1/4W 1/4W R853 1-249-443-11 CARBON 1-249-443-11 CARBON 1-696-407-II CABLE, SPEAKER (WITH GROMMET) 1-696-409-II CABLE, SPEAKER (WITH GROMMET) F 1-202-818-00 R855 SOLID 1/2W R858 CARBON V901 A.8-733-231-05 PICTURE TUBE (A59JWC61X) 1-249-425-11 5% 1/4W 1-216-101-00 1-247-901-11 METAL CHIP R864 150K 0.50% 1/10W R865 5% 5% 5% CARBON 820K 1/4W METAL GLAZE METAL GLAZE R866 1-216-103-00 1/10W 1808 <KV-E2931B, E2931D> 1-216-113-00 R867 470K 1/10W COIL, DEGAUSSING
DEFLECTION YOKE (Y29FXA)
MAGNET, DISK; 10MM 
MAGNET, ROTATABLE DISK; 15MM ⚠ 1-402-747-21 ⚠ 1-451-313-21 R868 CARBON 8.2K 1/4W 1-249-493-11 1-249-393-11 1-249-393-11 57 57 57 R871 CARBON 56K 1/2W 1/4W 1/4W 1-452-032-00 R872 CARBON 10 R873 CARRON 10 F NECK ASSY, PICTURE TUBE (NA-308) A 1-452-509-42 R876 1-249-421-11 2.2K CARBON 1/4W 1-504-151-11 SPEAKER (7.5X13CM)
1-544-767-11 SPEAKER (13CM)
1-590-460-11 CORD, POWER (WITH CONNECTOR) (KV-E2931B)
1-590-501-11 CORD, POWER (WITH NOISE FILTER) R877 METAL OXIDE 5% 2W 1-215-880-00 10 R878 1-215-883-11 METAL OXIDE 5% 2₩ 1-216-693-11 1-216-089-00 R884 METAL CHIP METAL GLAZE 56K 0.50% 1/10W R889 47K 5% 1/10W 1-215-878-00 R893 METAL OXIDE 33K 1-696-406-11 CABLE, SPEAKER (WITH GROMMET) 1-696-407-11 CABLE, SPEAKER (WITH GROMMET) 1-696-409-11 CABLE, SPEAKER (WITH GROMMET) RRQA 1-216-264-00 1-216-079-00 1/8W 1/10W 1/10W R895 METAL GLAZE 18K 1-216-089-00 R897 METAL GLAZE METAL GLAZE 47K 470K 1/8W V901 ▲ 8-733-831-05 PICTURE TUBE (A68JYL61X) 0.50% 1/10W R1501 1-216-673-11 METAL CHIP 8.2K 1-216-664-11 METAL CHIP 3.6K 0.50% 1/10W <KV-E3431B, E3431D> 5% 5% 1-216-065-00 R1503 METAL GLAZE 4.7K 1/10W R1504 1-216-081-00 METAL GLAZE 22K 1/10W 1-402-748-11 COIL. DEGAUSSING R1505 1-216-081-00 METAL GLAZE 22K A 1-451-315-11 DEFLECTION YOKE (Y34FXA) MAGNET, DISK; 10MM ø MAGNET, ROTATABLE DISK; 15MM ø R1506 1-216-057-00 METAL GLAZE 2.2K 5% 1/10W 1-452-032-00 1-452-094-00 R1508 METAL CHIP 24K 0.50% 1/10W 1-216-684-11 ₾ 1-452-579-11 NECK ASSY, PICTURE TUBE (NA322) METAL GLAZE 1-216-089-00 R1509 1/10W 1/4W F 47K 1.2 5% 5% 5% R1510 R1511 1-249-382-11 1-215-887-00 SPEAKER (7.5X13CM)
SPEAKER (13CM)
CORD, POWER (WITH CONNECTOR) (KV-E3431B)
CORD, POWER (WITH NOISE FILTER) CARBON 1-504-151-21 METAL OXIDE 1-544-767-11 **1**-590-460-11 150 1-216-371-00 METAL OXIDE R1513 1-216-065-00 5% METAL GLAZE 4.7K 1/10W R1514 1-216-049-00 METAL GLAZE 1/10W R1551 1-216-065-00 METAL GLAZE 4.7K 1-696-408-11 CABLE, SPEAKER (WITH GROMMET) 1-696-410-11 CABLE, SPEAKER (WITH GROMMET) 1/10W <VARIABLE RESISTOR> V901 Δ 8-733-723-05 PICTURE TUBE (A80JYV50X) RV601 1-241-628-11 RES, ADJ, CARBON 2.2K

Les composants identifies par une

trame et une marque 🛕 sont

Ne las remplacer que par une piece

critiques pour la securite

portant le numero specifie.

The components identified by

shading and mark A are critical

Replace only with part number

for safety.

specified.

The components identified by shading and mark  $\Delta$  are critical tor safety.

Replace only with part number

specified.

Les composants identifies par une trame et une marque 🛆 sont critiques pour la securite. Ne les remplacer que par une piece portant le numero specifie.

REF.NO. PART NO.	DESCRIPTION	REMARK	REF.NO.	PART NO.	DESCRIPTION			REI	MARK
<01			!			_			
L602 1-410-396-41 L603 1-410-396-41 L604 1-410-396-41 L605 1-459-442-00 L606 1-459-442-00	FERRITE BEAD INDUCTOR FERRITE BEAD INDUCTOR FERRITE BEAD INDUCTOR COLL (WITH CORE) COLL (WITH CORE)		JR505 JR506 JR507 JR508 JR509	1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00 1-216-296-00		0 0 0 0	5% 5% 5% 5%	1/8W 1/8W 1/8W 1/8W 1/8W	
L609 1-410-396-41 L622 1-412-533-21 L623 1-412-533-21 L802 1-408-947-00 L803 1-420-872-00	FERRITE BEAD INDUCTOR INDUCTOR 47UH INDUCTOR 47UH INDUCTOR 2.2MMH COIL, AIR CORE		JR510 JR511 JW208 R601 R602	1-216-296-00 1-216-296-00 1-217-587-00 1-216-353-00 1-216-065-00	METAL GLAZE METAL GLAZE RES, SHORT O. METAL OXIDE METAL GLAZE	0 01 2.2 4.7K	5% 5% 5%	1/8W 1/8W 1/4W 1W F 1/10W	
L808 1-412-549-11 L809 1-459-111-00 L809 1-459-111-00 L810 1-460-197-11 L811 1-412-519-11	FERRITE BEAD INDUCTOR FERRITE BEAD INDUCTOR FERRITE BEAD INDUCTOR COIL (WITH CORE) COIL (WITH CORE)  FERRITE BEAD INDUCTOR INDUCTOR 47UH INDUCTOR 47UH INDUCTOR 2.2MMH COIL, AIR CORE  INDUCTOR IMMH COIL, DRAM CORE (CDI) COIL, FERRITE (PMC) INDUCTOR 3.3UH INDUCTOR 3.3UH		R603 R604 R605 R606 R607	1-215-901-00 1-247-883-00 1-216-313-00 1-216-033-00 1-216-061-00	METAL OXIDE CARBON METAL GLAZE METAL GLAZE METAL GLAZE	220 3.3K	5% 5% 5% 5%	2W F 1/4W 1/10W 1/10W 1/10W	
L812	INDUCTOR 3.3UH INDUCTOR 3.3UH INDUCTOR 3.3UH HLT INDUCTOR 33UH INDUCTOR 10UH		R608 R609 R610 R611 R612	1-215-928-11 1-216-005-00 1-247-885-00 1-249-405-11 1-247-894-11	METAL OXIDE METAL GLAZE CARBON CARBON CARBON	68K 15 180K 100 430K	5% 5% 5% 5%	3W F 1/10W 1/4W 1/4W 1/4W	
L1503 1-412-531-31	INDUCTOR 33UH		R613 R614 R615 R617 R618	1-216-260-00 1-216-487-11 1-216-487-11 1-216-033-00 1-216-449-11	METAL GLAZE METAL OXIDE METAL GLAZE METAL GLAZE METAL OXIDE	12K 12K 220	5% 5% 5% 5%	1/8W 3W F 3W F 1/10W 2W F	
PS601 \( \Lambda \) 1-532-686-91 PS602 \( \Lambda \) 1-532-686-91 PS603 \( \Lambda \) 1-532-686-91 PS604 \( \Lambda \) 1-532-686-91	LINK, IC 2.7A LINK, IC 2.7A		R620 R621 R622 R623 R625	1-216-045-00 1-216-659-11 1-216-041-00 1-216-073-00 1-216-449-11	METAL GLAZE METAL CHIP METAL GLAZE METAL GLAZE METAL OXIDE	2.2K 470 10K	5% 0.50% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 2W F	
	NSISTOR>		R626 R627	1-216-635-11 1-249-398-11	METAL CHIP CARBON	220	0.50%	1/10W 1/4W F	
4010 0-123-210-22	TRANSISTOR BUZ91A-E3155 TRANSISTOR 2SB772-Q TRANSISTOR DTC114EK TRANSISTOR 2SA1162-G		R628 R629 R630	1-215-464-00 1-215-464-00 1-216-045-00	METAL METAL METAL GLAZE	62K 680	5% 1% 1% 5%	1/4W 1/4W 1/10W	
Q611     8-729-119-78       Q801     8-729-016-32       Q802     8-729-140-97       Q804     8-729-216-22       Q805     8-729-216-22	TRANSISTOR 2SC2785-HFE  TRANSISTOR 2SC4927-01 TRANSISTOR 2SB734-34 TRANSISTOR 2SA1162-G TRANSISTOR 2SA1162-G		R631 R633 R634 R635 R636	1-216-397-11 1-249-415-11 1-215-477-00 1-216-073-00 1-216-452-11	METAL OXIDE CARBON METAL METAL GLAZE METAL OXIDE	10K	5% 5% 1% 5% 5%	3W F 1/4W 1/4W 1/10W 2W F	
4806 8-729-011-00 4-382-854-11 4807 8-729-119-80 4812 8-729-120-28 4813 8-729-140-96	TRANSISTOR 25K1916-02F87  SCREW (M3X10), P, SW (+); Q806 TRANSISTOR 25C1623-L5L6 TRANSISTOR 25D1774-34		R637 R638 R639 R640 R651	1-216-113-00 1-216-073-00 1-216-089-00 1-207-905-00 1-216-069-00	METAL GLAZE METAL GLAZE METAL GLAZE WIREWOUND METAL GLAZE	10K 47K 0.27 6.8K	10% 5%	1/10W 1/10W 1/10W 2W F 1/10W	
Q818     8-729-216-22       Q1501     8-729-120-28       Q1502     8-729-901-01       Q1503     8-729-216-22       Q1504     8-729-901-01	TRANSISTOR 2SA1162-G  TRANSISTOR 2SC1623-L5L6 TRANSISTOR DTC144EK TRANSISTOR 2SA1162-G TRANSISTOR DTC144EK		R801 R802 R804 R805 R806	1-216-053-00 1-216-295-00 1-217-778-11 1-216-677-11 1-216-061-00	METAL GLAZE METAL GLAZE FUSIBLE METAL CHIP METAL GLAZE	0 1K 12K 3.3K	5% 5% 5% 0.50% 5%	1/10W	
<res JRO01 1-216-295-00</res 	SISTUR> METAL GLAZE 0 5% 1/100	u	R807 R808 R809 R811 R812	1-216-037-00 1-216-085-00 1-216-097-00 1-216-033-00 1-216-061-00	METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE METAL GLAZE	330 33K 100K 220 3.3K	5% 5% 5% 5%	1/10W 1/10W 1/10W 1/10W 1/10W	
JR002 1-216-295-00 JR003 1-216-295-00 JR004 1-216-295-00 JR005 1-216-295-00	METAL GLAZE 0 5% 1/100 METAL GLAZE 0 5% 1/100 METAL GLAZE 0 5% 1/100 METAL GLAZE 0 5% 1/100	id id id	R813 R814 R815 R819	1-216-065-00 1-216-091-00 1-216-081-00 1-247-755-11	METAL GLAZE METAL GLAZE METAL GLAZE CARBON	4.7K 56K 22K 1.8K	5% 5% 5%	1/10W 1/10W 1/10W 1/2W F	
JR500 1-216-296-00 JR501 1-216-296-00 JR502 1-216-296-00 JR503 1-216-296-00 JR504 1-216-296-00	METAL GLAZE 0 5% 1/8W		R820 R821 R822 R823	1-216-097-00 1-216-481-11 1-216-481-11 1-216-065-00	METAL GLAZE METAL OXIDE METAL OXIDE METAL GLAZE	100K 1.2K 1.2K	5% 5% 5%	1/10W 3W F 3W F 1/10W	

REF. NO. PART NO.

DESCRIPTION

REMARK

#### ACCESSORIES AND PACKING MATERIALS ***********

#### <KV-E2531B, E2531D>

A-1678-043-A A-1678-044-A

A-1678-047-A

BOX ASSY, WOOFER BOX COMPLETE ASSY (L) BOX COMPLETE ASSY (R) MANUAL, INSTRUCTION (FRENCH) (KV-E2531B) MANUAL, INSTRUCTION (GERMAN/ENGLISH/ 3-755-382-81 3-755-382-11

#### FRENCH/DUTCH/ITALIAN/PORTUGUESE)

(KV-E3531D)

*4-201-012-02 CUSHION (UPPER) (ASSY) *4-201-013-01 CUSHION (LOWER) (ASSY)

*4-201-013-01 CUSHION (LOWER) ( *4-201-015-04 INDIVIDUAL CARTON

*4-380-340-01 BAG, PROTECTION

#### <KV-E2931B, E2931D)

BOX COMPLETE ASSY (R) A-1678-040-A

A-1678-041-A BOX COMPLETE ASSY (L)
A-1678-043-A BOX COMPLETE ASSY (L)
A-1678-043-A BOX ASSY, WOOFER
3-755-382-81 MANUAL, INSTRUCTION (FRENCH) (KV-E2931B)
ANUAL, INSTRUCTION (GERMAN/ENGLISH/

#### FRENCH/DUTCH/ITALIAN/PORTUGUESE)

(KV-E2931D)

*4-200-036-02 INDIVIDUAL CARTON *4-200-041-02 CUSHION (UPPER) (ASSY) *4-200-042-01 CUSHION (LOWER) (ASSY)

*4-384-027-01 BAG, PROTECTION

### <KV-E3431B, E3431D>

BOX COMPLETE ASSY (RIGHT) BOX COMPLETE ASSY (LEFT) BOX ASSY, WOOFER CUSHION ASSY, FRONT SCREW (B) ASSY, ORNAMENTAL A-1678-038-A

A-1678-039-A A-1678-050-A *X-4200-082-1

X-4374-104-1

1-506-450-11 PLUG, AERIAL CONVERSION (KV-E3431B)

MANUAL, INSTRUCTION (FRENCH/GERMAN/ ITALIAN) (KV-B34 MANUAL, INSTRUCTION (GERMAN/ENGLISH/ FRENCH/DUTCH/ITALIAN) (KV-E34 CUSHION (UPPER) (ASSY) 4-200-975-51

(KV-E3431B) 4-200-975-11

(KV-E3431D)

*4-202-175-01

*4-202-178-01

INDIVIDUAL CARTON *4-202-179-01

*4-202-180-01 CUSHION (LOWER)

PALLET ***4-202-181-01** 

BAG, PROTECTION *****4-388-954-01

*4-396-077-01 JOINT

#### REMOTE COMMANDER

1-693-176-11 REMOTE COMMANDER (RM-830) (KV-E2531B,E2531D,E2931B,E2931D) 1-466-804-11 REMOTE COMMANDER (RM-832) (KV-E3431B,E3431D)

9-903-466-01 POCKET COVER (FOR RM-830, RM-832)